


Adjusting the Rear Seats

■ Adjusting the Second Row Passenger's Seats

Second row passenger's seats can be adjusted manually.

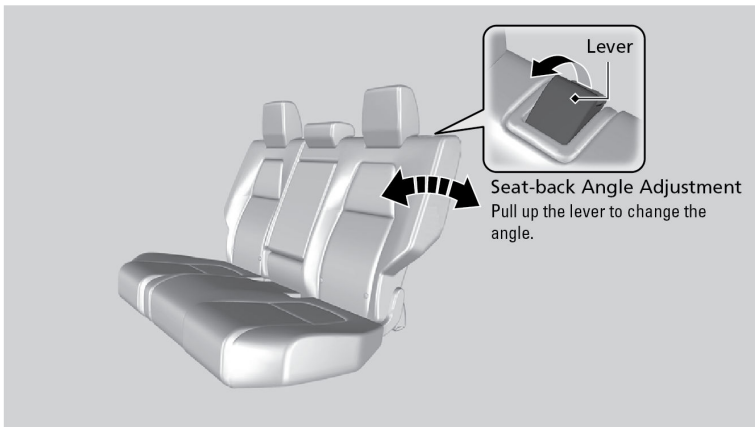

■ Folding Down the Rear Seats

The rear seat back(s) can be folded down to accommodate bulkier items in the cargo area.

To fold down the seat:

VEHICLE CONTROLS

1. Store the center seat belt.
2. Insert the latch plate into the slot on the side of the anchor buckle.
3. Retract the seat belt into the holder on the ceiling.
4. Lower the head restraint to its lowest position. Put the armrest back into the seat back.
5. From the rear seat side: Pull up the release lever and fold down the seat-back.

From the cargo area side: Pull the release lever and fold down the seat.

