




## Driver Information Interface


The driver information interface shows the odometer, trip meter, outside temperature indicator, and other gauges.

It also displays important messages such as warnings and other helpful information.

### Switching the Display

#### Main displays


Press the  (display/information) button, and then press  or  to change the display. Press **ENTER** to see detailed information.

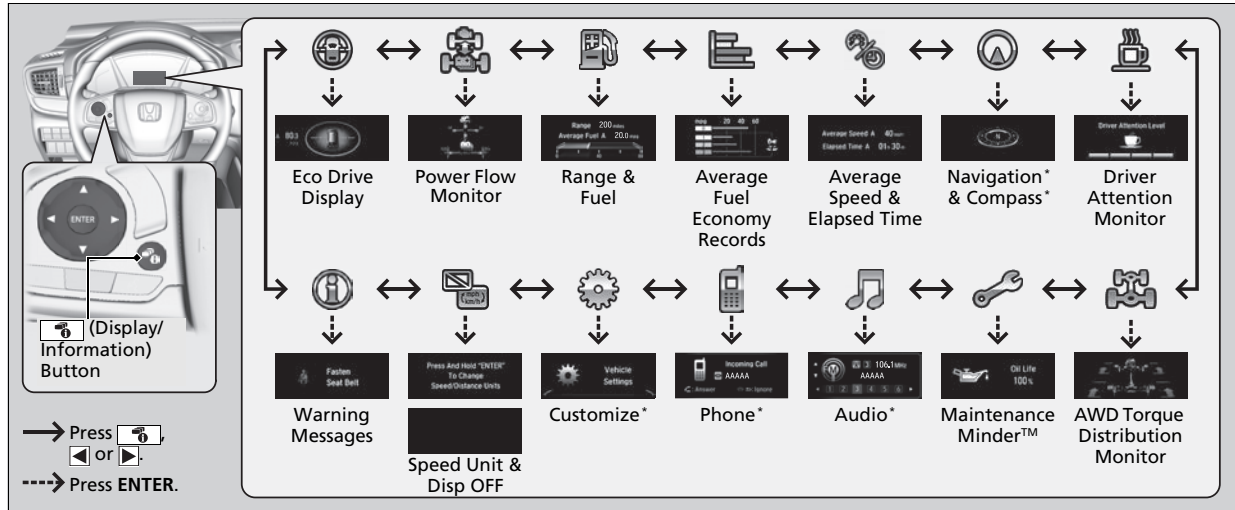

\* Not available on all models

### ■ Trip computer

Press the  (TRIP) knob to change display.

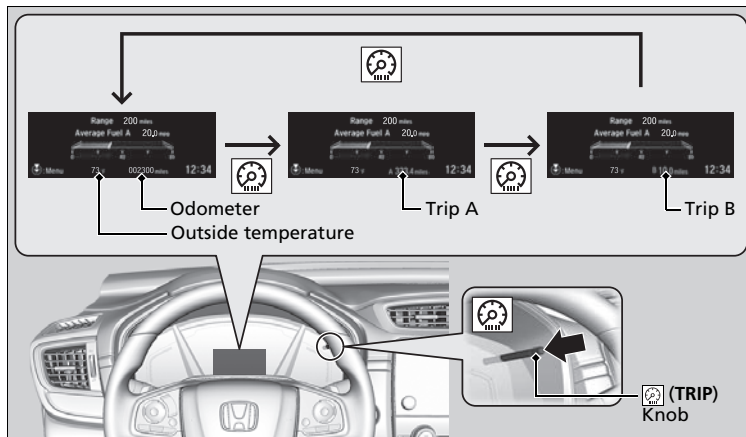


### ■ Odometer

Shows the total number of miles or kilometers that your vehicle has accumulated.


### ■ Trip Meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

### ▶▶ Trip Meter

Switch between trip meter A and trip meter B by pressing the  knob.

### ■ Resetting a trip meter

To reset a trip meter, display it, then press and hold the  knob. The trip meter is reset to **0.0**.

### ■ Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in mpg or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

### ■ Range

Shows the estimated distance you can travel on the remaining power and fuel. This estimated distance is based on the vehicle's current fuel economy.

### ■ Elapsed Time

Shows the time elapsed since Trip A or Trip B was reset.

### ■ Average Speed

Shows the average speed in mph or km/h since Trip A or Trip B was reset.

### ■ Instant Fuel Economy Gauge

Shows the instant fuel economy as a bar graph in mpg or l/100 km.

#### ⊗ Average Fuel Economy

You can change when to reset the average fuel economy.

#### ⊗ Elapsed Time

You can change when to reset the elapsed time.

#### ⊗ Average Speed

You can change when to reset the average speed.