


Smart Entry System*1

When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors, and open the tailgate without handling the transmitter.


■ Unlocking/Locking the Doors

To unlock: Grab the driver's door handle to unlock the driver's door. Grab the front passenger's door handle to unlock all the doors and the tailgate. You can customize this feature's behavior.

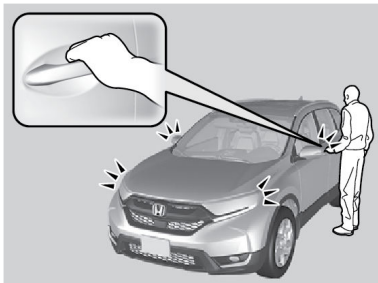

**1 - If equipped*

To lock: Press the door lock sensor on the front door or the tailgate.

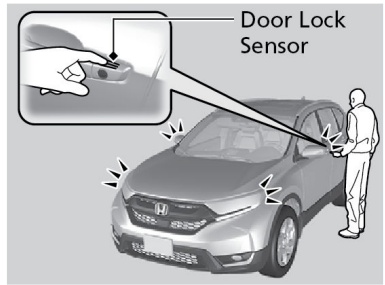


■ Walk Away Auto Lock®

When you walk away from the vehicle while carrying the remote transmitter, the doors and tailgate can automatically lock if the following conditions are met:

- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the tailgate are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps:

1. Exit the vehicle, close the door and stay near it. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

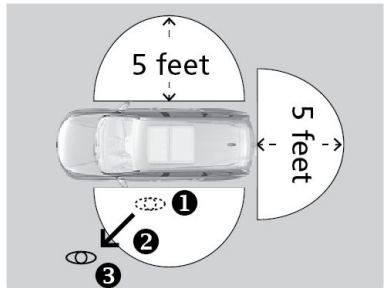


The auto lock function is set to OFF as the factory default setting. The auto lock function can be set to ON using the

audio/information screen or If you set the auto lock function to ON using the audio/information screen or the , only the remote transmitter that was used to unlock the driver's door prior to the setting change can activate auto lock. To turn on this feature, follow the steps below:

1. From the HOME screen, select Settings.
2. Select SYSTEM.
3. Select Vehicle.
4. Select Door/Window Setup.
5. Select Walk Away Auto Lock.


■ Customizing Door Lock and Unlock Settings

Customize the auto door lock and door unlock settings to your preference. Begin with the vehicle off.

Steps	Drive Lock Mode ²	Off
1	Apply the parking brake. Put the transmission into P .	
2	Close the driver's door.	Open the driver's door.
3	Turn the ignition switch to ON II ¹ .	
4	Take the transmission out of P with the brake pedal depressed.	—
5	<p>Press and hold the right side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear a click twice.</p> 	<p>Press and hold the right side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear one click.</p>
6	Put the transmission into P .	—
7	<p>Turn the ignition switch to ACCESSORY I¹ within 20 seconds.</p> <p>► Customization is completed.</p>	

¹: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

²: Default setting

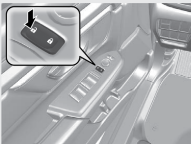Steps	Driver's Door Open Mode ²	Park Unlock Mode	Off
1	Apply the parking brake. Put the transmission into P .		
2	Close the driver's door.		Open the driver's door.
3	Turn the ignition switch to ON II ¹ .		
4	Take the transmission out of P with the brake pedal depressed.	—	
5	<p>Press and hold the left side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear a click twice.</p> 		
6	Put the transmission into P .	—	
7	<p>Turn the ignition switch to ACCESSORY I¹ within 20 seconds.</p> <p>► Customization is completed.</p>		

¹: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

²: Default setting

Models with Color Audio

1. Select **Vehicle Settings**.
2. Select **Door Setup**.
3. Select **Auto Door Lock** or **Auto Door Unlock** to customize.

Models with Display Audio

1. From the HOME screen, select **Settings**.
2. Select **System**.

3. Select **Vehicle**.
4. Select **Door/Window Setup**.
5. Select **Auto Door Lock** or **Auto Door Unlock** to customize.


Door Operation

Use several methods to lock or unlock the doors.

■ Using the Lock Tab

To unlock: When you unlock either front door using the lock tab, the specific door (driver's or passenger's) unlocks.


To lock: When you lock the door using the lock tab on the driver's door, all the other doors and the tailgate lock at the same time. When you lock the door using the lock tab on the front passenger's door, only that door locks.

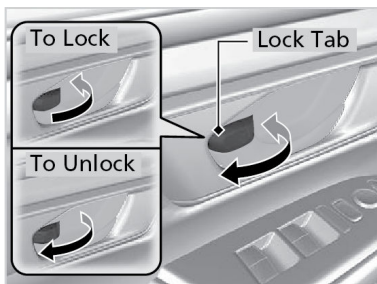

■ Using the Front Door Inner Handle

Pull the front door inner handle. The door unlocks and opens in one motion. Unlocking and opening the driver's door from the inner handle unlocks all other doors.

Do not pull a front door inner handle while the vehicle is moving.

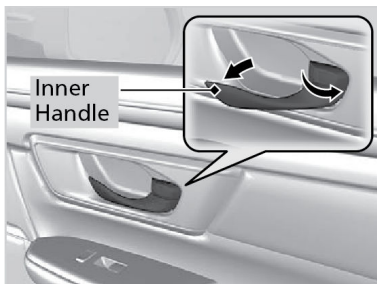

■ Using the Master Door Lock Switch

To unlock: Press the unlock side of the switch to unlock all doors and the tailgate.

To lock: Press the lock side of the switch to lock all doors and the tailgate.

