

amazonbasics



AmazonBasics 6-Sheet Cross Cut Paper and Credit Card Shredder

Instruction Manual

B07FY6GTGZ

Instruction Manual

AmazonBasics 6-Sheet Cross Cut Paper and Credit Card Shredder

CONTENTS

Make sure that the package contains the following:



Shredder



Quick Guide



Instruction Manual

⚠ Warning: *Read Safety Instructions Before Using!*



Read all instructions carefully before installing or using the shredder.



Do not spray or keep any aerosol products in or around the shredder.



Avoid touching the feed slot with hands.



Keep loose clothing or jewelry away from the feed slot.



Product is not intended for use by children (product is not a toy).



Avoid getting hair near the feed slot.



Do not insert foreign objects into the feed slot.

- **Always turn the shredder off and unplug the power cord from the AC outlet when not in use, before cleaning, moving, or emptying the waste basket.**
- **RISK OF FIRE. Never use any petroleum based or flammable oils or lubricants in or around the machine as some oils can combust causing serious injury.**
- NEVER dispose of flammable chemicals OR materials that have come into contact with flammable chemicals (for example, nail polish, acetone and gasoline) in the shredder basket.
- **Never shred large paper clips, window or insulated envelopes, continuous forms, newsprint, bound pages (for example: notepads, checkbooks, magazines, etc...), transparencies, laminated documents, cardboard, any items with adhesives, hard materials or plastic (except Credit Cards).**
- A socket-outlet should be near the equipment and be easily accessible.
- Never let the waste basket become full. This will lead to shredded material being pulled back up into the shredder and cause jams.
- Never place the shredder near water or any heat source.
- Do not use the shredder if the power cord is damaged in any way.
- Do not attempt to service this product yourself as doing so may expose you to sharp cutting blades and/or electricity and will void the manufacturer's warranty.
- Never try to clean or clear the shredder blade.
- Never shred beyond the specified sheet capacity. This may result in extensive damage to the Paper Shredder.

Operating Instructions

- Warning
- Installation
- Operation
- Maintenance
- Troubleshooting

Sheet Capacity	5 sheets of 80 gsm paper* 6 sheets of 70 gsm paper*
Paper Shred Size	7/32 in. x 1 27/32 in. pieces 5.6 mm x 47 mm pieces)
Paper Entry Width	220 mm
Credit Card Capacity	1 at a time
Duty Cycle	2 min. on / 30 min. off
Voltage	220-240V/50-60Hz 1.0A

* One Folded Sheet of Paper equals two (2) Sheets of Paper

Heavier paper, humidity or other than rated voltage may reduce shredding capacity.

Installation

1. This model includes a built-in safety interlock mechanism, which requires the shredder to be correctly mounted on to the included wastebasket. **THE SHREDDER WILL NOT OPERATE OR FUNCTION PROPERLY UNLESS IT IS PROPERLY MOUNTED AS PICTURED. (FIGURE 1)**
2. A socket-outlet should be near the equipment and be easily accessible.
3. Connect the power cord to any standard 220-240 volt wall AC outlet.

⚠ Caution:

Crosscut shredders have very sharp exposed blades on the underside. Care should be taken while mounting the shredder on the wastebasket.



FIGURE 1

Operation



1 Control Switch

- Using the switch located on the unit, select one of the following settings by sliding the switch either left or right. (FIGURE 2)



FIGURE 2

I AUTO / ON:

This setting allows the shredder to be automatically started by inserting paper into the feed slot. Always feed the paper as straight as possible. When the paper has passed through, the shredder will automatically stop.

O OFF:

This setting turns off all features of the shredder. For safety reasons, we recommend that you leave the shredder in the “Off” position whenever the shredder is unattended or not in use.

R REV (REVERSE):

In the unlikely event of a paper jam, the reverse setting can be used to help clear the cutters of paper that did not pass through. Never attempt to clear a jam by using the reverse function until you have emptied the wastebasket.

CONTINUED NEXT PAGE

Operation

② LED Status Indicators:



**Ready (Power On) /
Overheat**

 
• Ready (Power On):

The Green LED light indicates the shredder is “On” and ready to operate when paper is inserted.

• Overheat:

The Red LED light indicates that the shredder has shred continuously beyond the maximum running time has overheated and, the unit will automatically shut off. If this happens, switch the shredder off for 30 minutes or longer before resuming normal operation.

③ Paper / Credit Card Entry:

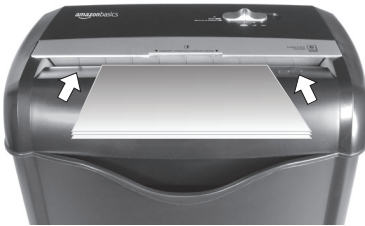

- ① Make sure you do not exceed sheet count per pass (6 sheets max). Insert paper as straight as possible into feed slot and release.



- ② Insert one credit card at a time into the middle of the feed slot.

■ Note:

- Always turn off and unplug the shredder when not in use.
- This shredder will shred staples and small paper clips. It is recommended that you remove paper clips whenever possible to extend the lifespan of your shredder.
- Only shred credit cards by feeding them vertically into the middle of the feed slot, releasing when shredding begins. Never feed more than one credit card at a time.
- Overfeeding the shredder: Shredding beyond the specified sheet capacity can result in extensive damage to the shredder. Overfeeding will strain the machine and quickly wear and break the cutting blades and internal components.
- Overheating with extended use: In the event that the shredder has shred continuously beyond the maximum running time and overheating, the unit will automatically shut off. If this happens, switch the shredder off for 30 minutes or longer before resuming normal operation.

Maintenance

■ **Warning: Failure to maintain the shredder as per instructions provided herein will render the manufacturer's warranty void.**

■ Oil the shredder blades every month with basic vegetable, cooking oil or shredder oil. Follow below outlined oiling procedure (FIGURE 3). It helps to keep the shredder blades operating well over many years of use.



FIGURE 3

◀ Oiling procedure:

1. Turn off shredder.
2. Apply shredder oil across feed slot.
3. Turn shredder in reverse mode for 3-5 seconds.

Note: Shredder oil is NOT included.



⚠ Caution:

- Do not spray or keep any aerosol products in or around shredder.
- DO NOT USE CANNED AIR ON SHREDDER.

 
■ Cleaning:

- Never use anything flammable to clean the shredder. This may result in serious injury or damage to the product.
- ALWAYS UNPLUG THE SHREDDER BEFORE CLEANING!
- Only clean the shredder by carefully wiping the unit with a dry soft cloth or towel.
- Do not clean or immerse shredder in water. Having the unit wet may result in damage or malfunction to the electrical components. If the shredder happens to get wet, be sure to completely dry the unit immediately with a cloth or towel, before using.

Troubleshooting

If there is a problem with your shredder, check below for the symptoms and steps to resolve. If you continue to have problems, contact customer support. **DO NOT ATTEMPT TO REPAIR BY OPENING THE SHREDDER HEAD. This will completely render the manufacturer's warranty void.**

■ The shredder does not work at all.

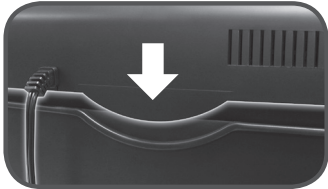- 1) Make sure the unit is **plugged in** and that the outlet is in good working order.
- 2) **Overheating with extended use:** In the event that the shredder has shred continuously beyond the maximum running time and overheated, the unit will automatically shut off. If this happens, **switch the shredder off for 30 minutes** or longer before resuming normal operation.
- 3) Make sure the shredder head is correctly seated onto the included wastebasket, with all the words and icons facing towards you. The head unit is particularly designed to work only with the integrated wastebasket. The shredder is equipped with a safety interlocking mechanism, which prevents the shredder from working when the head unit is lifted, removed, or accidentally knocked over. The shredder will not function unless the head unit is properly mounted as pictured.
- 4) If using a plastic bag to line the wastebasket, please remove it. This may cause the shredder not to operate properly.
- 5) The activation sensor of the shredder is located near the center of the feed slot. Be sure to feed directly into the center area to activate the machine (especially applies to smaller pieces of paper or credit cards).

■ The shredder runs in “Rev (Reverse)” mode but not in “Auto (On)” mode.

While in “Auto” mode, the motor will not start running until paper is inserted into the feed slot. Set the unit to “Auto” and insert paper to shred. The sensor that activates the shredder in Auto mode is located directly in the center of the slot. If the paper you are inserting is narrow, it may not be activating the optical sensor. It is also possible that the feed slot has become blocked with paper. Insert an index card or any rigid sheet of cardstock (old greeting card or folded file folder), directly in the center of the feed slot, while applying force to help push the jammed paper through. This will usually clear any paper blockage.

■ How to clear a paper jam in the shredder.

 
- 1) Switch the shredder to Reverse (REV) mode. While in Reverse, the shredder will back up and loosen the jammed paper. If required, you may need to tug and remove several sheets

CONTINUED NEXT PAGE

Troubleshooting


to effectively clear the machine. When jammed paper is loosened or removed, switch back to the Auto-On mode to continue shredding. Repeat above steps if needed.

- 2) With stubborn situations where the reverse function does not help, you may loosen the jammed paper with shredder oil (cooking oil is acceptable, **DO NOT USE AEROSOL**). Start by drizzling oil into the feed slot where the paper is jammed. Let it soak for about 30 minutes to completely saturate. Return the shredder back to **Auto-On mode**. **If required, an index card or a rigid sheet of cardstock (old greeting card or folded file folder) can be fed into the shredder to help push the jammed paper through.**

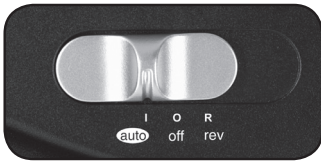

▲ *Power switch in auto position*

 *Use thick paper stock or greeting card ►
to push the jam through*

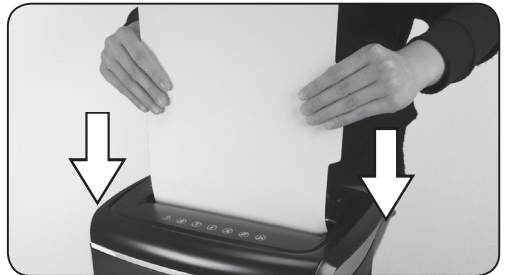

■ **The shredder is constantly running while in “Auto (On)” mode.**

- 1) It is possible that the activation sensor, which starts the shredder, has become blocked with paper. Insert an index card or any rigid sheet of cardstock (old greeting card or folded file folder), directly in the center of the feed slot, while applying force to help push the jammed paper through. This will usually clear any paper blocking the activation sensor and feed slot.
- 2) The activation sensor is being triggered by dust, debris, or oil. A cotton swab may be used to clean the sensor. **DO NOT USE CANNED AIR**. The activation sensor of the shredder is located around the center of the feed slot.

amazonbasics

Amazon.in/AmazonBasics

2018. All rights reserved. Amazon and the AmazonBasics logo are trademarks of Amazon.com, Inc. or its affiliates. All other trademarks are the property of their respective owners.