

TOYOTA RAV4 SERIES MAINTENANCE SCHEDULE

Maintenance Operations:

I = Inspect, correct, clean or replace as necessary
 R = Replace, change or lubricate
 L = Lubricate
 T = Tighten to specified torque

| SERVICE INTERVAL Odometer reading or months, whichever comes first | | Odometer Reading | | | | | | | | Months | |
|---|--|--|----------|----------|----------|----------|----------|----------|----------|--------------|----------|
| | | 10 6 | 20 12 | 30 18 | 40 24 | 50 30 | 60 36 | 70 42 | 80 48 | | |
| BASIC ENGINE COMPONENTS | | | | | | | | | | | |
| 1 | Engine Oil | R | R | R | R | R | R | R | R | 12 | |
| 2 | Engine Oil Filter | R | R | R | R | R | R | R | R | 12 | |
| 3 | Cooling and Heater system <<See note 1.>> | | | | I | | | | I | 24 | |
| 4 | Engine coolant <<See note 2.>> | | | | I | | | | I | - | |
| 5 | Power control unit coolant <<See note 3.>> | | | | I | | | | I | - | |
| 6 | Exhaust pipes and mountings | | I | | | | I | | I | 12 | |
| IGNITION SYSTEM | | | | | | | | | | | |
| 7 | Spark Plugs | Replace every 100000 kms (60000 miles) | | | | | | | | - | |
| 8 | 12-volt battery | I | I | I | I | I | I | I | I | 12 | |
| FUEL AND EMISSION CONTROL SYSTEMS | | | | | | | | | | | |
| 9 | Fuel filter <<See note 4.>> | Except for Brazil For Brazil | | | | | | R | | R | 96 72 |
| 10 | Valve mechanism <<See notes 5 and 6.>> | Add injector cleaner to the fuel tank every 10,000km (6,000 miles) | | | | | | | | - | |
| 11 | Fuel injection system <<See notes 6 and 7.>> | Add injector cleaner to the fuel tank every 10,000km (6,000 miles) | | | | | | | | - | |
| 12 | Air cleaner filter | | I | | R | | I | | R | I:24 R:48 | |
| 13 | Fuel tank cap, fuel lines, connections and fuel vapour control valve <<See note 1.>> | | | | I | | | | I | 24 | |
| 14 | Charcoal canister | | | | I | | | | I | 24 | |
| CHASSIS AND BODY | | | | | | | | | | | |
| 15 | Brake pedal and parking brake <<See note 8.>> | I | I | I | I | I | I | I | I | 6 | |
| 16 | Brake pads and discs | I | I | I | I | I | I | I | I | 6 | |
| 17 | Brake Fluid | I | I | I | R | I | I | I | R | I:6 R:24 | |
| 18 | Brake pipes and hoses | | I | | I | | I | | I | 12 | |
| 19 | Steering wheel, linkage and steering gear box | | I | | I | | I | | I | 12 | |
| 20 | Drive shaft boots | | I | | I | | I | | I | 24 | |
| 21 | Suspension ball joints and dust covers | | I | | I | | I | | I | 12 | |
| 22 | Transmission fluid (including front differential) | | | | I | | | | I | 24 | |
| 23 | Rear differential oil (Integrated in rear transaxle) (4WD models) | | | | I | | | | I | 24 | |
| 24 | Front and rear suspensions | | I | | I | | I | | I | 12 | |
| 25 | Tyres and inflation pressure | I | I | I | I | I | I | I | I | 6 | |
| 26 | Lights, horn, wipers and washers | I | I | I | I | I | I | I | I | 6 | |
| 27 | Air conditioning filter | | R | | R | | R | | R | - | |

Notes

- After 80,000km (50,000 miles) or 48 months inspection, inspect every 20,000km (12,000 miles) or 12 months.
- First replace at 160,000km (100,000 miles), then replace every 80,000km (50,000 miles).
- First replace at 240,000km (100,000 miles), then replace every 80,000km (50,000 miles).
- Including the filter in fuel tank.
- For the Philippines.
- Toyota genuine fuel injector cleaner or equivalent.
- For Belize, Costa Rica, the Dominican Republic, Guatemala, Honduras, Nicaragua, Panama, El Salvador, the Bahamas, Barbados, Graqdnd Cayman, Antigua and Barbuda, Grenada, Saint Lucia, Saint Vincent and the Grenadines, Guyana, Aruba, Curacao, Suriname, Peru, Saint Martin, Mauritius, Seychelles, Egypt, Iran, Iraq, Bahrain, Yemen, Saudi Arabia, Bangladesh, Bhutan, Pakistan, Mongolia, Maco and Tahiti only.
- Parking brake inspection is not necessary.

Source: Rav4 Owner's Manual, Publication No: OM42E00E, Part Number: 01999-42E00