

# Owner's Manual


Quick Reference Guide.



Movement that inspires

## Air Bag / Child Restraint System


- 1 Driver's front air bag
- 2 Passenger's front air bag
- 3 Side air bag\*
- 4 Curtain air bag\*
- 5 Driver's knee air bag\*
- 6 Driver's centre air bag\* (not shown)

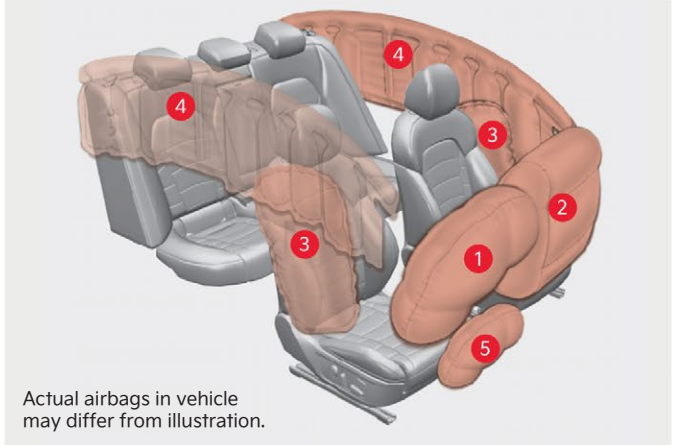

\*If equipped.



Installing a child restraint system with a lap/shoulder belt [3].

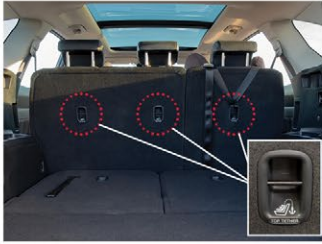

Securing a child restraint system seat with "Top-tether Anchorage" system.

Refer to Owner's Manual [3].



Never place a rear facing child restraint in the front passenger seat, unless the passenger-side air bag is deactivated. An inflated passenger-side air bag could impact the rear-facing child restraint and kill the child.



Securing a child restraint system with "ISOFIX anchorage system" and "Toplevel anchorage" system [3]. System [3].



ISOFIX anchorages are located between the seatback and the seat cushion of the rear seat left and right outboard seating positions, indicated by the symbols.

© ISOFIX Anchor Position Indicator (Type A-, Type B-)

© ISOFIX Anchor

















## Warning and Indicator Lights

\*If equipped.

SYMBOL	COLOUR	NAME OF SYMBOL
	Red	Air bag warning light
	Red	Seat belt warning light
	Red	Parking brake & brake fluid warning light
	Yellow/Red	Electronic brake force distribution (EBD) system warning light
	Red	Electronic power steering (EPS) warning light
	Red	Charging system warning light
	Red	Engine oil pressure warning light
	Red	Fuel filter warning light (Diesel engine)
	Yellow	Anti-lock brake system (ABS) warning light
	Yellow	Malfunction indicator lamp (MIL)
	Yellow	Low fuel level warning light
	Yellow	Low tyre pressure warning light*
	Yellow	All wheel drive (AWD) warning light
	Yellow	Forward collision-avoidance assist (FCA) warning light*
	Yellow	LED headlamp warning light*
<b>EPB</b>	Yellow	Electronic parking brake (EPB) warning light*
	Yellow	Exhaust system (DPF) warning light (Diesel engine) Exhaust system (GPF) warning light (Petrol Engine)
	Yellow	SCR warning light (Diesel engine)
	Yellow	Master warning light
	Yellow	Electronic stability control (ESC) indicator light

## Warning and Indicator Lights

\*If equipped.

SYMBOL	COLOUR	NAME OF SYMBOL
	Yellow	Electronic stability control (ESC) OFF indicator light
	Yellow/Green	Auto stop indicator light*
	Yellow	Immobiliser indicator light*
	Yellow	Rear fog indicator light*
	Yellow	Glow indicator light (Diesel engine)
	Green	Turn signal indicator light
	Green	Low beam indicator light*
	Green	Light ON indicator light
	Green	Front fog indicator light*
	Green	High beam assist indicator*
	Blue	High beam indicator light
	Yellow	Dynamic bending light (DBL) warning light*
	White	Icy road warning light*
	Yellow/Green	Auto stop indicator*
	Green/Yellow/ White	AUTO HOLD indicator light*
	Green/Yellow/ White	LKA (Lane keeping assist) indicator*
	Green/Yellow	Downhill brake control (DBC) indicator light*
	Green	Cruise indicator light
	Yellow or Red	SPORT mode indicator light
	Green	ECO mode indicator light

Colours may vary depending on the model. Please refer to the Warning and Indicator lights section of your owner's manual for more information.



## Lighting Control / Tilt & Telescopic Steering / Cruise Control (CC)\*




### Lighting control [4]

- 1 OFF position
- 2 Auto light position
- 3 Parking light position
- 4 Headlight position



### Auto light [4]

When the light switch is in the AUTO light position, the taillights and headlights will be turned on or off automatically depending on the amount of light outside the vehicle.

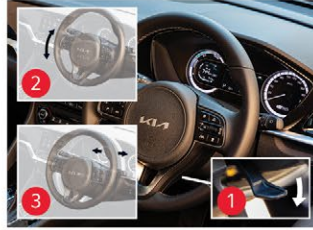

### Tilt & telescopic steering [4]

Pull down the lock release lever (1), adjust the steering wheel to the desired angle (2) and height (3), then pull up the lock-release lever to lock the steering wheel in place. Be sure to adjust the steering wheel to the desired position before driving.



### Cruise control (CC)\* [5]

- 1 Cruise indicator
- 2 Cruise set indicator



### To set cruise control speed:

- 1 Accelerate to the desired speed, which must be more than approximately 30km/h.
- 2 Press driving assist button on the steering wheel, to turn the function on. The cruise indicator light will illuminate.

The accelerator pedal may be released at this point. The desired speed will automatically be maintained.



### To increase cruise control set speed:

Follow either of these procedures:

- Push the + switch up and release it immediately. The set speed will increase by 1km/h each time the switch is operated in this manner.
- Push the + switch up and hold it whilst monitoring the set speed on the cluster. The set speed will increase to the nearest multiple of ten at first and then increase by 10km/h each time the switch is operated in this manner. Release the switch when the desired speed is shown and the vehicle will accelerate to that speed.



### To decrease the cruising speed:

Follow either of these procedures:

- Push the - switch down and release it immediately. The set speed will decrease by 1km/h each time the switch is operated in this manner.
- Push the - switch down and hold it whilst monitoring the set speed on the cluster. The set speed will decrease to the nearest multiple of ten at first and then decrease by 10km/h each time the switch is operated in this manner. Release the switch at the speed you want to maintain.


# What to do in an emergency

## Towing / Changing Tyres

(Example vehicle shown. Refer to your owner's manual for specifics on your vehicle)

When towing your vehicle in an emergency without wheel dollies:

- 1 Set the ignition switch or the **ENGINE START/STOP** button to the ACC position.
- 2 Shift the gear to **N** (Neutral).
- 3 Release the parking brake.

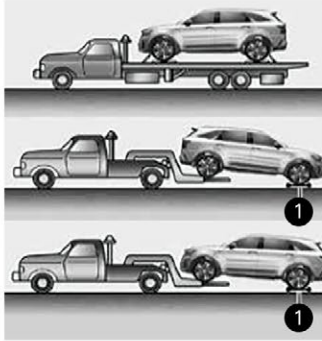

When being towed by a commercial tow truck and wheel dollies are not used, the front of the vehicle should always be lifted, not the rear.



### Emergency towing [7]


If towing is necessary, it is recommended to contact an authorised Kia dealer or a commercial tow truck service.



### Changing tyres [7]

- 1 Park on a level surface and apply the parking brake firmly.
- 2 Shift the gear to P (Park), apply the parking brake, and turn the engine OFF.
- 3 Activate the hazard warning flasher.
- 4 Remove the wheel lug nut wrench, jack, jack handle, and spare tyre from the vehicle.
- 5 Block both the front and rear of the wheel that is diagonally opposite the jack position.
- 6 Loosen the wheel lug nuts anti-clockwise one turn each, but do not remove any nut until the tyre has been raised off the ground.
- 7 Place the jack at the front **1** or rear **2** jacking position closest to the tyre you are changing.
- 8 Insert the jack handle into the jack and turn it clockwise, raising the vehicle until the tyre just clears the ground. This measurement is approximately 30 mm.
- 9 Loosen the wheel nuts and remove them with your fingers.
- 10 To reinstall the wheel, hold it on the studs, put the wheel nuts on the studs and tighten them finger tight. Jiggle the tyre to be sure it is completely seated, then tighten the nuts as much as possible with your fingers again.
- 11 Lower the vehicle to the ground by turning the wheel nut wrench anti-clockwise.

## In Case of Remote Key Failure

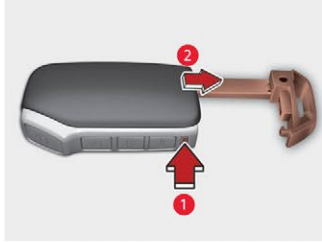

### Starting the engine [6]

- If the battery is weak or the smart key does not work correctly, you can start the engine by pressing the engine start/stop button with the smart key.
- When the stop lamp fuse is blown, you cannot start the engine normally.
- Replace the fuse with a new one. If it is not possible, you can start the engine by pressing the engine start/stop button for 10 seconds whilst it is in the ACC position.
- The engine can start without depressing the brake pedal. But for your safety always depress the brake and clutch pedal before starting the engine.

### Mechanical Key (Smart Key)

#### To pull out the mechanical key:

- Press and hold the release button **1** and remove the mechanical key **2**.

#### To reinstall the mechanical key:

- Put the key into the hole and push it until a click sound is heard.

### Mechanical key

#### To unfold the key:

- Press the release button then the key will unfold automatically.

#### To fold the key:

- Fold the key manually while pressing the release button.



## WARNING

This product contains a coin battery.

If swallowed, a lithium coin battery can cause severe or fatal injuries within 2 hours.

The battery is hazardous. Keep out of reach of children.

If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

## Fuel Filler Access



### Opening the fuel filler door [4]

- 1 Turn the engine off.
- 2 Ensure the driver's door is unlocked.
- 3 **Electronic Remote** **A**
  - Push button on dashboard to release fuel filler door.
- Manual Remote** **B**
  - Pull lever located in driver's footwell to release fuel filler door.
- External Opening** **C**
  - Push the fuel filler door near the 3 o'clock position.

- 4 Pull the fuel filler door **1** out to fully open.
- 5 To remove the fuel tank cap **2**, turn it counterclockwise. You may hear a hissing noise as the pressure inside the tank equalizes.
- 6 Place the cap on the fuel filler door.

### Closing the fuel filler door

- 1 To install the fuel tank cap, turn it clockwise until it "clicks".
- 2 Close the fuel filler door by pressing the 3 o'clock position of the door.
- 3 Make the vehicle door to LOCK position and the fuel filler door completely closed in order to lock the fuel filler door. If the fuel filler door is not completely closed, the fuel filler door will not be locked.



## Maintenance



### Checking the engine oil level [7]

- 1 Be sure the vehicle is on level ground.
- 2 Start the engine and allow it to reach normal operating temperature.
- 3 Turn the engine off and wait for a few minutes (about 8 minutes) for the oil to return to the oil pan.
- 4 Pull the dipstick out, wipe it clean, and re-insert it fully.
- 5 Pull the dipstick out again and check the level. The level should be between F and L. Do not overfill.
  - Use a funnel to help prevent oil from being spilled on engine components.
  - Use only the specified engine oil. [8]

### Checking the washer fluid level [7]

- Check the fluid level and add fluid if necessary.
- Plain water may be used if washer fluid is not available. However, use washer solvent with antifreeze characteristics in cold climates to prevent freezing.



### Checking the engine coolant level [7]

- Check the condition and connections of all cooling system hoses and heater hoses. Replace any swollen or deteriorated hoses.
- The coolant level should be filled between MAX and MIN (F and L) marks on the side of the coolant reservoir when the engine is cool.
- When adding coolant, use only deionised water or soft water for your vehicle and never mix hard water in the coolant filled at the factory.
- The engine in your vehicle has aluminum engine parts and must be protected by an ethylene-glycol with phosphate based coolant to prevent corrosion and freezing.
- DO NOT USE alcohol or methanol coolant or mix them with the specified coolant.
- Do not use a solution that contains more than 60% antifreeze or less than 35% antifreeze, which would reduce the effectiveness of the solution.
- If frequent additions are required, we recommend that the system be inspected by an authorised Kia dealer.



Scan, scroll and  
select to view the  
full owner's manual

[www.kia.com/au/owners/manual.html](http://www.kia.com/au/owners/manual.html)

1. Scan the QR code
2. Select your Kia model
3. Scroll and select manual version
4. Press the download button
5. Open your PDF once download is complete

Kia recommends you download and/or print a copy of the Owners' Manual if travelling to areas where internet access may be limited.





## WARNING

In Western Australia, the Road Traffic Code 2000 prohibits a person from driving a vehicle unless the person is in such a position behind the steering wheel that they have full control over the vehicle. Use of the Remote Smart Park Assist Feature by a driver outside the vehicle will not comply with this rule. Kia does not take responsibility for any use of the Remote Smart Park Assist system which may constitute a breach of any traffic laws. To the extent permitted by law, Kia will not be responsible for any prosecution, action, claims or demands arising from any breach of any traffic laws that arise as a result of use of the Remote Smart Park Assist feature.



Movement that inspires

Find your nearest Kia dealer  [www.kia.com/au/](http://www.kia.com/au/) or  131 KIA/131 542



For warranty terms & conditions visit [www.kia.com/au/owners/warranty.html](http://www.kia.com/au/owners/warranty.html)