


XV17AS(C)/XV17ASS(C)/XV17ATS(C) WIRING DIAGRAM

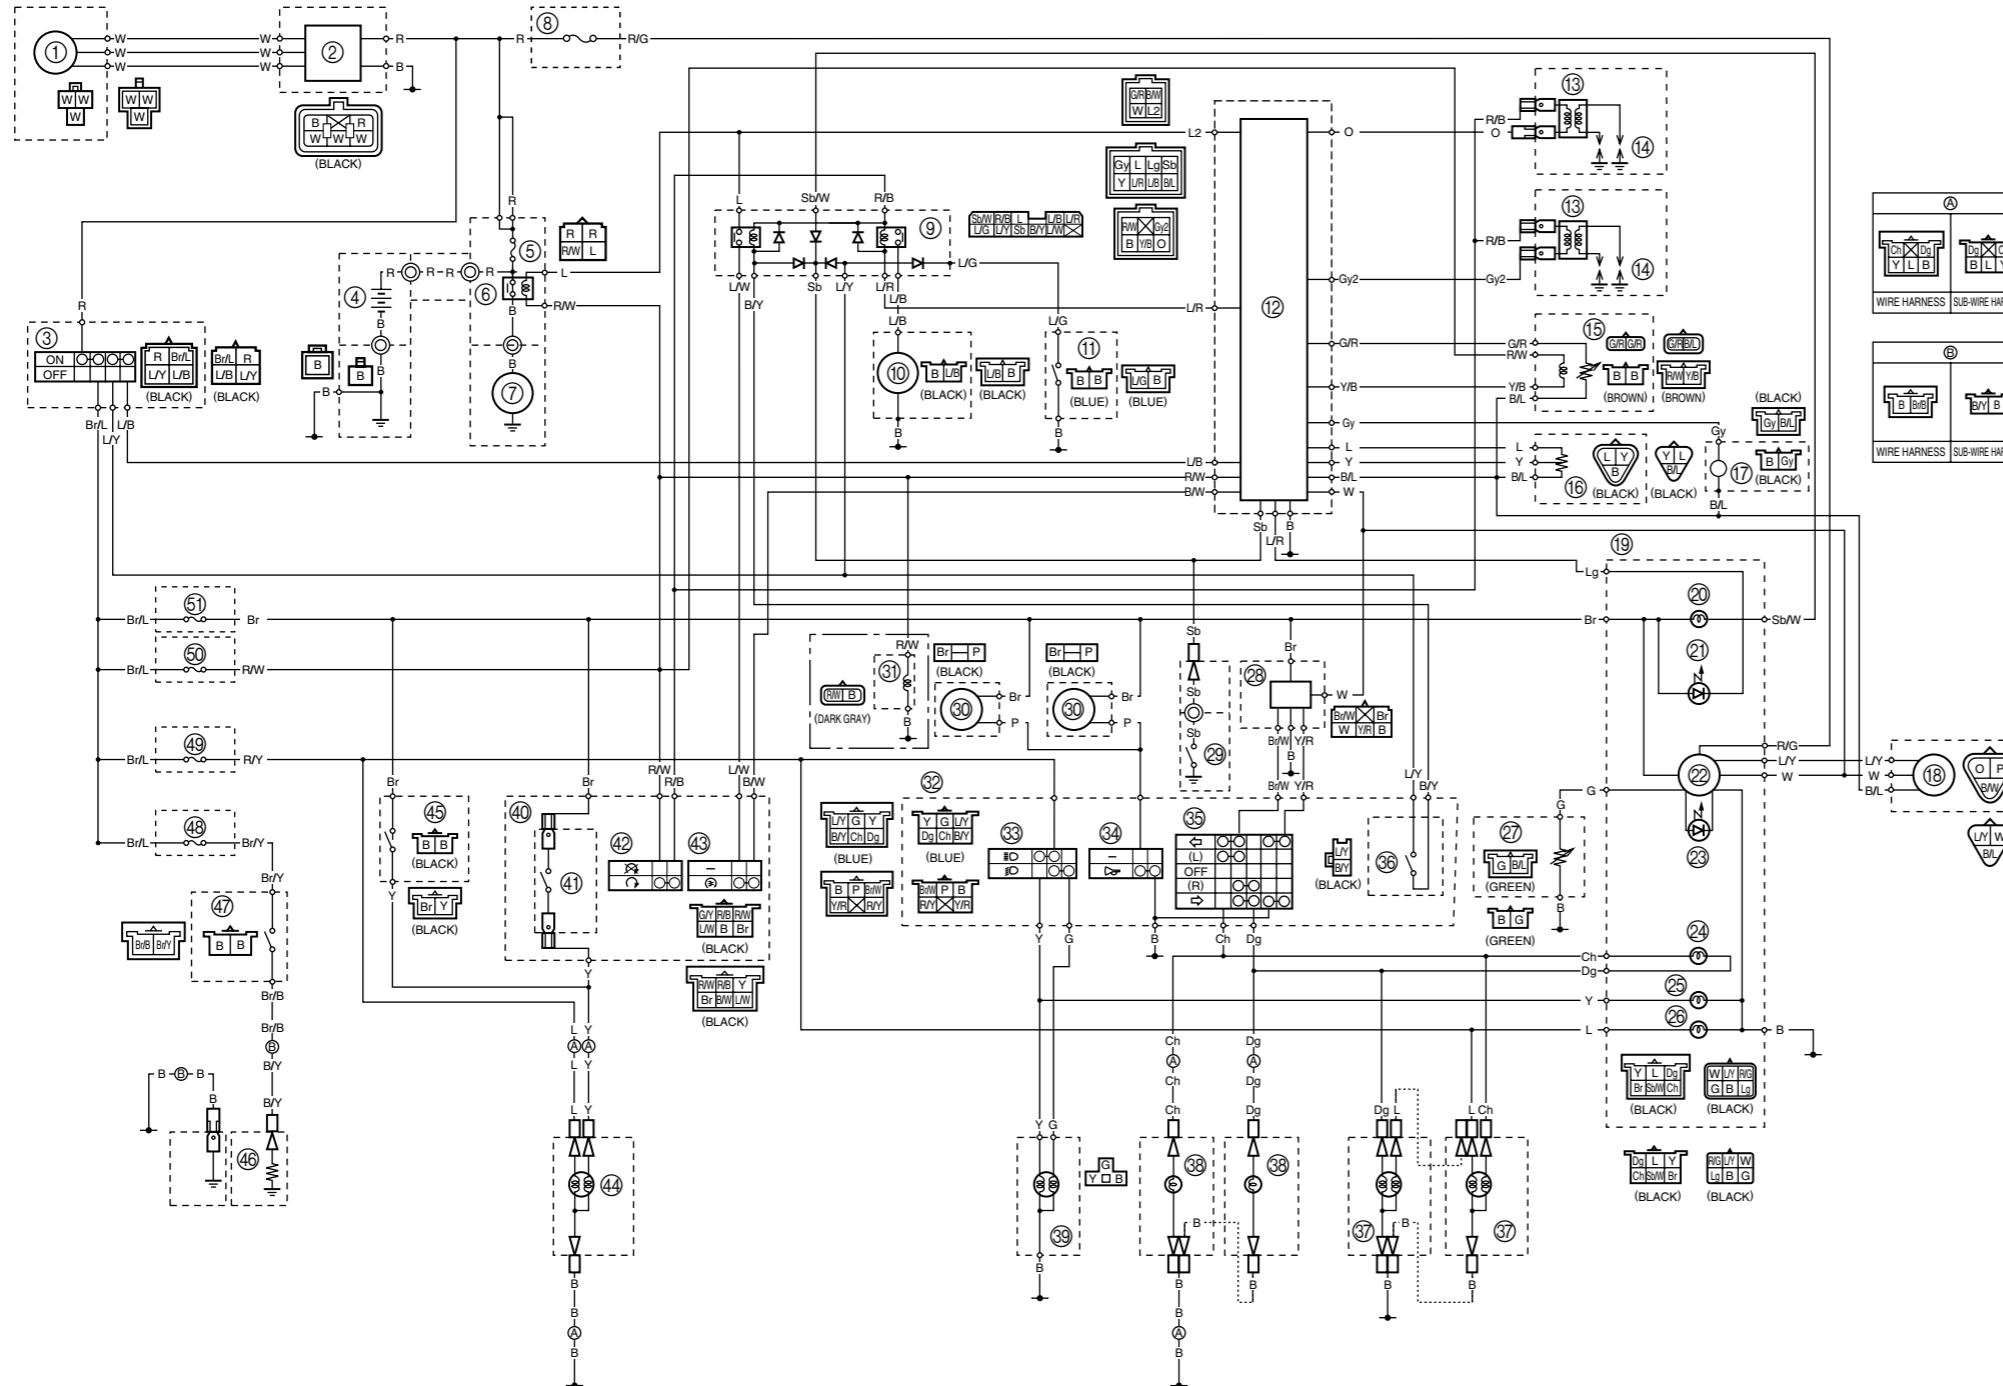

- ① Generator
- ② Rectifier/regulator
- ③ Main switch
- ④ Battery
- ⑤ Main fuse
- ⑥ Starter relay
- ⑦ Starter motor
- ⑧ Backup fuse
- ⑨ Relay unit
- ⑩ Fuel pump
- ⑪ Sidestand switch
- ⑫ Ignitor unit
- ⑬ Ignition coil
- ⑭ Spark plug
- ⑮ Decompression solenoid
- ⑯ Throttle position sensor
- ⑰ Pickup coil
- ⑱ Speed sensor
- ⑲ Meter assembly
- ⑳ Neutral indicator light
- ㉑ Engine trouble indicator light
- ㉒ Speedometer assembly (speedometer, combination meter and fuel level meter)
- ㉓ Fuel level indicator light
- ㉔ Turn signal indicator light
- ㉕ High beam indicator light
- ㉖ Meter light
- ㉗ Fuel sender
- ㉘ Turn signal relay
- ㉙ Neutral switch
- ㉚ Horn
- ㉛ Solenoid valve (for California)
- ㉜ Left handlebar switch
- ㉝ Dimmer switch
- ㉞ Horn switch
- ㉟ Turn signal switch
- ㊱ Clutch switch
- ㊲ Front turn signal/position light
- ㊳ Rear turn signal light
- ㊴ Headlight
- ㊵ Right handlebar switch
- ㊶ Front brake light switch
- ㊷ Engine stop switch
- ㊸ Start switch
- ㊹ Tail/brake light
- ㊺ Rear brake light switch
- ㊻ Carburetor heater
- ㊼ Thermo switch
- ㊽ Carburetor heater fuse
- ㊾ Headlight fuse
- ㊿ Ignition fuse
- ① Signaling system fuse

COLOR CODE

B	black	P	pink	Br/L.....	brown/blue	L/Y.....	blue/yellow
Br	brown	R	red	Br/W	brown/white	R/B	red/black
Ch	chocolate	Sb	sky blue	Br/Y	brown/yellow	R/G	red/green
Dg	dark green	W	white	G/R	green/red	R/W	red/white
G	green	Y	yellow	G/Y	green/yellow	R/Y	red/yellow
Gy	gray	B/L	black/blue	L/B	blue/black	Sb/W	Sky blue/white
L.....	blue	B/W	black/white	L/G.....	blue/green	Y/B	yellow/black
Lg.....	light green	B/Y	black/yellow	L/R.....	blue/red	Y/R	yellow/red
O	orange	Br/B.....	brown/black	L/W.....	blue/white		