

### Maintenance Minder™

When maintenance is due, the system message indicator comes on and a message appears on the display every time you turn the vehicle on. The messages notify you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services. Roll the right selector wheel on the steering wheel to change displays.



- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Independent of the Maintenance Minder information, adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

U.S. models

**Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.**

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the multi-information display .

#### ■ Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

CODE	Maintenance Main Items
A	<ul style="list-style-type: none"> <li>· Replace engine oil *1</li> </ul>
B	<ul style="list-style-type: none"> <li>· Replace engine oil *1 and oil filter</li> <li>· Inspect front and rear brakes</li> <li>· Check expiration date for temporary tire repair kit bottle (if equipped)</li> <li>· Inspect tie rod ends, steering gearbox, and boots</li> <li>· Inspect suspension components</li> <li>· Inspect driveshaft boots</li> <li>· Inspect brake hoses and lines (Including ABS/VSA®)</li> <li>· Inspect all fluid levels and condition of fluids</li> <li>· Inspect exhaust system #</li> <li>· Inspect fuel lines and connections #</li> </ul>

\*1: If a message **Maintenance Due Now** does not appear more than 12 months after the display is reset, change the engine oil every year.

#: See information on maintenance and emissions warranty.

CODE	Maintenance Sub Items
1	<ul style="list-style-type: none"> <li>· Rotate tires</li> </ul>
2	<ul style="list-style-type: none"> <li>· Replace air cleaner element *2</li> <li>· Replace dust and pollen filter *3</li> </ul>
3	<ul style="list-style-type: none"> <li>· Replace transmission fluid *4</li> </ul>
4	<ul style="list-style-type: none"> <li>· Replace spark plugs</li> <li>· Replace timing belt and inspect water pump *5</li> <li>· Inspect valve clearance</li> </ul>
5	<ul style="list-style-type: none"> <li>· Replace engine coolant</li> </ul>
6	<ul style="list-style-type: none"> <li>· Replace Twin Motor Unit fluid *6</li> </ul>

\*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

\*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

\*4: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperature. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under this condition, have the transmission fluid changed at 30,000 miles (48,000 km), then every 25,000 miles (40,000 km).

\*5: If you drive regularly in very high temperatures (over 110°F, 43°C), in very low temperatures (under -20°F, -29°C), replace every 60,000 miles (100,000 km).

\*6: Driving in mountainous areas at very low vehicle speeds results in higher level of mechanical (Shear) stress to fluid. This requires Twin Motor Unit fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under this condition, have the Twin Motor Unit fluid changed at 7,500 miles (12,000 km), then every 15,000 miles (24,000 km).