

Presenters



Andrew Warnes
Manager – Technical Training
Sloan Valve Company
Franklin Park, IL



John Lauer Director – Western Region Sales Sloan Valve Company Pasadena and Big Bear, CA



Jerry Mielnikiewicz Field Technical Service Rep III Sloan Valve Company Franklin Park, IL



Agenda

This webinar is designed to:

- Introduce how Sloan touch-free sensors work
- Cover the types of information that Sloan touch-free products have to communicate to facility personnel
- Present the messages that various Sloan products can send and what to do about them

You will learn:


- How to understand the "language" of Sloan touch-free sensor products
- Which sensor messages are critical to a positive customer experience

We will not cover:

Special settings adjustments or custom features





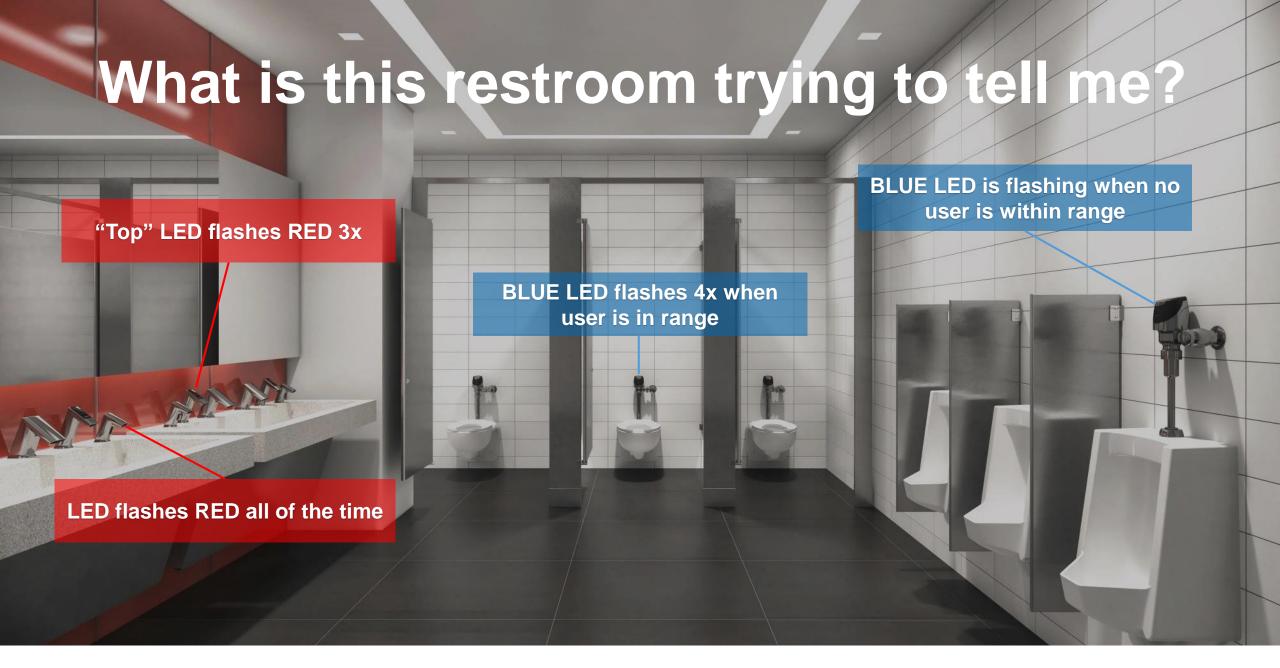



Why Visual Light Communication (VLC) is Important







Save me money



Make my work easier



Make me money



Improve my customer's experience

VLC is critical to safety, hygiene, and customer satisfaction



For Your Reference

Sloan Webinar Series


Replacing Manual Faucets with Automatic Touch-free Sensor Faucets

Converting Manual Flushometers to Touch-free Sensor Operation

<u>Focusing on Touch-free Hygiene in K-12 and Higher Education</u> Facilities

<u>Sloan Sinks – Designing with Hygiene, Quality and</u> Customization

Commercial Restroom Recommendations for Return-to-Work & Facility Start-Up

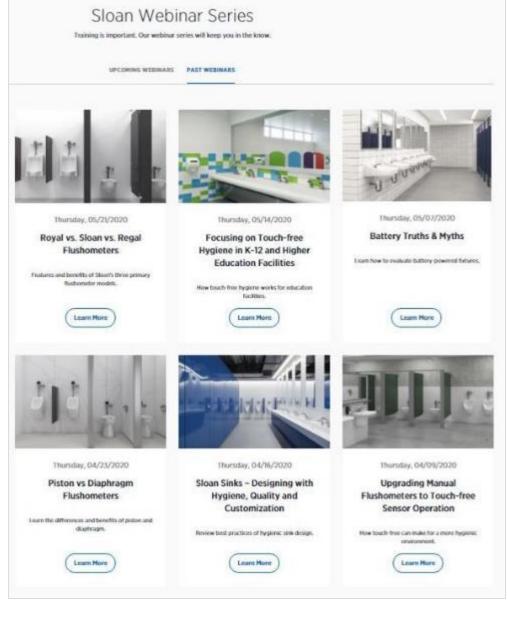







How do IR (Infrared) Sensors Work?





Infrared Sensor

- Senses the reflection of infrared light when a valid "target" is within range
- Range can be adjusted





How do Capacitance (Proximity) Sensors Work?




Capacitance (Proximity) Sensor


- Senses the electrical field surrounding a valid "target" when within range
- Range can be adjusted
- Cannot be used on metal sinks (including enamel coated cast iron) or near large metal objects






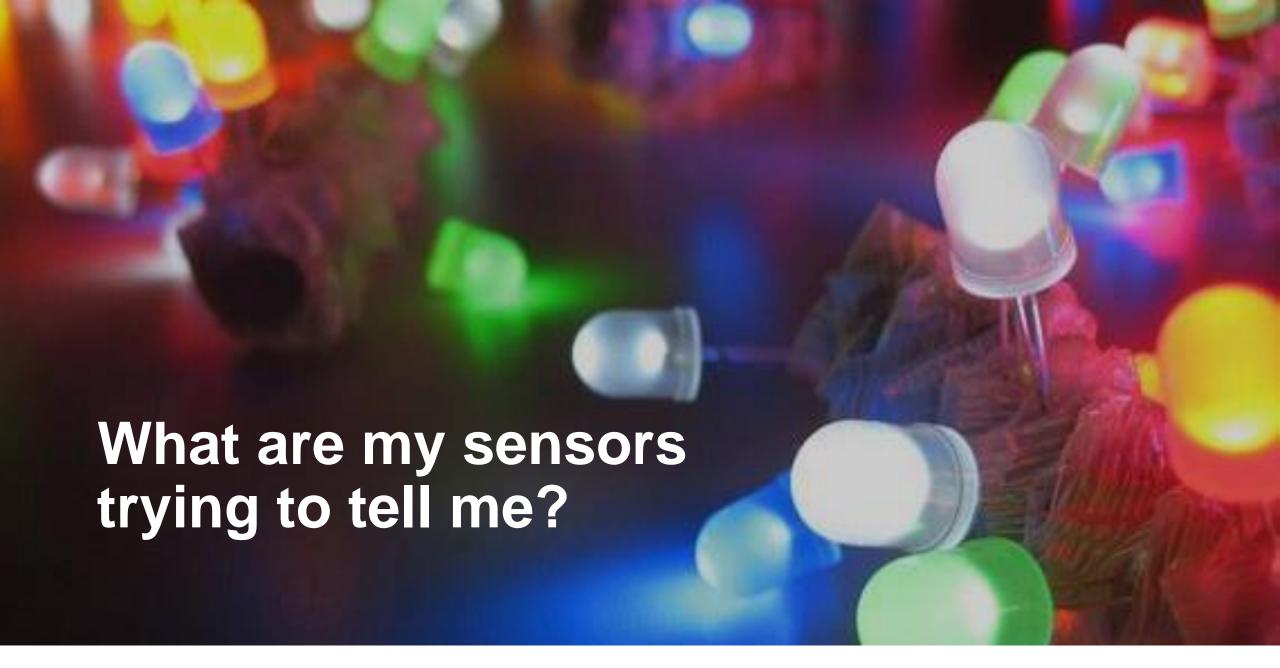



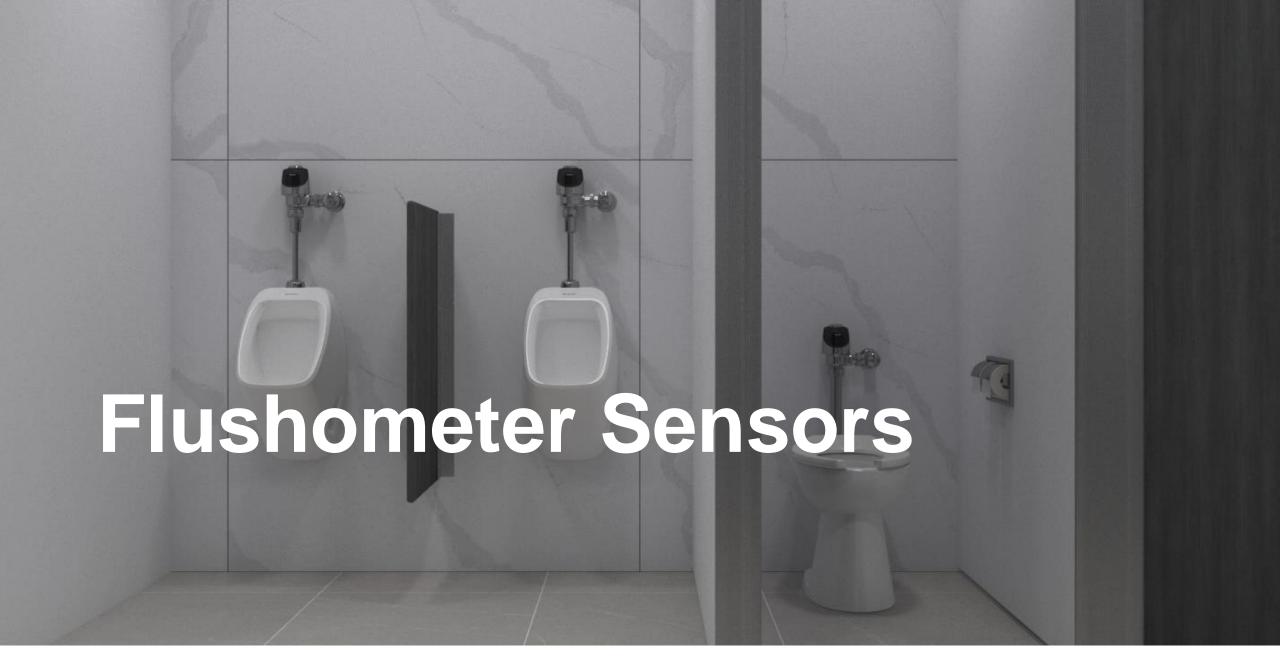



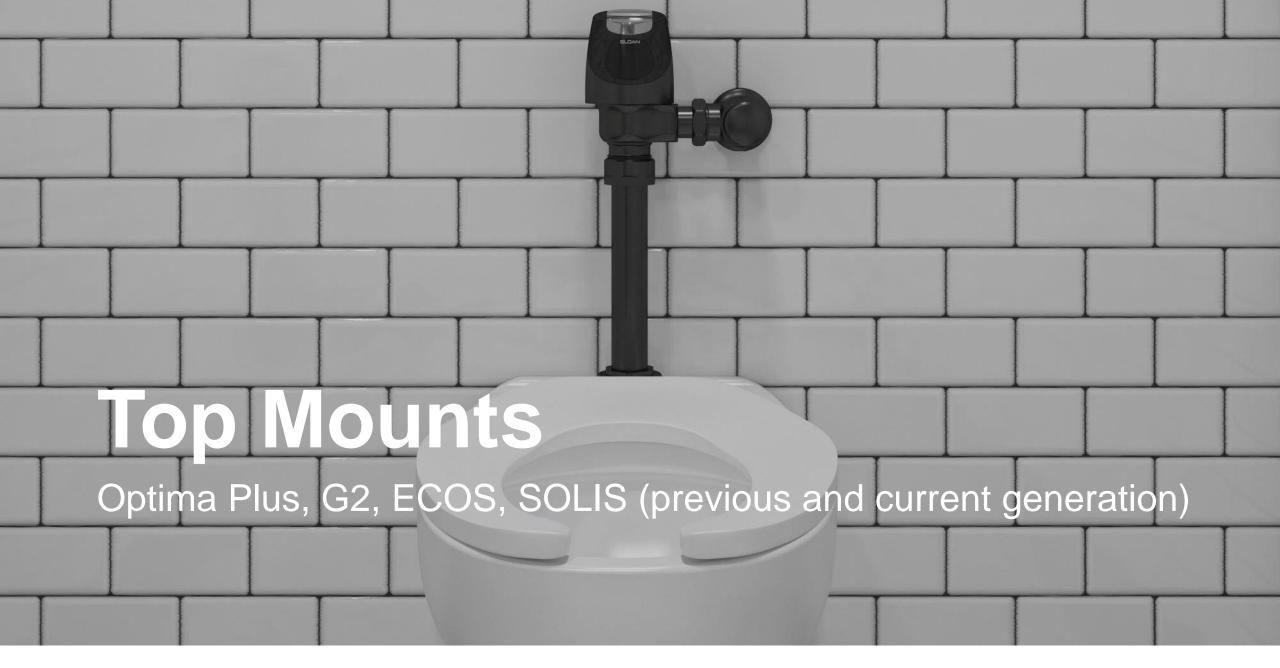



What's the Difference between Previous and Current Generation Top Mounts?



Sentinel Flushes were turned off in late 2015 to conserve water – contact Tech Support with questions



Sloan, G2 and ECOS single flush went to adaptive sensing in June of 2016



ECOS dual flush went to adaptive sensing in July 2018



SOLIS will transition to adaptive sensing by end of 2020



Current sensor cover asks for time to permit adaptive sensing



Current Top Mount Flushometers and Retrofits











	SLOAN	MC	G2	ECOS	SOLIS
LED Color	Red	Red	Red	Blue	Blue
Start-up Time		1 minute	e (adaptive s	ensing)	
Start-up Indicator		E	Blinking LED		
User is Detected	LED Flashes when a user is detected during first 10 minutes after start up, no flash after that (to conserve battery life)				
Flush Delay	Closet – 3s / Urinal – 1s				
Low Battery Indicator	Flashes 4x when user is within range				
Link to Installation Instructions	SLOAN	MC	<u>G2 /</u>	<u>ECOS</u>	<u>SOLIS</u>



Previous Top Mount Flushometers and Retrofits

SLOAN ECOS SOLIS MC G2 **LED Color** Red Red Blue Blue Red **Start-up Time** 5 seconds (factory range setting) or Manual Range Adjustment **Start-up Indicator** Blinking LED **User is Detected (first 10** LED Flashes when a user is within range minutes of operation only) Flush Delay Closet – 3S / Urinal 1S **Low Battery Indicator** Flashes 4x when user approaches

> For a copy of the complete ECOS, G2, and Sloan Optima Plus Troubleshooting Flow Chart for previous generation units, please contact Sloan Tech Support




Top Mount Flushometer and Retrofit Tips

Indicator	Issue	Resolution
Sensor blinks with no user within range	Range is set too far out	Depress manual override button for 20-30 seconds until LED appears and step out of range to initiate adaptive sensing mode
Sensor does not blink when user is within range	Range is set too close in	Depress manual override button for 20-30 seconds until LED appears and step out of range to initiate adaptive sensing mode
Sensor blinks 4x when user is within range	Batteries are low	Replace batteries





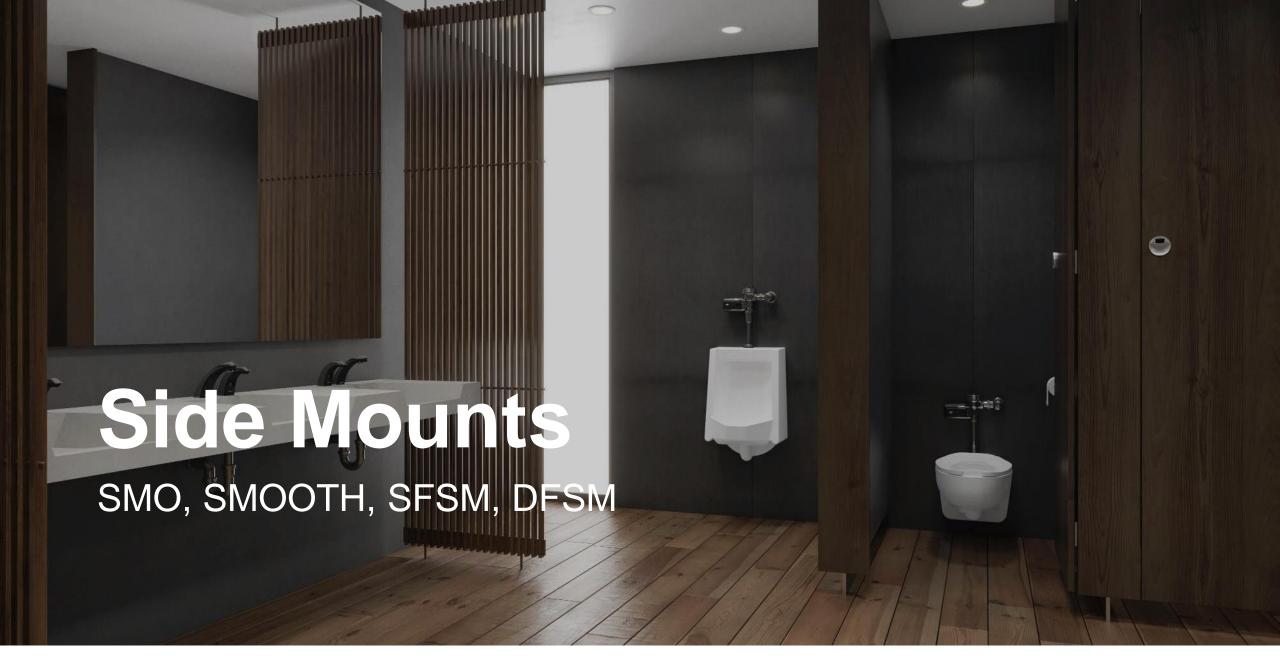



Side Mount Flushometers and Retrofit Kits









	SMO	SMOOTH	SFSM	DFSM
LED Color	Green / Yellow	Red	Green / Red	Green / Red
Start-up Time	7 minutes	45 seconds	3 minutes	3 minutes
Flush Delay	1s	Clo	oset -3s / Urinal -1	S
Start-up Indicator	Green LED flashing, pause, then 3x green LED flashes	Red LED flashes and unit will flush	Intermittent Gre until complete	en LED flashing e, then 1 flush
User is Detected	Green LED flashes 3x after 5 sec. delay	Red LED flashes for 8 seconds	Flashing Green LED	
Low Battery Indicator	Yellow LED flashes continuously	Red LED flashes		•
Improper Start-up	Green LED flashes with no user	NA	Red LED flashes continuously after adaptive sensing	
Link to Installation Instructions	<u>SMO</u>	SMOOTH	<u>SFSM</u>	<u>DFSM</u>

EBV-89-A SMO Tips

Indicator	Issue	Resolution
Green LED flashes when no user present	Sensor is covered or range is set too far out	Uncover sensor and/or adjust range
Yellow LED flashes	Batteries are low	Replace batteries
LED lights do not function	Batteries are dead	Replace batteries





EBV-200-A SMOOTH Tips

Indicator	Issue	Resolution
Red LED flashes when no user is present or does not flash when user is within range	Range is not properly adjusted	Adjust sensor range
Sensor blinks 4x when user is within range	Batteries are low	Replace batteries
LED lights do not function	Batteries are dead	Replace batteries





SFSM / DFSM Tips

Indicator	Issue	Resolution	
Red LED flashes continuously OR Red LED flashes 4x after 8 seconds OR Red LED flashes 1x per hour with no user	Batteries are low	Replace batteries	
Red LED flashes continuously after calibration	Improper start up	Remove batteries for 10 seconds and repeat installation procedure	
LED lights do not function	Batteries are dead	Replace batteries	









EL-1500 and EL-1500L Series Sensor





	ESS	
LED Color	Red	
Start-up Time	1 minute	
Start-up Indicator	Solid Red LED during start up	
User is Detected	Slow flashing red LED, then rapid flashing red LED when unit is armed (ready to flush – 16s for closet and 8s for a urinal)	
Flush Delay	Closet – 3s / Urinal – 1s	
Low Battery Indicator	NA (Hardwired 24 Volt)	
Improper Start-up	Continuously flashing red LED	
Link to Installation Instructions	ROYAL ESS	




EL-1500 Sensor Tips

Indicator	Issue	Resolution
Continuous slow flashing red LED	Improper start-up	Disconnect power for 20 seconds and repeat installation procedure
Continuous fast flashing red LED	Sensor is detecting a target	Remove obstruction or clean sensor window
Red LED flashes an "SOS" pattern (three short, three long, three short)	Wiring connections are incorrect or there is an electrical short	Re-wire the sensor correctly and repeat installation procedure
LED lights do not function	No power to unit	Check power supply and repeat installation procedure







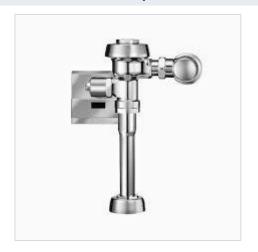







CX Flushometers









	СХ
LED Color	Red
Start-up Time	3.5 minutes
Start-up Indicator	Continuous Red LED followed by a slow flashing Red LED, then 2 final LED flashes
User is Detected	LED Flashes when a user is detected during first 10 minutes after start up, no flash after that
Flush Delay	Closet – 3s / Urinal – 1s
Low Battery Indicator or battery is not connected (if applicable)	Red LED flashes 4x when user within range
Link to Installation Instructions	<u>CX</u>



CX Flushometer Tips





Indicator	Issue	Resolution
Red LED flashes 4x when user within range	Low Battery Indicator or battery is not connected (if applicable)	Replace batteries or connect battery pack
LED lights do not function	No power to unit	Check power supply and repeat installation procedure











Sloan SF Faucets











	SF- 2100/2150	SF- 2200/2250	SF- 2300/2350	SF- 2400/2450
LED Color	Red			
Start-up Time	0 minutes (factory range setting) or Manual Range Adjustment			
Start-up Indicator	Flashing LED			
User is Detected	Red LED flashes 1x when a user is detected			
Low Battery Indicator (if applicable)	Red LED flashes intermittently when battery is low			
Improper Start-up	NA			
Link to Installation Instructions	SF FAUCETS			



SF Faucet Tips



Indicator	Issue	Resolution	
Red LED flashes when no user is present or does not flash when user is within range	Range is not properly adjusted	Adjust sensor range	
Red LED flashes intermittently	Batteries are low	Replace batteries	
Red LED does not function	Batteries are dead	Replace batteries	







Sloan EBF & ETF (Optima) Faucets













	ETF-80 EBF-89	
ED Color		



ETF-600 EBF-650 ETF-610 EBF-615 ETF-660 EBF-665

Start-up	Timo

Start-up Indicator

User is Detected

Low Battery Indicator (if applicable)

Improper Start-up

Link to Installation Instructions

Red LED (Sensor), Green LED (Control Box)

1 minute (adaptive sensing)

Short green flash on control box, long red flash on sensor

Red sensor LED flashes 1x when a user is detected

Red sensor LED flashes intermittently when battery is low

Lack of short green flash on control box or long red flash on sensor

EBF and ETF (OPTIMA) FAUCETS



Sloan EBF & ETF (Optima) Faucets















	ETF-500 EBF-550	ETF-700 EBF-750	ETF-770 EBF-775	ETF-800 EBF-850
LED Color	Red LED (Sensor), Green LED (Control Box)			
Start-up Time	1 minute (adaptive sensing)			
Start-up Indicator	Short green flash on control box, long red flash on sensor			
User is Detected	Red sensor LED flashes 1x when a user is detected			
Low Battery Indicator	Red sensor LED flashes intermittently when battery is low			
Improper Start-up	Lack of short green flash on control box or long red flash on sensor			
Link to Installation Instructions	EBF and ETF (OPTIMA) FAUCETS			



EBF / ETF Faucet Tips







Indicator	Issue	Resolution	
Red LED flashes when no user is present or does not flash when user is within range	Range is not properly adjusted	Adjust sensor range	
Red LED flashes intermittently	Batteries are low	Replace batteries	
Red LED does not function	Batteries are dead	Replace batteries	







Sloan EAF Faucets













	EAF-100 EAF-150	EAF-200 EAF-250	EAF-225	EAF-275	EAF-350	EAF-700 EAF-750
LED Color	Red and Green LED					
Start-up Time	15 seconds (adaptive sensing)					
Start-up Indicator	Flashing Red LED, then 1x Green LED flash					
User is Detected	NA					
Low Battery Indicator	Red LED flashes intermittently when faucet is in use					
Improper Start-up	Red LED flashes continuously					
Link to Installation Instructions	EAF-100 EAF-150	EAF-200 EAF-250	EAF-225	EAF-275	EAF-350	EAF-700 EAF-750



EAF Faucet Tips



Indicator	Issue	Resolution
Red LED flashes intermittently	Batteries are low	Replace batteries
Red LED does not function	Batteries are dead	Replace batteries


Note: Sloan EAF faucets include a hidden "IQ Click" button for adjusting settings and features. Consult the Installation Instructions for more information







Sloan EFX (BASYS) Infrared Faucets

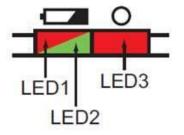











	EFX-100 Series "High"	EFX-200 Series "Mid"	EFX-300 Series "Low"	EFX-600 Series "Low IB"	EFX-800 Series "Wall"
LED Color	Green and Red LEDs on "crown"				
Start-up Time	20 seconds (adaptive sensing)				
Start-up Indicator	Intermittent flashing Red and Green LEDs, followed by 1x Green LED flash				
User is Detected	Green LED flashes for 2 seconds				
Low Battery Indicator	Red LED flashes 3x when low, double flashes 3x when very low				
Solenoid Valve Error	Red LED double flashes 3x after hands are removed				
Improper Start-up	Continuous alternating Red and Green LED flashes				
Link to Installation Instructions	EFX-100 Series <u>"High"</u>	EFX-200 Series "Mid"	EFX-300 Series "Low"	EFX-600 Series <u>"Low IB"</u>	EFX-800 Series "Wall"

Sloan EFX (BASYS) Capacitance Faucets







	EFX-300 Series "Low"	EFX-600 Series "Low IB"	
LED Color	Green and Red LEDs on "crown"		
Start-up Time	0 seconds (adaptive sensing)		
Start-up Indicator	Battery powered – Green LED flashes 5x Hardwired – alternating Green and Red LED flashes 5x		
User is Detected	Green LED flashes for 2 seconds		
Low Battery Indicator	Red LED flashes 4x when faucet is in use		
Solenoid Valve Error	Red LED flashes 2x after hands are removed		
Improper Start-up	Red LED flashes 4x per second		
Link to Installation Instructions	EFX-300 Series CAP	EFX-600 Series CAP	




EFX BASYS Faucet Tips



Indicator	Issue	Resolution
Green LED flashes when no user is present or does not flash when user is within range	Range is not properly adjusted	Adjust sensor range
Red LED flashes intermittently	Batteries are low	Replace batteries
Green and Red LEDs do not function	Batteries are dead	Replace batteries



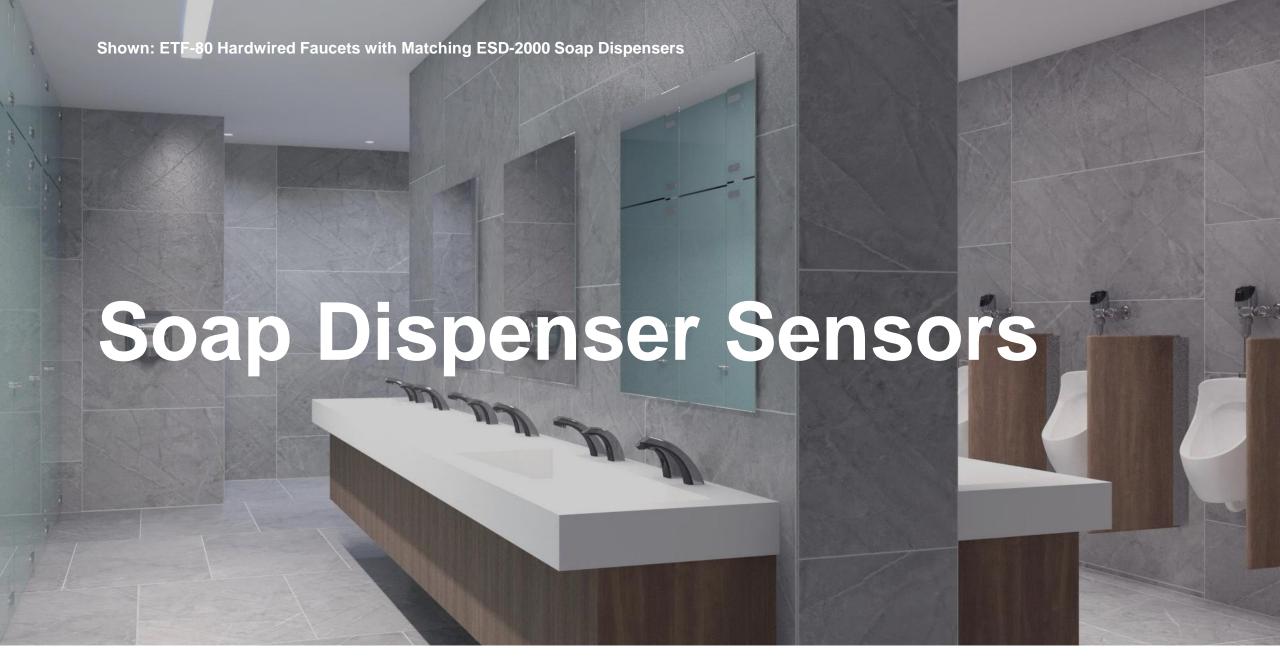



"Optima" Soap Dispensers







	ESD-200 ESD-250	ESD-300 ESD-350	ESD-400
LED Color	Red and Yellow	Red and Yellow	Red and Green
Start-up Indicator	NA	NA	Green LED on below- deck motor indicates power
Low Battery Indicator (if applicable)	Yellow LED flashes	Yellow LED flashes	Hardwired only
Low Soap Indicator	Red LED flashes	Red LED flashes	Red LED on sensor flashes
Link to Installation Instructions	ESD-200 / ESD-250	ESD-300 / ESD-350	ESD-400



Soap Dispenser Tips







Indicator	Issue	Resolution
Yellow LED flashes	ESD200, ESD250, ESD300 or ESD350 batteries or hardwired voltage is low	Replace batteries or check power supply
Red LED flashes	ESD200, ESD250, ESD300 or ESD350 soap is low	Replace soap
Red LED flashes	ESD400 soap is low	Refill soap
LEDs do not function	Batteries are dead	Replace batteries or check power supply



"Sloan" Soap Dispensers






CONCLUSION

Sloan has...

- Widest selection of sensor plumbing products
- Proven experience
- Reliable and easy to maintain
- Cutting edge technology
 - Adaptive sensing
 - On delays & off delays
- Indicator lights
 - Start-up
 - Adjustment
 - Maintenance
- Sloan has put a lot of thought and ingenuity into these products

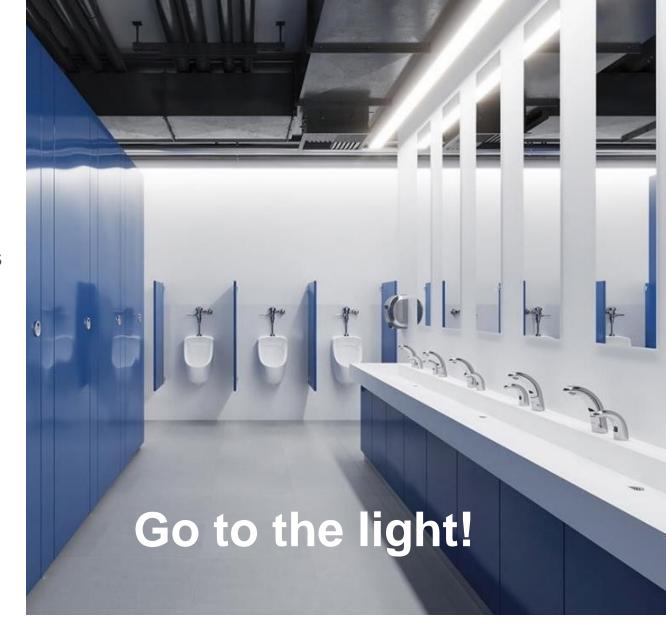



What is this restroom trying to tell me?

"Top" LED flashes RED 3x **Battery strength is low** LED flashes RED all of the time

BLUE LED flashes 4x when user is in range

Battery strength is low

The soap bottle is empty. It's time to refill.



Sensor is set too far. Adjust sensor range



Find your local Sloan representative for more information

Sloan Rep Locator tool

- Local code knowledge
- Familiarity with existing sites
- Product knowledge
- Available for onsite consultation

Sloan Customer Care Center

Phone: 800.982.5839

Hours: 7:00 AM - 5:00 PM (CST) Monday - Friday

customer.service@sloan.com

Sloan Technical Support

P: 888.756.2614 F: 800.737.3061

techsupport@sloan.com









Upcoming Sloan Training Webinars



June 25th

Commercial Restroom Products and ADA Compliance



July 2nd

Flushometer Care and Maintenance Part 1 – Manual Diaphragm Units



July 9th

Power Supply Options and Installation Recommendations for Sloan Sensor Faucets



July 16th

Sustainability and Sloan Commercial Restroom Products



Training Comments, Questions, or Suggestions?

Andrew Warnes
Manager – Technical Training
Sloan Valve Company
10500 Seymour Avenue
Franklin Park, IL USA 60131-1259

Office: +1-800-982-5839

E-mail: training@sloan.com

Web: sloan.com

