

How to change SSID and password of the router?

Step 1: Ensure that you have connected successfully to the router.

Open an Internet browser (such as Internet Explorer) and enter "http://192.168.0.1" into the address bar.

	()	http://192.168.0.1/login.html	Q - C	D-Link - DWR-932C	×
--	----------------	-------------------------------	-------	-------------------	---

Step 2: Enter your login information. If you have not changed the default settings, the username is admin and the password field should be left blank. Click **Sign in**.

D-Link	
	Welcome to D-Link
	User Name admin
	Password Enter Password
	Sign in 🗲

Step 3: Click **Wi-Fi Settings** tab at the top of the page to launch the Wi-Fi Settings menu and status.





Step 4: Click on Wi-Fi Security Settings to display current Wireless Security settings.

Wi-F	Fi Settings		G
Wi-Fi Status	v	/i-Fi Security Settings	
	SSID For Wi-Fi 2.4 GHz	dlink_DWR-932C_FCEA	
Wi-Fi Control	SSID Visability		
	Max Client Number	10	
Wi-Fi Clients	Protection	Advanced Protection	
	WPA Mode	WPA2	
Wi-Fi Security Settings	Cipher Type	AES	
	Pre-Shared Key	•••••	
		Show Characters	
MAC Filter	Apply Cancel		

Step 5: Please enter desired **SSID** and **Pre-Shared Key** as highlighted. Click on **Apply** to save settings

Wi-Fi Status	Wi-Fi Security Settings		
	SSID For Wi-Fi 2.4 GHz	DWR-932C_2.4G	^
Wi-Fi Control	SSID Visability		
	Max Client Number	10	
Wi-Fi Clients	Protection	Advanced Protection	
	WPA Mode	WPA2	
Ni-Fi Security	Cipher Type	AES	
Settings	Pre-Shared Key		

Please find the desired SSID in list of current networks on your wireless client device and enter the corresponding password to connect to the router.

---- END ----