

JSER MANUAL

## Thank you for choosing Sensei.

Congratulations on the purchase of your Sensei Cut-to-Size LCD Screen Protector Kit.

This cut-to-size screen protector is designed to protect your camera's LCD screen from scratches, dust, and smears. It's easy to apply and remove, it adheres to the LCD screen without leaving behind any sticky residue, and the paper backing includes printed guidelines to help you trim the screen protector to the exact size you need.


Please read these instructions carefully before applying your Sensei Cut-to-Size LCD Screen Protector.

## **Box Contents**


- Twelve (12) screen protectors
- Three (3) wet wipes
- Three (3) dry wipes
- Applicator card

## Instructions


**Note:** Before applying your Cut-to-Size LCD Screen Protector, you must determine the size of your camera's LCD screen.

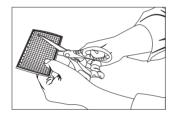


1. Using a pair of scissors or a razor and a straight edge, trim the screen protector along the guidelines that correspond to your camera's LCD size.

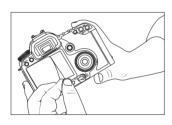

2. Remove all films or other intervening substances from your camera's LCD.

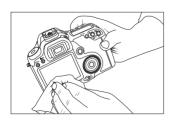

3. Clean the LCD with the included wet wipe, and then wipe it dry with the dry wipe. Be sure to remove all dust and fingerprints.

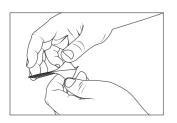


4. Partially peel off the backing from the screen protector. Be careful not to get any fingerprints on the exposed side of the screen protector.



5. Make sure your camera is on a stable surface, and align the screen protector with the camera's LCD.

**Tip:** Turning on the LCD will make it easier to see the

edges when aligning the screen protector.

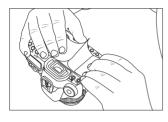

6. Hold the backing of the screen protector up while gently pushing down on the screen protector with the included applicator card. As you push the applicator card along

the camera's LCD to apply the screen protector, the backing will gradually peel off.



7. Use the applicator card to smooth out any remaining air bubbles by pushing them to the edge of the screen protector.

## **One-Year Limited Warranty**

This SENSEI product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) sheen discontinued, the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Sensei Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Sensei along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.madebysensei.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group. www.gradusgroup.com

SENSEI is a registered trademark of the Gradus Group. © 2017 Gradus Group LLC. All Rights Reserved.

