



Solstice /Sky Shift Adapter



This shift adapter for the Solstice / Sky allows for the use of any shift knob with a M10 X 1.25 thread to be used, like the DDMWorks shift knob.

Installation time of the shift knob adapter depends on you and your mechanical skills. It is suggested that you read through the directions a few times to familiarize yourself with the components of the kit, and your car. If you are pretty handy with tools the shifter can be installed in 30 minutes, however we suggest that you schedule at least a couple

of hours for the installation.

If you have any questions during the installation you can call us at (864) 907-6004 or email us at Tech@ddmworks.com.

TOOLS NEEDED

3/16" Allen key



Installing the Shift Adapter

1. **Make sure your car is in neutral and the parking brake is on before starting installation.**
2. The first step is to release the plastic ring around shifter (although these pictures show the ring on a Pontiac Solstice, the operation is the same for the Saturn Sky). To get the ring to pop up, grab under the front of the ring and pull up, that will release the ring in the front and allow you to lift the ring up.
3. With the ring up, the shift knob assembly needs to be removed from the car. The shifter comes off of the stock shifter mechanism by loosening one 3/16" bolt at the base of the shifter. Loosen that bolt until you can pull and lift the shifter off of the stock mechanism.
4. Now that the shifter is off, the shift adapter can be installed. Slide the shift adapter onto the transmission and tighten the set screw on the side with a 3/16" allen key.
5. Now you are ready to thread on your M10 X 1.25 Shift knob.



Reach under the front of the ring and lift up



Loosen this bolt to get the stock shifter off



Shift Adapter installed




Shift knob installed

Congratulations! You have finished the install. All of us here at DDMWorks thank you for your purchase and hope you enjoy your new shift knob adapter.

If you have any questions feel free to give us a call or text us at 864-907-6004. You can also email us at Tech@ddmworks.com.

Also, Follow us on Facebook for the latest product and information releases!

This Product is Jake the Superdog approved!

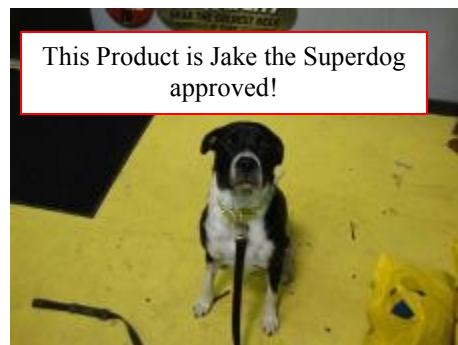

DDMWorks

119-A Hwy 183
Piedmont, SC 29673



Automotive Performance Specialists

Tech Support
(864) 907-6004

Rev A 5-6-15 ZPS