

"CHROME" BUMPERS FOR FORD



170-1024

Part No.	Year	
170-1018	1932	Passenger and Pickup, Chrome Plated, front and rear
170-1020	1933	Passenger Car, Chrome Plated, front and rear
170-1022	1933	Pickup, Chrome Plated, front
170-1024	1934	Passenger, Chrome Plated, except "Vicky" front and rear
170-1026	1934	Pickup, Chrome Plated, front
170-1028	1935	Passenger, Chrome Plated, front and rear
170-1030	1935	Pickup, Chrome Plated, front
170-1032	1936	Passenger, Chrome Plated, front and rear
170-1034	1936	Pickup, Chrome Plated, front
170-1036	1937	Passenger - front only, Pickup - front and rear Chrome Plated
170-1038	1937	Passenger, Chrome Plated, rear only
170-1042	1938-39	Passenger, Chrome Plated,and P/U Truck front and rear (not for 39 Deluxe)
170-1044	1939	Passenger - Deluxe Only, Chrome Plated, front and rear
170-1048	1940	Passenger and Pickup, Chrome Plated, front and rear and 40-41 Pick-Up Front
170-1049	1940-41	Pickup, Chrome Plated, rear
*170-1052	1942-46	Passenger Front Chrome Plated
*170-1054	1942-46	Passenger Rear Chrome Plated



Dort No

Voor





Continued "CHROME" BUMPERS FOR FORD

*170-1056	1947-48	Passenger Front Chrome Plated
-----------	---------	-------------------------------

*170-1058 1947-48 Passenger Rear Chrome Plated

*NOTE: Also Available Plain No Holes, Raw, Smooth with Studs Welded on Back.

STAINLESS STEEL NOSTALGIA NURF BAR KITS



FOR ANY VEHICLE

Only Available in 'Kit-Form' for you Do-It-Yourselfers! - unpolished

STAINLESS STEEL BUMPERS FOR FORD



170-1044-PS


Part No.	Year	
170-1022-SR	1933	Passenger Car Stainless Bumper front & rear
170-1022A-SR	1933	Pickup Stainless Bumper front
170-1024-SR	1934	Passenger Car Stainless Bumper, except "Vicky" front and rear
170-1026-SR	1934	Pickup Stainless Bumper front
170-1028-SR	1935	Passenger Car Stainless Bumper front and rear
170-1030-SR	1935	Pickup Stainless Bumper front



STAINLESS STEEL BUMPERS FOR FORD

Part No.	Year	
170-1032-SR	1936	Passenger Car Stainless Bumper front and rear
170-1032A-SR	1936	Pickup Stainless Bumper front
170-1036-SR	1937	Passenger - front only; Pickup Stainless Bumper front and rear
170-1038-SR	1937	Passenger Car Stainless Bumper rear only
170-1042-SR	1938-39	Passenger Car and Pickup Stainless Bumper front and rear (will not fit 39 Deluxe)
170-1044-PS	1939	Passenger Car Deluxe only. Stainless Polished smooth, no bolt holes, stud mounted fits front and rear
170-1048-PS	1940	Passenger Car - front and rear; & 40-41 Pickup - front Polished Stainless, smooth, no bolt holes, stud mounted
170-1049-PS	1940-41	Pickup, Sedan Delivery and Station Wagon - rear Polished Stainless, smooth, no bolt holes, stud mounted
170-1068-PS	1942-47	Pickup, Polished Stainless, front only, smooth, no bolt holes, stud mounted
170-1069-PS	1942-47	Pickup, Polished Stainless, front only (with holes)

170-1076-SS

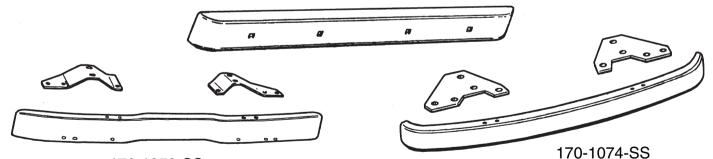

170-1078-SS

Part No.	Year	
170-1074-SS	1948-52	Pickup, Polished Stainless , front Correct for 1948-50 - will fit 1951-52
170-1076-SS	1948-56	Pickup, Polished Stainless, rear
170-1078-SS	1953-56	Pickup, Polished Stainless, front








"CHROME" BUMPERS AND PARTS FOR CHEVROLET

1931-32 Front Bumper and Brace Shown

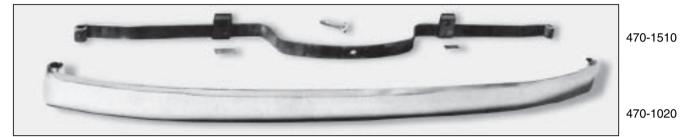

NOTE: All chrome bumpers are triple plated with copper, nickel, and chrome.

Part No. 470-1020	Year 1931-32	Passenger and Pickup, front
470-1022	1931-32	Bumperette Style—2 pc set, rear
470-1024	1931-32	Full Length, rear Also Fits 34-36 Pickup Rear
470-1025	1933	Passenger and Pickup, front
470-1030	1934-35	Passenger, Standard front
470-1040	1934	Passenger, Master front, Pickup front, Original Style, with hump in center. 34-36 Pickup front.



470-1045


- 470-1045 1933-34 all, 1935 Standard rear, Original Style, with hump in center
- 470-1045-CH-SR 1933-34 all, 1935 Standard, R.V.A. Special rear bumper without hump

NOTE: This bumper is used on cars without a rear mounted spare. It is straight, does not have the hump to go around the spare tire. Must be used with our R.V.A. Special rear bumper braces Part #470-1526-SR or Part #470-1526-SS-SR.

470-1050 1936 Standard front



"CHROME" BUMPERS FOR CHEVROLET

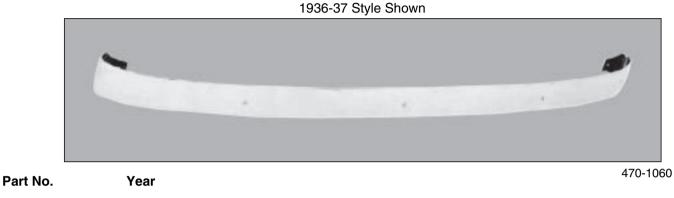

470-1060

1936-37 36 Standard rear, 37 Passenger, Master front and rear, and 37 Pickup, front



470-1070

470-1070	1938-39	Passenger and Pickup, front and rear
470-1080	1940	Passenger and Pickup, front and rear
470-1085	1941-46	Pickup front and rear
470-1090	1947-54	Panel Delivery and Suburban - front and rear; Pickup front
470-1094	1947-53	Pickup rear



MasterCard

VISA





STAINLESS BUMPERS FOR CHEVROLET

Part No. 470-1020-SS	Year 1931-32	Passenger and Pickup, front
470-1022-SS	1931-32	Bumperette Style-2 pc set, rear
470-1024-SS	1931-32	Full Length, rear Also Fits 34-36 Pickup Rear
470-1025-SS	1933	Passenger and Pickup, front
470-1030-SS	1934-35	Passenger, Standard front
470-1040-SS	1934	Passenger-Master front, and 34-36 Pickup - Original Style with hump in center



- 470-1045-SS 1933-34 all, 1935 Standard rear, Original Style with hump in center
- 470-1045-SS-SR 1933-34 all, 1935 Standard, R.V.A.Special rear bumper without hump

NOTE: This bumper is used on cars without a rear mounted spare. It is straight, does not have the hump to go around the spare tire. Must be used with our R.V.A. Special rear bumper braces Part #470-1526-SR or Part #470-1526-SS-SR.

- 470-1050-SS 1936 Standard front
- 470-1060-SS 1936-37 36 Standard rear, 37 Passenger, Master front and rear, and 37 Pickup, front



STAINLESS BUMPERS FOR CHEVROLET

Part No. Yea 470-1060-SS	r 1937	Master front or rear, Polished Stainless
470-1085-SR	1941-46	Pickup front or rear, Polished Stainless
470-1090-SR	1947-54	Pickup front, Panel Delivery and Suburban front or rear, Polished Stainless
470-1094-SR	1947-53	Pickup rear, Polished Stainless



470-1070-SR

STAINLESS "SMOOTH" BUMPERS FOR CHEVROLET

With Street Rodders in mind. We have removed the center grooves and the bumper bolt holes. We have put stainless studs on the back side. The polished finish goes very well with the new smooth look.

Part No. 470-1032-SR	Year 1935-36	Master, smooth front bumper, stud mount, Polished Stainless. These fit original braces, but appear different than original bumper. Intended for street rods.
470-1046-SR	1935-36	Master, smooth rear bumper, stud mount, Polished Stainless. These fit original braces, but appear different than original bumper. Intended for street rods.
470-1064-SR	1937	Master Deluxe, smooth front-rear bumper, stud mount, Polished Stainless. These fit original braces, but appear different than original bumper. Intended for street rods.
470-1070-SR	1938-39	Smooth Polished Stainless, front or rear
470-1080-SR	1940	Passenger & Pickup Smooth Polished Stainless, front or rear