

# Atek

## Multifunction Loop Calibrator Model 934



# Contents

<b>GENERAL INFORMATION</b> .....	2
YOUR NEW CALIBRATOR .....	2
MILLIAMPER CALIBRATION .....	3
VOLTAGE CALIBRATION .....	3
QUIK-CHEK & AUTO-CHEK .....	3
<b>GENERAL OPERATING INSTRUCTIONS</b> .....	4
TURN ON .....	4
RESTORE DEFAULT SETTINGS .....	5
ENABLING RANGES & FUNCTIONS .....	6
AUTO-OFF .....	6
% DP FLOW .....	6
AUTO-CHEK .....	6
ENGINEERING UNITS .....	6
SETTING DIP SWITCHES .....	7
RANGES .....	8
CHANGING BATTERIES .....	9
USING ENGINEERING UNITS .....	10
<b>SOURCE MODE OPERATING INSTRUCTIONS</b> .....	14
STORING QUIK-CHEK® OUTPUTS .....	16
RECALLING QUIK-CHEK OUTPUTS .....	16
SOURCE FUNCTIONS .....	17
CALIBRATE MILLIAMPER INPUTS .....	17
SIMULATE 2-WIRE TRANSMITTERS .....	18
POWER & MEASURE 2-WIRE TRANSMITTERS .....	19
CALIBRATE VOLTAGE INPUTS .....	20
CALIBRATE LOOP CONVERTERS & ISOLATORS .....	21
CHECK 1-5 VOLT INPUTS WITHOUT DISCONNECTING WIRES .....	22
USING AUTO-CHEK .....	24
<b>READ MODE OPERATING INSTRUCTIONS</b> .....	28
MIN/MAX .....	29
READ FUNCTIONS .....	30
READ MILLIAMPER OUTPUTS .....	30
READ VOLTAGE OUTPUTS .....	31
<b>SPECIFICATIONS</b> .....	32
<b>CALIBRATION PROCEDURE</b> .....	38
<b>WARRANTY</b> .....	44
<b>ORDERING INFORMATION</b> .....	45

## FEATURES

- **DUAL LIQUID CRYSTAL DISPLAY**  
Simultaneous Source and Read
- **LABORATORY ACCURATE**  
 $\pm(0.012\%$  of Reading +  $0.008\%$  of Full Scale Reading)  
Accurate to  $\pm 0.004$  mA from 4 to 20 mA
- **USER SETTABLE “QUIK-CHEK<sup>®</sup>s”**  
Set any Span & Zero
- **FULL FIVE DIGIT DISPLAYS**  
Source up to 24.000 mA, 20.000 V or 999.90 mV  
Read up to 52.000 mA, 99.990 V or 999.90 mV
- **SCALEABLE DISPLAY**  
Set in engineering units
- **SPEED SENSITIVE DIGIPOT**  
Fast setting to any desired value
- **“AUTO-CHEK”<sup>™</sup> OUTPUTS**  
Automatically outputs in 2, 3, 5 or 10 steps
- **ISOLATED SOURCE AND READ**  
Isolated to 500VDC  
Fuseless protection to 120 V AC/DC

## GENERAL INFORMATION

### YOUR NEW CALIBRATOR

---

Simultaneously source and read any combination of process milliamp and voltage signals. Altek's Model 934 combines all the functionality of a milliamp and a voltage calibrator! This dual function calibrator continuously displays the output and input signals. The top half of the display indicates the output setting while the lower half of the display shows the signal being measured.

Calibrate state of the art equipment such as smart transmitters and indicators to 4 $\frac{1}{2}$  or more digits using the Model 934. Full 5 digit resolution lets you check any brand of process control equipment. Your calibrations are correct with accuracy surpassing 0.02% of reading.

Use the scaleable display to match the readings on the Model 934 to that of the equipment being calibrated. For example, if your 4 to 20 mA recorder scale is 0.0 to 300.0 gallons/hour you can set the 934 to display 0.0 for 4 mA and 300.0 for 20 mA. No more need to use your calculator or "cheat sheet" to come up with the correct milliamp values.

Six "AA" alkaline batteries provide more than 20 hours sourcing 20 mA continuously . . . more than 3 months of typical use. From the time the low battery indicator first comes on you have hours of power remaining to get you through a shift without interruption. The 934 comes configured to automatically power down after 30 minutes of inactivity to save battery life.

Calibrate loop converters and isolators by simultaneously providing the input signal and measuring the output of the converter or isolator. Internal optoisolators withstand up to 500 VDC between the source and read leads. Calibrate and checkout all your process milliamp and voltage instruments with the "benchtop accurate" Model 934.

## **GENERAL INFORMATION**

### **MILLIAMP CALIBRATION**

---

Use at any point in your 4 to 20 milliamp loop. Source milliamps directly into your receivers with loop loads up to 1200 Ohms. Simulate 2-Wire Transmitters for checkout of field wiring and total loop testing. Power and measure 2-Wire or 4-Wire transmitters on the bench before installation. Read Transmitter & Controller outputs up to 52.00 mA. Display directly in milliamps, percent of 4 to 20 mA, percent of DP Flow or engineering units to match the scale of your process.

### **VOLTAGE CALIBRATION**

---

Calibrate and checkout all your DC Voltage instrumentation. Source up to 999.90 millivolts to simulate sensors and up to 20.000 Volts to check your process signal inputs. Measure voltages from -99.990 to +99.990 VDC to check your power supplies and the outputs from any process voltage equipment.

Calibrate any 1 to 5 Volt device in a live 4 to 20 milliamp loop without disconnecting any wires. The Model 934 will automatically source or sink 0 to >16 milliamps to clamp the test voltage in all source ranges. Output impedance is less than 0.2 Ohm to let you calibrate voltage instruments in milliamp loops without removing the input load resistors.

### **QUIK-CHEK & AUTO-CHEK**

---


Instantly recall three output settings in each range with the handy QUIK-CHEK switch. All output settings are remembered for each function, even with the power off.

Use the AUTO-CHEK to continuously switch the Model 934's output from Zero to Span in 2, 3, 5 or 10 equal steps at intervals of 5 to 900 seconds. Leave behind the panel and do your calibration from the front...or simulate your 2-Wire transmitter and calibrate every device in the loop.

# OPERATING INSTRUCTIONS

## GENERAL

### TURN-ON




Each time the Model 934 is turned on, the LCD will display all segments for about 1 second. It then displays the most recently selected Source & Read Settings.

- 1) Move the power switch to *ON*. All segments on the LCD are turned on during self test.
- 2) The upper half of the LCD will indicate if SOURCE is enabled while the lower half will indicate if READ is enabled.

**SOURCE** - The three QUIK-CHEK outputs will be the same as previously stored. Each time a different function is selected, the three QUIK-CHEK outputs for that function will be recalled.

**READ** - The 934 is ready to measure the same signal as the last time it was turned on and is automatically updating the MAX & MIN readings for recall from the READ toggle switch.

### CONNECTIONS

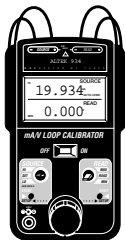


The Model 934 has built-in test leads with alligator clips for attachment to instruments or sensors with terminal blocks or flying leads. *To prevent accidentally overloading the instrument being tested, it is important to correctly set up the outputs before connecting the Model 934 to any instruments to be calibrated.*

# OPERATING INSTRUCTIONS

## GENERAL

### FIELD & BENCH USE

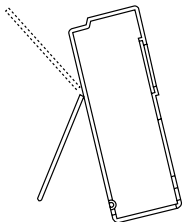

The Model 934 comes with a carrying case and a built-in tilt stand/hanger. The 934 is held securely in the case by VELCRO® for use with the carrying case open. The carrying case also has a snap-on belt loop which can also be looped around a pipe or rail.

The tilt stand is easily raised by pulling the stand until it locks into place. The stand can also be reversed for use as a hanger to suspend the Model 934.

### RESTORE DEFAULT SETTINGS

The Model 934 may be restored to the factory default setting. This will reset the HI and LO "QUIK-CHEK" memories according to the table below and the SET memory to ,idrange below HI and LO. The output and input are set to the mA range.

#### QUIK-CHEK DEFAULTS

RANGE	HI	LO
<i>mA</i>	<b>20.000</b>	<b>4.000</b>
<i>%4-20mA</i>	<b>100.00</b>	<b>0.00</b>
<i>%DP</i>	<b>100.0</b>	<b>0.0</b>
<i>mV</i>	<b>100.00</b>	<b>0.00</b>
<i>V</i>	<b>5.000</b>	<b>1.000</b>

- 1) Press and hold both the *STORE* & *RESET* push-buttons while turning the Model 934 on.
- 2) Keep pressing the push-buttons until the display flashes once (10 seconds) then release.
- 3) All segments on the LCD will remain displayed until the Model 934 has been reset

Note: Some ranges and functions are enabled by DIP switches (see pages 6 & 7 for factory settings).

### AUTOCAL

To maintain accuracy the Model 934 periodically recalibrates its measuring circuitry against internal references. While this is occurring the word CAL will appear on the LCD display for less than 2 seconds.

# **OPERATING INSTRUCTIONS**

## **ENABLING ADDITIONAL RANGES & FUNCTIONS**

---

The Model 934 has two additional ranges for displaying % DP Flow and Engineering Units. Additional functions are AUTO-CHEK (automatic stepping of outputs) and AUTO-OFF.

These ranges & functions are enabled by configuring DIP Switches (see next page). After the functions are enabled they are available as selections during setup (see OPERATING INSTRUCTIONS, SOURCE or READ).

### **AUTO-OFF**

The Model 934 can be set up to turn itself off after 30 minutes of inactivity. The internal timer is reset to 30 minutes each time the digital pot is turned or a pushbutton is pressed.

### **% DP FLOW**

Check out the signal generated by DP (differential pressure) flow transmitters, square root extractors or other signals using a square law. Select %DP Flow for all milliamp functions.

### **AUTO-CHEK**

The Model 934 can be set up to automatically step the output with your choice of 2, 3, 5 or 10 steps from Zero to Full Scale.

### **ENGINEERING UNITS**


Scale the display on the 934 to match the display of the instrument being calibrated. For example if you have a digital indicator showing 0.0 to 1000.0 Gallons/Hour from a flowmeter with 4 - 20 mA output you can scale the output of the 934 to display 0.0 at 4 mA and 1000.0 at 20 mA.



# OPERATING INSTRUCTIONS

## ENABLING ADDITIONAL RANGES & FUNCTIONS

The DIP switches are located in the battery compartment. Turn the Model 934 off and loosen the three slotted screws and remove the battery cover.

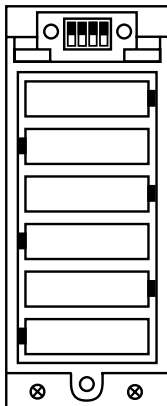

### AUTO-OFF

Switches between continuous operation and automatic turn off after 30 minutes of inactivity

AUTO-OFF  
Enabled\*



Continuous  
Operation



### AUTO-CHEK

Switches between enabling and disabling AUTO-CHEK option for source functions

AUTO-CHEK  
Enabled\*



AUTO-CHEK  
Disabled



### PERCENT DP FLOW

Switches between enabling and disabling Percent DP Flow range option for the milliamp functions

Percent DP  
Flow Enabled\*



Percent DP  
Flow Disabled



### ENGINEERING UNITS

Switches between enabling and disabling Engineering Units range option for all functions

Engineering  
Units Enabled



Engineering  
Units Disabled\*



\*Factory default settings

# OPERATING INSTRUCTIONS

## RANGES

The selected range is displayed on the LCD by the annunciators listed below.

### **MILLIAMPS - mA**

Choose mA to display directly in milliamps. Display in SOURCE and READ functions from 0.000 to 24.000 mA. In READ you can also measure up to 52.00 mA.

### **PERCENT OF 4 - 20 MILLIAMPS - mA %**

Choose mA % to display in percent of span for 4 - 20 mA loops. Use with chart recorders or current trips that display in %.

<i>0.00%</i>	<i>4.000 mA</i>
<i>25.00%</i>	<i>8.000 mA</i>
<i>50.00%</i>	<i>12.000 mA</i>
<i>75.00%</i>	<i>16.000 mA</i>
<i>100.00%</i>	<i>20.000 mA</i>

$$\text{Percent} = (\text{mA}-4)/0.16 \quad \text{mA} = (\text{Percent}/6.25) + 4$$

### **PERCENT DIFFERENTIAL PRESSURE - % DP**

Choose % DP to display in percent of the square law for 4 - 20 mA loops. Also use to calibrate square root extractors and other square law mA inputs.

<i>0.0%</i>	<i>4.000 mA</i>
<i>25.0%</i>	<i>5.000 mA</i>
<i>50.0%</i>	<i>8.000 mA</i>
<i>75.0%</i>	<i>13.000 mA</i>
<i>100.0%</i>	<i>20.000 mA</i>

$$\%DP = (\sqrt{\text{mA}-4}) \times 25 \quad \text{mA} = (\%DP/25)^2 + 4$$

### **VOLTAGE - V**

Choose V to display directly in DC Volts. Use for 0 to 1 Volt, 1 to 5 Volt or 0 to 10 Volt signals. SOURCE from 0.000 to 20.000 VDC. In READ the 934 autoranges between -999.90 to +999.90 millivolts and -99.990 to +99.990 VDC.

# OPERATING INSTRUCTIONS

## RANGES


### MILLIVOLTS - mV

Choose mV to display directly in millivolts DC. Use 0 to 100 millivolts to check recorder or analyzer inputs. SOURCE from 0.00 to 999.90 mVDC. In READ the 934 autoranges between -999.90 to +999.90 millivolts and -99.990 to +99.990 VDC.

### ENGINEERING UNITS - ENG. UNIT

Choose ENG. UNIT to match the display of the instrument being calibrated (see page 10 for instructions). Any span in mA, mV or V in Source or Read can be scaled to display a maximum of between -90000 to +90000 with 0 to three digits to the right of the decimal point.

## CHANGING BATTERIES

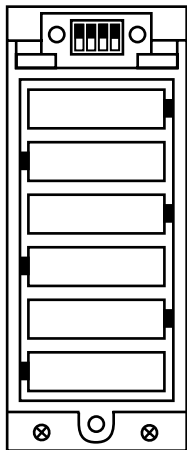

Low battery is indicated by BAT on the LCD Display. Approximately 4 Hours of operation remain before the LCD goes blank and the Model 934 shuts itself down. Turn the 934 off, loosen the three captive screws securing the battery compartment cover. The six "AA" batteries are easily removed and replaced (alkaline supplied and recommended). Replace the battery compartment cover, tighten the screws and turn on when ready to use.

# OPERATING INSTRUCTIONS

## USING ENGINEERING UNITS

Scale the display of the Model 934 to match the display of the instrument being checked. Any span in mA, mV or V in Source or Read can be scaled to display between a maximum of -90000 to +90000 with zero to three digits to the right of the decimal.

The previously stored Engineering units can be recalled by using the following procedure without turning the knob.

The display can be scaled to calibrate a reverse acting controller ( $4 \text{ mA} = 100.0$  and  $20 \text{ mA} = 0.0$ ) or to check an indicator reading negative numbers ( $0 \text{ mA} = -500.00$  and  $20 \text{ mA} = +500.00$ ).

Hint: Source in Engineering units and fundamental units at the same time. Setup Source for one unit and Read for the other unit. Connect the Source and the Read wires together (in series for mA, in parallel for mV and V).

- 1) Press & hold both the *STORE* & *RESET* push-buttons for 1 second to enter the SETUP mode. The word SETUP will appear in the LCD and the words SOURCE and READ will alternately flash (shown as gray). Release both push-buttons.
- 2) Press the *STORE* push-button to select *SOURCE* or the *RESET* push-button to select *READ*. The words SETUP and *SOURCE* or *READ* will remain on the LCD and the previously selected function will flash.




**Diagrams show setting mA Source for 4 to 20mA scaled to 0.00 to 500.00 liters/hour.**


# OPERATING INSTRUCTIONS

## USING ENGINEERING UNITS

- 3) Turn the knob (Digital pot) to scroll through the available functions. Each enabled function will flash on the LCD. "ENG. UNIT" will appear as a choice for each SOURCE or READ function. Press the *STORE* or *RESET* push-button to proceed.

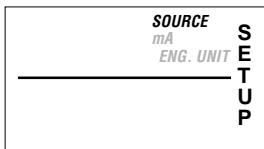

- 4) The word ZERO will appear in the top half of the LCD prompting you to enter the lowest value for the range in mA, V or mV that will be sourced or read. Turn the knob until the lowest value of your chosen range flashes in the top half of the LCD. Press the *STORE* or *RESET* push-button to continue.

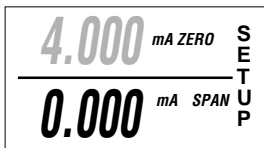

- 5) The word SPAN will appear in the bottom half of the LCD prompting you to enter the highest value for the range in mA, V or mV that will be sourced or read. Turn the knob until the highest value of your chosen range flashes in the bottom half of the LCD. Press the *STORE* or *RESET* push-button to continue.



# OPERATING INSTRUCTIONS

## USING ENGINEERING UNITS

6) You are now prompted by flashing zeros to enter the decimal point position for the engineering units you have chosen. Turn the knob until the decimal point appears in the location to match the resolution of the display on the instrument you will be calibrating (from zero to three digits to the right of the decimal point). Press the *STORE* or *RESET* push-button to continue.




7) The word ZERO and ENG. UNIT will appear in the top half of the LCD prompting you to enter the lowest value for the range in the units to match the display of the instrument being calibrated. Turn the knob until the lowest value of your chosen range flashes in the top half of the LCD. Press the *STORE* or *RESET* push-button to continue.




# OPERATING INSTRUCTIONS

## USING ENGINEERING UNITS

8) The word SPAN and ENG. UNIT will appear in the bottom half of the LCD prompting you to enter the highest value for the range in the units to match the display of the instrument being calibrated. Turn the knob until the highest value of your chosen range flashes in the bottom half of the LCD. Press the *STORE* or *RESET* push-button to continue.

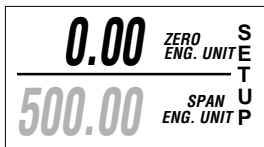

9) The Model 934 will now begin operating with the ranges and Engineering Units you have selected. If Engineering Units have been chosen for any Source function the HI & LO QUIK-CHEKs will automatically be updated with the units you have chosen. Refer to the sections for READ or SOURCE FUNCTIONS for further instructions.

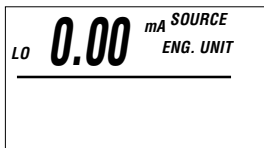

# OPERATING INSTRUCTIONS

## SOURCE MODE

---

### SOURCE


- 1) Move the POWER switch to *ON*
- 2) Press & hold both the *STORE* & *RESET* push-buttons for 1 second to enter the SETUP mode. The word SETUP will appear in the LCD and the words SOURCE and READ will alternately flash. Release both push-buttons.
- 3) Press the *STORE* push-button. The words SETUP and SOURCE will remain on the LCD and the previously selected function will repeatedly flash.
- 4) Turn the knob (Digital-Pot) to scroll through the available functions. Each enabled function will flash on the LCD (See ENABLING RANGES & FUNCTIONS, page 6).
- 5) Press the *STORE* push-button to select the function. If AUTO-CHEK has been enabled you can choose to have the 934 automatically step the output (See AUTO-CHEK, page 24). If AUTO CHEK is not enabled or selected the 934 will immediately output the prior value for that function. If OFF is selected the SOURCE function will be deactivated and the top half of the LCD will be blank.
- 6) Adjust the knob to the desired output value or QUIK-CHEK with previously stored outputs (see STORING QUIK-CHEK OUTPUTS, page 16).
- 7) Connect the Model 934 to the input terminals of the instrument or meter to be calibrated.



# OPERATING INSTRUCTIONS

## SOURCE MODE

Whenever SOURCE mode is selected the word SOURCE will appear on the LCD display. To change the output value, turn the speed sensitive digital pot. Turning the knob slowly will cause a gradual change in the output. A faster rate of change will occur when the knob is turned faster. This function operates in all three output positions (HI, SET & LO).

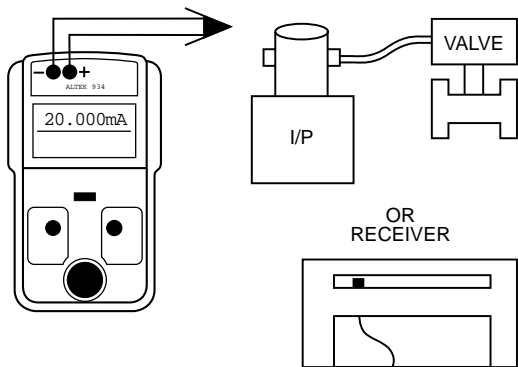

# OPERATING INSTRUCTIONS

## SOURCE MODE

### STORING QUIK-CHEK OUTPUTS



- 1) Switch to HI or LO
- 2) Turn the knob to desired value
- 3) Press the *STORE* push-button  
The LCD will flash once to show that the value was saved

If a value is in the SET position and you want that value stored in HI or LO, press and hold the *STORE* push-button while moving the switch to HI or LO. The display will flash once to indicate the value has been stored. Then release the *STORE* push-button.

### RECALLING QUIK-CHEK OUTPUTS



Any time you need a stored value just flip the QUIK-CHEK switch. Any value for the selected range may be stored in HI & LO. The Model 934 remembers the HI, LO and SET values for all ranges (32 memories) with the power on or off. Each time a different range is selected, the last three QUIK-CHEK values for that type will be recalled.

# OPERATING INSTRUCTIONS

## SOURCE FUNCTIONS

The SOURCE functions generate or control the desired signal. Multiple scales are available for each function. Engineering Units & % DP Flow must be enabled before they are available for selection.


### CALIBRATE MILLIAMP INPUTS

#### mA, mA %, mA ENG. UNIT, mA % DP FLOW

Choose this function to provide an output from 0.000 to 24.000 milliamps. The compliance voltage is a nominal 24 VDC to provide the driving power to your milliamp receivers.

- 1) Disconnect one or both input wires from the device to be calibrated
- 2) Connect the red *SOURCE* lead of the calibrator to the plus (+) input of the device and the black *SOURCE* lead to the minus (-)

Output current is continuously adjustable with the "QUIK-CHEK" switch in the *SET* position. Zero & Span (or any other values) are available by using the *LO* and *HI* "QUIK-CHEKs".

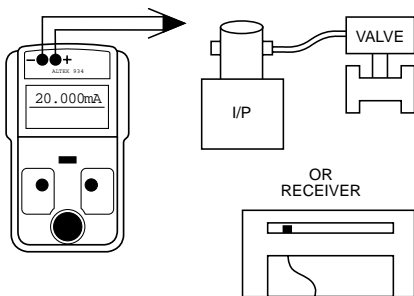

# OPERATING INSTRUCTIONS


## SIMULATE 2-WIRE TRANSMITTERS

### 2-WIRE SIM mA, 2-WIRE SIM %, 2-WIRE SIM ENG. UNIT, 2-WIRE SIM % DP FLOW

Choose this function to simulate a 2-Wire Transmitter output from 3.000 to 24.000 milliamps. Operates in loops with power supply voltages from 2 to 45 VDC.

- 1) Disconnect existing 2-Wire Transmitter from the loop
- 2) Connect the red *SOURCE* lead of the calibrator to the plus (+) input of the field connections and the black *SOURCE* lead to the minus (-)

The simulated output of the 2-Wire Transmitter is continuously adjustable from 3.000 to 24.000 mA with the "QUIK-CHEK" switch in the *SET* position. Zero & Span (or any other values) are available by using the LO and HI "QUIK-CHEKs".

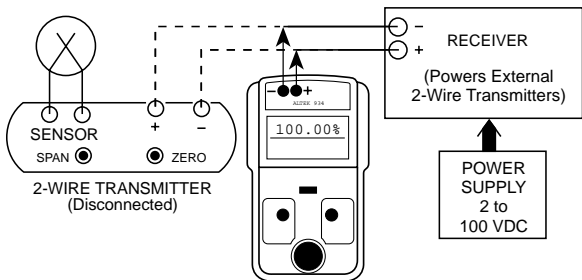

# OPERATING INSTRUCTIONS


## POWER & MEASURE 2-WIRE TRANSMITTERS

### PWR XMTR mA, PWR XMTR %, PWR XMTR ENG. UNIT, PWR XMTR, % DP FLOW

Choose this function to simultaneously supply power to a 2-Wire transmitter while displaying the 4-20 mA output of the transmitter.

- 1) Disconnect one or both input wires from the 2-Wire Transmitter to be calibrated
- 2) Connect the red *SOURCE* lead of the calibrator to the plus (+) input of the device and the black *SOURCE* lead to the minus (-)
- 3) Connect an appropriate sensor or calibrator to the input of the 2-Wire Transmitter

The Model 934 supplies a nominal 24 Volts DC at 24 mA to the 2-Wire transmitter. The current passed by the transmitter will be accurately displayed by the 934. Calibrate the Transmitter in the usual manner and disconnect the Model 934.

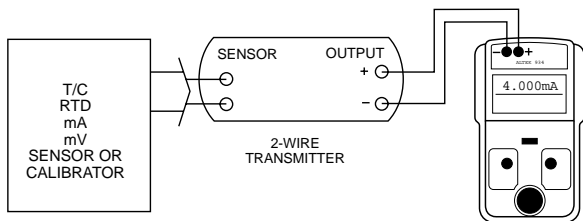

# OPERATING INSTRUCTIONS

## CALIBRATE VOLTAGE INPUTS


V, V ENG. UNIT

mV, mV ENG. UNIT

Choose this function to provide an output from 0.00 mV to 999.90 mV and from 0.000 to 20.000 VDC. Source current is a nominal 25 mA to provide the driving power to your voltage receivers.

- 1) Disconnect one or both input wires from the device to be calibrated
- 2) Connect the red *SOURCE* lead of the calibrator to the plus (+) input of the device and the black *SOURCE* lead to the minus (-)

Output voltage is continuously adjustable with the "QUIK-CHEK" switch in the *SET* position. Zero & Span (or any other values) are available by using the LO and HI "QUIK-CHEKS".

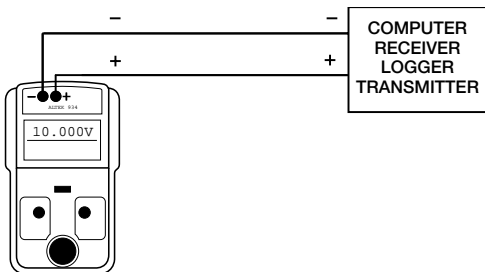


# OPERATING INSTRUCTIONS

## CALIBRATING LOOP CONVERTERS & I/I ISOLATORS

Calibrate your 4-20 milliamp and voltage loop converters and I/I isolators without any additional test equipment or power supplies.

- 1) Setup the Model 934 to select both the correct SOURCE and READ functions and ranges to match the instrument being calibrated.
- 2) Connect the Model 934 SOURCE and READ leads to the input and output connections of the instrument being calibrated

Some loop isolators require a resistor placed in series with the output of the isolator of either 250 Ohms or a value equivalent to the resistance of the loop. Check the manual for your isolator for specific instructions.

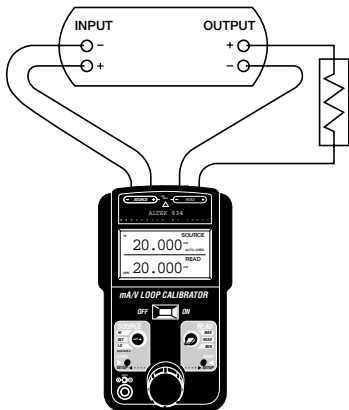

## OPERATING INSTRUCTIONS

### CHECK 1-5 VOLT INPUTS WITHOUT DISCONNECTING WIRES

---

Most 1-5 Volt receivers in 4-20mA loops have a 250 Ohm resistor across the input of the receiver. This resistor may be mounted internally or externally. The Model 934 is connected directly across the input of the 1-5 Volt receiver without disconnecting any field wiring. This saves a great deal of time when a large number of voltage receivers, such as chart recorders or computer systems require calibration.

Output voltage is continuously adjustable with the "QUIK-CHEK" switch in the *SET* position. Zero & Span (or any other values) are available by using the LO and HI "QUIK-CHEKs". The LO & HI "QUIK-CHEK"s are usually set to 1.000 and 5.000 V to quickly calibrate Zero & Span.

Make certain that changing the signal input will not disturb the process or cause unexpected alarms when checking on-line instruments. It is important to remember the Model 934 drives *only* the device to which it is connected. It has no effect on other devices in the 4 to 20 mA loop. The Model 934 will clamp the selected value in the mV and V Ranges to the maximum sink current of >16 mA.




# OPERATING INSTRUCTIONS

V, V ENG. UNIT

mV, mV ENG. UNIT

Choose this function to calibrate any 1 to 5 Volt device in a 4 to 20 mA loop without breaking the loop or turning off the signal current.

- 1) Disconnect one or both input wires from the device to be calibrated.
- 2) Connect the red *SOURCE* lead of the calibrator to the plus (+) input of the device and the black *SOURCE* lead to the minus (-). Any associated 250 Ohm resistor must not be disconnected.

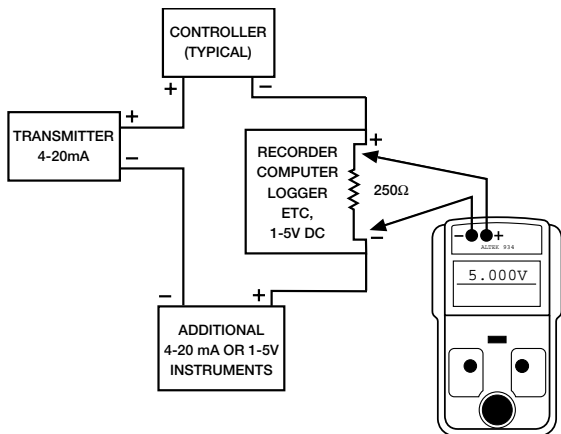

# OPERATING INSTRUCTIONS

## USING AUTO-CHEK


Use the AUTO-CHEK to continuously switch the Model 934's output from Zero to Span (stored in the HI and LO QUIK-CHEKs) in 2, 3, 5 or 10 equal steps at an interval of between 5 and 900 seconds per step. Set your calibrator at one point in the field and calibrate every device in the loop.

1) Store the required Span & Zero into the HI & LO QUIK-CHEK positions (refer to **STORING QUIK-CHEK OUTPUTS**, page 16).

2) Press & hold both push-buttons (*STORE & RESET*) for 1 second to enter the SETUP mode. The word SETUP will appear in the LCD and the words SOURCE and READ will flash (shown as gray).



3) Press the *STORE* push-button. The words SETUP and SOURCE will remain on the LCD and the previously selected function will flash.

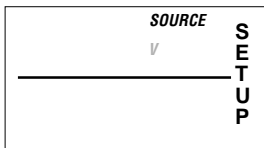


4) Turn the knob (digital pot) to scroll through the available functions. Each enabled function will flash on the LCD.




# OPERATING INSTRUCTIONS

## USING AUTO-CHEK

- 5) Press the *STORE* push-button to select the function. AUTO-CHEK will appear on the display along with the words **on** or **OFF**. Rotate the knob until the word **on** appears on the display. If AUTO-CHEK has not been enabled the word AUTO-CHEK will not appear - see ENABLING RANGES & FUNCTIONS, page 6. Press the *STORE* push-button to continue.

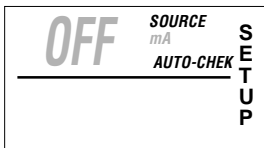


- 6) The word AUTO CHEK and % appear on the LCD prompting you to enter the percent of span change between steps. Turn the knob until the correct percentage appears on the LCD. For 2 steps choose 100%, 3 steps choose 50%, 5 steps choose 25% and for 10 steps choose 10%. Press the *STORE* push-button to continue.

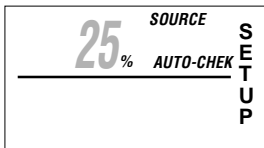

# OPERATING INSTRUCTIONS

## USING AUTO-CHEK

7) The words **AUTO-CHEK** and **TIME** appear on the LCD prompting you to enter the number of seconds between steps. Turn the knob until the correct number of seconds per step (from 5 to 900) appears on the LCD. Press the **STORE** push-button to continue.

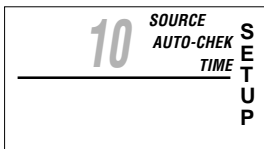

8) Move the **QUIK-CHEK** switch to **SET**. Press the **STORE** push-button to turn the **AUTO-CHEK** on.



The word **AUTO-CHEK** will flash while **AUTO-CHEK** is active. The output pauses at each step for the number of seconds selected then proceeds to the next higher step.



When the top step is reached (the value stored in the **HI QUIK-CHEK**) the **AUTO-CHEK** reverses direction and the output proceeds to the next lower step. This cycle repeats continuously until it is deactivated.



# OPERATING INSTRUCTIONS

## USING AUTO-CHEK

You can deactivate the AUTO-CHEK function at any time by pressing the *STORE* push-button while the QUIK-CHEK switch is at *SET* or by moving the QUIK-CHEK switch to *HI* or *LO*. AUTO-CHEK will stop flashing to indicate that it is deactivated. *SET* will indicate the the most recent step value.



*HI* **20.000** *SOURCE*  
*mA*  
*AUTO-CHEK*

While AUTO-CHEK is deactivated the QUIK-CHEK values stored in *HI* and *LO* can be recalled to adjust the Span and Zero of the device being calibrated. Or store new values by switching to *HI* and *LO*, turning the digital pot and pressing the *STORE* pushbutton.



*HI* **24.000** *SOURCE*  
*mA*  
*AUTO-CHEK*

To reactivate AUTO-CHEK press the *STORE* push-button while the QUIK-CHEK switch is at *SET*. When AUTO-CHEK is reactivated it restarts the cycle from the lowest output (stored in the *LO* QUIK-CHEK).



**4.000** *SOURCE*  
*mA*  
*AUTO-CHEK*

# OPERATING INSTRUCTIONS

## READ MODE

---

### READ

- 1) Move the POWER switch to *ON*
- 2) Press & hold both the *STORE* & *RESET* push-buttons for 1 second to enter the SETUP mode. The word SETUP will appear in the LCD and the words SOURCE and READ will alternately flash. Release both push-buttons.
- 3) Press the *RESET* push-button. The words SETUP and READ will remain on the LCD and the previously selected function will flash.
- 4) Turn the knob (Digital pot) to scroll through the available functions. Each enabled function will flash on the LCD (See ENABLING RANGES & FUNCTIONS under OPERATING INSTRUCTIONS, GENERAL).
- 3) Press the *RESET* push-button to select the function. If OFF is selected the READ function will be deactivated and the bottom half of the LCD will be blank.
- 4) Connect the Model 934 to the input terminals of the instrument or meter to be calibrated.
- 5) Display the present reading, Maximum or Minimum

Whenever READ is selected the word READ will appear on the LCD display. The display will update the present reading twice per second.

# OPERATING INSTRUCTIONS

## READ MODE

---

### MIN/MAX



To read the Maximum or Minimum INPUT since READ mode was entered, simply switch to *MAX* or *MIN*. The value will appear on the LCD along with the word MAX or MIN. The MAX/MIN values are automatically updated and may be viewed at any time without disturbing the other values.

### RESTARTING MIN/MAX

Pressing the *RESET* push-button will cause the 934 to store the present reading into the MIN and MAX memories. Upon releasing the *RESET* push-button the Model 934 will resume reading the input and update the MAX & MIN values as the measured signal changes.

### OUT OF RANGE SIGNALS

**OVER  
UNDER**

Signals above or below those available for the currently selected range will be indicated by OVER and UNDER on the display.

# OPERATING INSTRUCTIONS

## READ FUNCTIONS

The READ functions measures the desired signal. Multiple scales are available for each function. Engineering Units & % DP Flow must be enabled before they are available for selection.


### READ MILLIAMP OUTPUTS

#### mA, mA %, mA ENG. UNIT, mA % DP FLOW

Choose this function to measure from -52.00 to +52.00 milliamps. For calibrating controller output and checking process loop currents the input is autoranged to higher resolution from -24.000 to +24.000 milliamps.

- 1) Open the current loop at any convenient point along the signal path
- 2) Connect the red *READ (+)* lead of the calibrator to the more positive point of the break and the black *READ (-)* lead (-) to the more negative

Display the present reading, Maximum or Minimum by moving the toggle switch from READ to MAX or MIN. If the Model 934 is connected in the wrong polarity, the display will indicate negative current. Simply reverse the leads for correct indication.

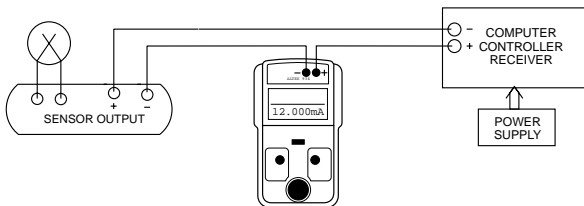



# OPERATING INSTRUCTIONS


## READ VOLTAGE OUTPUTS

### V, mV, V ENG. UNIT

Choose this function to measure from -99.990 to + 99.990 Volts. For checking sensor outputs and other low level signals the input is autoranged to display from -999.90 to +999.90 millivolts.

- 1) Connect the red *READ (+)* lead and the black *READ (-)* of the calibrator across the voltage to be measured.

Loop power supplies, signal voltages at receivers, batteries, transmitter voltage drops and any other voltages may be measured. Signals above or below those available for the currently selected range will be indicated by OVER and UNDER on the display.

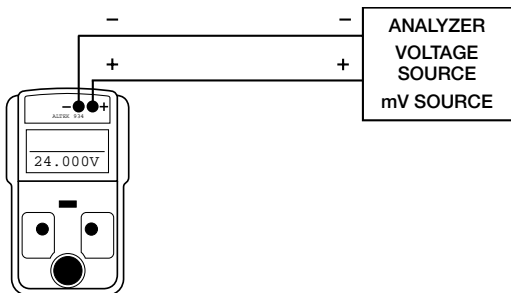

# SPECIFICATIONS

(Unless otherwise indicated, specifications are in  $\pm\%$  of Reading @ 23°C)

## GENERAL

**ACCURACY:**  $\pm(0.012\%$  of Reading + 0.008% of Full Scale Reading)

*Accuracy of scaled ranges (% of 4 to 20 mA, %DP Flow, Engineering units) are based on the value of the fundamental units (mA, V or mV).*

**WARM UP TIME:** 10 seconds to specified accuracy, 2 minutes to maximum accuracy

**TEMPERATURE EFFECT:**  $\pm 0.008\%/^{\circ}\text{C}$  based on  $23^{\circ}\text{C} \pm 25^{\circ}\text{C}$

**ISOLATION:** 500 VDC between SOURCE & READ leads

*Accuracies of the Source and Read ranges are independent. When Source and Read are connected together the accuracies are additive.*

**BATTERIES:** Six "AA", (R6) batteries (Alkaline supplied and recommended)

**BATTERY LIFE:**

MILLIAMPER SOURCE & 2-WIRE MODES: Nominal 33 hours at 12 mA, 20 hours at 20 mA into 250 Ohm load

OTHER FUNCTIONS: Nominal 40 hours

**AC ADAPTORS:** Optional, nominal 115 or 230 VAC, 50/60 Hz

**LOW BATTERY INDICATION:** "BAT" indication on the display at approximately 4 hours left

**OVERVOLTAGE PROTECTION:** Protected to 120 Volts AC or DC in all ranges without fuses for 30 seconds

**OUTPUT NOISE:**  $\leq 1$  LSD at frequencies less than 10 Hz

**NORMAL MODE REJECTION RATIO:** 50 dB @ 50/60Hz

**COMMON MODE REJECTION RATIO:** Not applicable for battery operation. 120 dB @ 50/60 Hz with AC Adaptor

**OPERATING TEMPERATURE RANGE:**

-5 to +130°F (-20 to +55°C)

**STORAGE TEMPERATURE RANGE:**

-13 to +130°F (-25 to +55°C)

**RELATIVE HUMIDITY:** 10 to 90%, non-condensing for 24 hours from 0 to 35°C

**OVERALL SIZE:**  $6 \frac{11}{16} \times 4 \times 2 \frac{15}{16}$  inches (170 x 102 x 75 mm)

**WEIGHT:** 1lb, 9oz (0.709 kg)

# SPECIFICATIONS

## MILLIAMP SOURCE

---

### **RANGES:**

0.000 to 24.000 mA

-25.00 to 125.00% of 4 to 20 mA

-50.0 to 111.8% of % DP Flow

Scaled Engineering Units (from -90000 to +90000

counts with up to three digits to the right of the decimal point)

**ACCURACY:**  $\pm(0.012\%$  of Reading + 0.008% of 24.000 mA)

**TYPICAL DRIVE CAPABILITY:** 1200 Ohms @ 20.000 mA

**POWER TO DRIVE RECEIVER:** nominal 24 VDC

### **COMPLIANCE VOLTAGE:**

0 to 285 Ohm load: 10V nominal

285 to 1200 Ohm load: 24V nominal

**OVERLOAD PROTECTION:** Current limited to 25 mA

## POWER & MEASURE 2-WIRE TRANSMITTERS

---

**RANGES & ACCURACY:** Same as for MILLIAMP  
SOURCE above

**OUTPUT CURRENT:** up to 24.000 mA

**TYPICAL DRIVE CAPABILITY:** 1200 Ohms @ 20 mA

**POWER TO EXTERNAL 2-WIRE TRANSMITTER:**  
nominal 24 VDC

**OVERLOAD PROTECTION:** Current limited to 25 mA

# SPECIFICATIONS

## 2-WIRE TRANSMITTER SIMULATOR

---

### RANGES:

3.000 to 24.000 mA

-6.25 to 125.00% of 4 to 20 mA

-25.0 to 111.8% of % DP Flow

Scaled Engineering Units (from -90000 to +90000 counts with up to three digits to the right of the decimal point)

**ACCURACY:**  $\pm(0.012\%$  of Reading + 0.008% of 24.000 mA)

### LOOP VOLTAGE LIMITS:

Minimum, 3 VDC; Maximum 45 VDC

**OVERLOAD PROTECTION:** Current limited to 25 mA

## MILLIAMPERE READ

---

### RANGES:

-52.00 to -24.00<sup>1</sup>

-24.000 to +24.000 mA<sup>2</sup>

24.00 to 52.00 mA<sup>1</sup>

-25.00 to 125.00% of 4 to 20 mA

-50.0 to 111.8% of % DP Flow

Scaled Engineering Units (from -90000 to +90000 counts with up to three digits to the right of the decimal point)

<sup>1</sup>**ACCURACY:**  $\pm(0.012\%$  of Reading + 0.008% of 52.00 mA)

<sup>2</sup>**ACCURACY:**  $\pm(0.012\%$  of Reading + 0.008% of 24.000 mA)

**INPUT IMPEDANCE:** 25 Ohms

### VOLTAGE BURDEN:

0.2 V at 4 mA, 0.6 V at 20 mA, 1.4 V at 50 mA

**MEASURING ACROSS A DIODE:** Add  $\pm 0.2\%$  to specification from 0 to 20 mA (Diode 1N 914 or equivalent)

# SPECIFICATIONS

## VOLTAGE SOURCE

---

### RANGES:

0.00 to 999.90 mVDC<sup>1</sup>

0.000 to 20.000 VDC<sup>2</sup>

Scaled Engineering Units (from -90000 to +90000 counts with up to three digits to the right of the decimal point)

<sup>1</sup>**ACCURACY:**  $\pm(0.012\%$  of Reading + 0.008% of 999.90 mV)

<sup>2</sup>**ACCURACY:**  $\pm(0.012\%$  of Reading + 0.008% of 20.000 V)

**SOURCE CURRENT:** > 24 mA

**SINK CURRENT:** >16 mA from 1 to 5 VDC

**OUTPUT IMPEDANCE:** < 0.2 Ohm

**LOAD RESISTANCE:** > 3 Ohms

**SHORT CIRCUIT DURATION:** Infinite

**OVERLOAD PROTECTION:** Current limited to 50 mA nominal

## VOLTAGE READ

---

### RANGES:

-99.990 to -0.999 VDC<sup>1</sup>

-999.90 to 999.90 mVDC<sup>2</sup>

0.999 to 99.990 VDC<sup>1</sup>

Scaled Engineering Units (from -90000 to +90000 counts with up to three digits to the right of the decimal point)

<sup>1</sup>**ACCURACY:**  $\pm(0.012\%$  of Reading + 0.008% of 99.900 V)

<sup>2</sup>**ACCURACY:**  $\pm(0.012\%$  of Reading + 0.008% of 999.90 mV)

**INPUT RESISTANCE:** 2 Meg Ohm nominal

**SOURCE RESISTANCE EFFECT:** 0.01% error per 200 Ohms

**MAXIMUM VOLTAGE LIMIT:** 120 Volts DC to 100 Hz AC

# SPECIFICATIONS

## MODEL 934 RANGES AND ACCURACIES

### Source mA & Simulate 2-Wire Transmitter<sup>1</sup>

mA OUTPUT	LOW LIMIT	HIGH LIMIT	ACROSS <sup>2</sup> 100 OHM	LOW <sup>2</sup> LIMIT	HIGH <sup>2</sup> LIMIT
<b>24.000mA</b>	<b>23.995</b>	<b>24.005</b>	<b>(2.4000V</b>	<b>2.3995</b>	<b>2.4005)</b>
<b>20.000</b>	<b>19.996</b>	<b>20.004</b>	<b>(2.0000</b>	<b>1.9996</b>	<b>2.0004)</b>
<b>12.000</b>	<b>11.997</b>	<b>12.003</b>	<b>(1.2000</b>	<b>1.1997</b>	<b>1.2003)</b>
<b>4.000</b>	<b>3.998</b>	<b>4.002</b>	<b>(0.4000</b>	<b>0.3998</b>	<b>0.4002)</b>
<b>0.000</b>	<b>-0.002</b>	<b>0.002</b>	<b>(0.0000</b>	<b>-0.0002</b>	<b>0.0002)</b>

### Source % 4-20 mA & Simulate 2-Wire Transmitter<sup>1</sup>

%4-20mA OUTPUT	LOW LIMIT	HIGH LIMIT	ACROSS <sup>2</sup> 100 OHM	LOW <sup>2</sup> LIMIT	HIGH <sup>2</sup> LIMIT
<b>125.00%</b>	<b>23.995</b>	<b>24.005</b>	<b>(2.4000V</b>	<b>2.3995</b>	<b>2.4005)</b>
<b>100.00</b>	<b>19.996</b>	<b>20.004</b>	<b>(2.0000</b>	<b>1.9996</b>	<b>2.0004)</b>
<b>50.00</b>	<b>11.997</b>	<b>12.003</b>	<b>(1.2000</b>	<b>1.1997</b>	<b>1.2003)</b>
<b>0.00</b>	<b>3.998</b>	<b>4.002</b>	<b>(0.4000</b>	<b>0.3998</b>	<b>0.4002)</b>
<b>-25.00</b>	<b>-0.002</b>	<b>0.002</b>	<b>(0.0000</b>	<b>-0.0002</b>	<b>0.0002)</b>

### Source % DP Flow & Simulate 2-Wire Transmitter

%FLOW OUTPUT	LOW LIMIT	HIGH LIMIT	ACROSS <sup>2</sup> 100 OHM	LOW <sup>2</sup> LIMIT	HIGH <sup>2</sup> LIMIT
<b>100.00%DP</b>	<b>19.996</b>	<b>20.004</b>	<b>(2.0000V</b>	<b>1.9996</b>	<b>2.0004)</b>
<b>50.00</b>	<b>7.997</b>	<b>8.003</b>	<b>(0.8000</b>	<b>0.7997</b>	<b>0.8003)</b>
<b>0.00</b>	<b>3.998</b>	<b>4.002</b>	<b>(0.4000</b>	<b>0.3998</b>	<b>0.4002)</b>

### Power & Measure 2- Wire Transmitters

mA OUTPUT	LOW LIMIT	HIGH LIMIT	ACROSS <sup>2</sup> 100 OHM	LOW <sup>2</sup> LIMIT	HIGH <sup>2</sup> LIMIT
<b>24.000mA</b>	<b>23.995</b>	<b>24.005</b>	<b>(2.4000V</b>	<b>2.3995</b>	<b>2.4005)</b>
<b>20.000</b>	<b>19.996</b>	<b>20.004</b>	<b>(2.0000</b>	<b>1.9996</b>	<b>2.0004)</b>
<b>12.000</b>	<b>11.997</b>	<b>12.003</b>	<b>(1.2000</b>	<b>1.1997</b>	<b>1.2003)</b>
<b>4.000</b>	<b>3.998</b>	<b>4.002</b>	<b>(0.4000</b>	<b>0.3998</b>	<b>0.4002)</b>
<b>0.000</b>	<b>-0.002</b>	<b>0.002</b>	<b>(0.0000</b>	<b>-0.0002</b>	<b>0.0002)</b>

# SPECIFICATIONS

## MODEL 934 RANGES AND ACCURACIES

Source Volts		
VOLT	LOW	HIGH
OUTPUT LIMIT	LIMIT	LIMIT
<b>20.000V</b>	<b>19.997</b>	<b>20.003</b>
<b>10.000</b>	<b>9.998</b>	<b>10.002</b>
<b>5.000</b>	<b>4.998</b>	<b>5.002</b>
<b>1.000</b>	<b>0.999</b>	<b>1.001</b>
<b>0.000</b>	<b>-0.001</b>	<b>0.001</b>

Source Millivolts		
mV	LOW	HIGH
OUTPUT LIMIT	LIMIT	LIMIT
<b>999.90mV</b>	<b>999.70</b>	<b>1000.10</b>
<b>500.00</b>	<b>499.86</b>	<b>500.14</b>
<b>100.00</b>	<b>99.91</b>	<b>100.09</b>
<b>10.00</b>	<b>9.92</b>	<b>10.08</b>
<b>0.00</b>	<b>-0.08</b>	<b>0.08</b>

Read Volts <sup>3</sup>		
VOLT	LOW	HIGH
INPUT LIMIT	LIMIT	LIMIT
<b>99.990V</b>	<b>99.970</b>	<b>100.010</b>
<b>50.000</b>	<b>49.986</b>	<b>50.014</b>
<b>20.000</b>	<b>19.997</b>	<b>20.003</b>
<b>10.000</b>	<b>9.998</b>	<b>10.002</b>
<b>5.000</b>	<b>4.998</b>	<b>5.002</b>
<b>1.000</b>	<b>0.999</b>	<b>1.001</b>

Read Millivolts <sup>3</sup>		
mV	LOW	HIGH
INPUT LIMIT	LIMIT	LIMIT
<b>999.90mV</b>	<b>999.70</b>	<b>1000.10</b>
<b>500.00</b>	<b>499.86</b>	<b>500.14</b>
<b>100.00</b>	<b>99.91</b>	<b>100.09</b>
<b>10.00</b>	<b>9.92</b>	<b>10.08</b>
<b>0.00</b>	<b>-0.08</b>	<b>0.08</b>

Read mA <sup>3</sup>		
mA	LOW	HIGH
INPUT LIMIT	LIMIT	LIMIT
<b>52.00mA</b>	<b>51.99</b>	<b>52.01</b>
<b>30.00</b>	<b>29.99</b>	<b>30.01</b>
<b>24.000</b>	<b>23.995</b>	<b>24.005</b>
<b>20.000</b>	<b>19.996</b>	<b>20.004</b>
<b>12.000</b>	<b>11.997</b>	<b>12.003</b>
<b>4.000</b>	<b>3.998</b>	<b>4.002</b>
<b>0.000</b>	<b>-0.002</b>	<b>0.002</b>

Read % 4-20 mA			
mA	%4-20mA	LOW	HIGH
INPUT	INPUT	LIMIT	LIMIT
<b>24.000mA</b>	<b>125.00%</b>	<b>124.97</b>	<b>125.03</b>
<b>20.000</b>	<b>100.00</b>	<b>99.97</b>	<b>100.03</b>
<b>12.000</b>	<b>50.00</b>	<b>49.98</b>	<b>50.02</b>
<b>4.000</b>	<b>0.00</b>	<b>-0.02</b>	<b>0.02</b>
<b>0.000</b>	<b>-25.00</b>	<b>-25.01</b>	<b>-24.99</b>

Read % DP Flow			
mA	%FLOW	LOW	HIGH
INPUT	INPUT	LIMIT	LIMIT
<b>20.000mA</b>	<b>100.0%DP</b>	<b>100.0</b>	<b>100.0</b>
<b>8.000</b>	<b>50.0</b>	<b>50.0</b>	<b>50.0</b>
<b>4.000</b>	<b>0.0</b>	<b>-1.2</b>	<b>1.2</b>

<sup>1</sup>*Simulate 2-Wire Transmitter range is from 3.000 to 24.000 mA*

<sup>2</sup>*100 Ohm resistor is used in the calibration procedure (See page 38)*

<sup>3</sup>*LOW & HIGH LIMITS are identical for negative readings*

# CALIBRATION PROCEDURE

## SUGGESTED EQUIPMENT


- 1) Digital voltmeter with accuracy of  $\pm 0.003\%$  of reading at 2V and  $\pm 0.005\%$  of reading at 100V  
**Important:** The required accuracy is usually found only on meters with  $7\frac{1}{2}$  or more digits
- 2) 100 Ohm laboratory standard resistor with accuracy of  $\pm 0.003\%$
- 3) Adjustable DC Voltage source, 0 to 95.000 VDC with resolution of 0.001 V and 0.01 mV
- 4) Adjustable DC current source, 0 to 24.000 mA with resolution of 0.001 mA.

**An  $8\frac{1}{2}$  Digit Multimeter with DC current accuracy of  $\pm 30$  PPM may be substituted for items 1 & 2 to calibrate the mA ranges**

**Recommended calibration adjustments in this procedure have been calculated to  $\frac{1}{2}$  of specification. See pages 36 & 37 for a table of published specifications which may be used to obtain "As Received" & "Adjusted" Test Data points.**

## ENABLING CALIBRATION

**Allow one hour for the Model 934 to stabilize to the ambient temperature of the calibration room. Remove the battery cover and the 4 black phillips head screws. While holding the 934 face down in one hand carefully separate the top and bottom of the housing. Place the unit into calibration mode by placing the jumper located on the bottom board into the CAL position.**

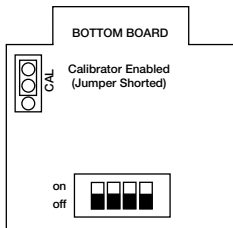

**During calibration the top half of the 934's LCD display prompts you with the input or output value being calibrated. The bottom half indicates the measurement computed by the Model 934. When a pushbutton is pressed to store a calibration reading the value in the top half of the LCD flashes once. Please pause for 10 seconds before proceeding for the 934 to compute the new calibration values.**




# CALIBRATION PROCEDURE

## SOURCE MODE ADJUSTMENT

To change the output of the Model 934 during the calibration of the SOURCE functions both coarse and fine adjustments are used. Place the *READ* toggle switch in the MAX position for coarse adjustment and move the *READ* toggle switch to the READ position for fine adjustment.

### mA

- 1) Connect the Source leads in series with the 100 Ohm resistor. Connect the DVM parallel with the 100 Ohm resistor (See below).
- 2) Turn the unit on and wait for the unit to go into calibration mode (SOURCE and READ flashing).
- 3) Press the *STORE* pushbutton to select Source Mode.
- 4) Turn the Digital Pot (yellow knob) until mA is displayed and press the *STORE* pushbutton.
- 5) Dial the output with the READ toggle switch in the MAX position (coarse adjust) until the DVM displays approximately 0.0 V. Move the READ toggle switch to READ (fine adjust) until the DVM reads  $0.0000V \pm 0.000096V$  and press the *STORE* pushbutton.
- 6) Dial the output (using the same coarse and fine adjustments) until the DVM reads  $2.4000V \pm 0.00024V$  and press the *STORE* pushbutton.
- 7) Turn the unit off.

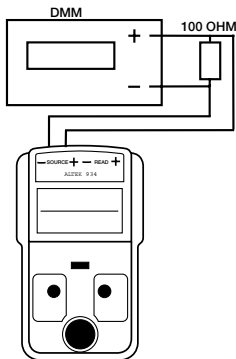


***If calibrating with an 8<sup>1</sup>/<sub>2</sub> digit multimeter directly in milliamps the calibration points are 0.000 mA  $\pm$  0.00096mA and 24.000 mA  $\pm$  0.0024mA***

# CALIBRATION PROCEDURE

## SOURCE MODE ADJUSTMENT

### 2-Wire Sim

- 1) Connect the Source leads in series with the current source set to 30 mA and the 100 Ohm resistor. Connect the DVM parallel with the 100 Ohm resistor (See below).
- 2) Turn the unit on and wait for the unit to go into calibration mode (SOURCE and READ flashing).
- 3) Press the *STORE* pushbutton to select Source Mode.
- 4) Turn the knob until 2-WIRE SIM is displayed and press the *STORE* pushbutton.
- 5) Disconnect the positive output lead from the 100 Ohm resistor and wait until the display reads 0.00 and press the *STORE* pushbutton.
- 6) Re-connect the positive output lead to the 100 Ohm resistor and dial the output until the DVM reads  $2.4000V \pm 0.00024V$  and press the *STORE* pushbutton.
- 7) Turn the unit off.

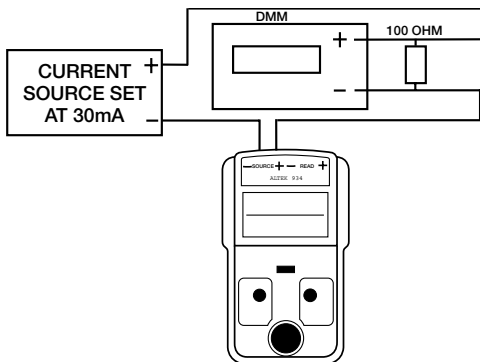

# CALIBRATION PROCEDURE


## SOURCE MODE ADJUSTMENT

### mV

- 1) Connect the Source leads to the DVM (See below).
- 2) Turn the unit on and wait for the unit to go into calibration mode (SOURCE and READ flashing).
- 3) Press the *STORE* pushbutton to select Source Mode.
- 4) Turn the knob until mV is displayed and press the *STORE* pushbutton.
- 5) Dial the output until the DVM reads  $0.000\text{mV} \pm 0.040\text{mV}$  and press the *STORE* pushbutton.
- 6) Dial the output until the DVM reads  $999.900\text{mV} \pm 0.100\text{mV}$  and press the *STORE* pushbutton.
- 7) Turn the unit off.

### V

- 1) Leave the Source leads connected as in the mV calibration
- 2) Turn the unit on and wait for the unit to go into calibration mode (SOURCE and READ flashing).
- 3) Press the *STORE* pushbutton to select Source Mode.
- 4) Turn the knob until V is displayed and press the *STORE* pushbutton.
- 5) Dial the output until the DVM reads  $0.0000\text{V} \pm 0.0022\text{V}$  and press the *STORE* pushbutton.
- 6) Dial the output until the DVM reads  $20.0000\text{V} \pm 0.002\text{V}$  and press the *STORE* pushbutton.
- 7) Turn the unit off.
- 8) Disconnect the source leads from the DVM.

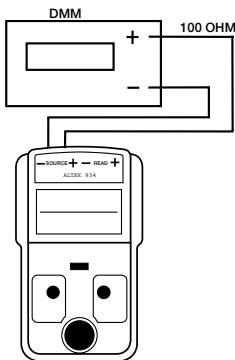



# CALIBRATION PROCEDURE


## READ MODE ADJUSTMENT

### mV


- 1) Connect the Read leads to a voltage source and place the DVM across the voltage source (See below).
- 2) Turn the unit on and wait for the unit to go into calibration mode (SOURCE and READ flashing).
- 3) Press the *RESET* pushbutton to select Read mode.
- 4) Dial the unit so mV is displayed press the *RESET* pushbutton.
- 5) Set the voltage source to 0.00mV so that the DVM reads 0.000mV  $\pm$ 0.040mV and press the *RESET* pushbutton.
- 6) Set the voltage source to 999.90mV so that the DVM reads 999.90mV  $\pm$ 0.100mV and press the *RESET* pushbutton.
- 7) Turn the unit off.

### V

- 1) Leave the Read leads connected as in the mV calibration
- 2) Turn the unit on and wait for the unit to go into calibration mode (SOURCE and READ flashing).
- 3) Press the *RESET* pushbutton to select Read mode.
- 4) Dial the unit so V is displayed and press the *RESET* pushbutton to select V.
- 5) Set the voltage source to 0.000V so that the DVM reads 0.0000V  $\pm$ 0.0004V and press the *RESET* pushbutton.
- 6) Set the voltage source to 95.000V so that the DVM reads 95.0000V  $\pm$ 0.0019V and press the *RESET* pushbutton.
- 7) Turn the unit off.

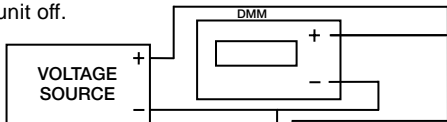

***After calibration has been completed place the unit into normal operating mode by placing the CAL Enable jumper back into the stored position (See figure page 38).***

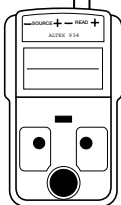

## **THREE YEAR WARRANTY**

---

Altek products are warranted to be free from defects in material and workmanship (excluding fuses, batteries and leads) for a period of one year from the date of shipment. Warranty repairs can be obtained by returning the equipment prepaid to our factory. Products will be replaced, repaired, or adjusted at our option. *Altek gives no other warranties, including any implied warranty of fitness for a particular purpose.* Also, Altek shall not be liable for any special, indirect, incidental or consequential damages or losses arising from the sale or use of its products.

**ORDERING INFORMATION****Part No.**

---

**MODEL 934 MULTIFUNCTION  
LOOP CALIBRATOR****934**

A carrying case is included with each Model 934

**Altek Industries, Inc.**

PO Box 1106, Everett, WA 98206

1520 75th Street SW, Everett, WA 98203

For more information:

U.S.A. (800) 322-5835

Fax (800) 265-6340

Service fax (425) 446-6331

E-mail: [sales@altekcalibrators.com](mailto:sales@altekcalibrators.com)

Web: [www.altekcalibrators.com](http://www.altekcalibrators.com)

PN 1886535 Rev A April 2002

©2002 Altek Industries, Inc. Specifications subject to change without notice.

All rights reserved. Printed in U.S.A.