



CLI Reference Guide for ArubaOS-CX, ArubaOS-Switch, Comware and Cisco IOS

Published: November 2018
Rev: 4

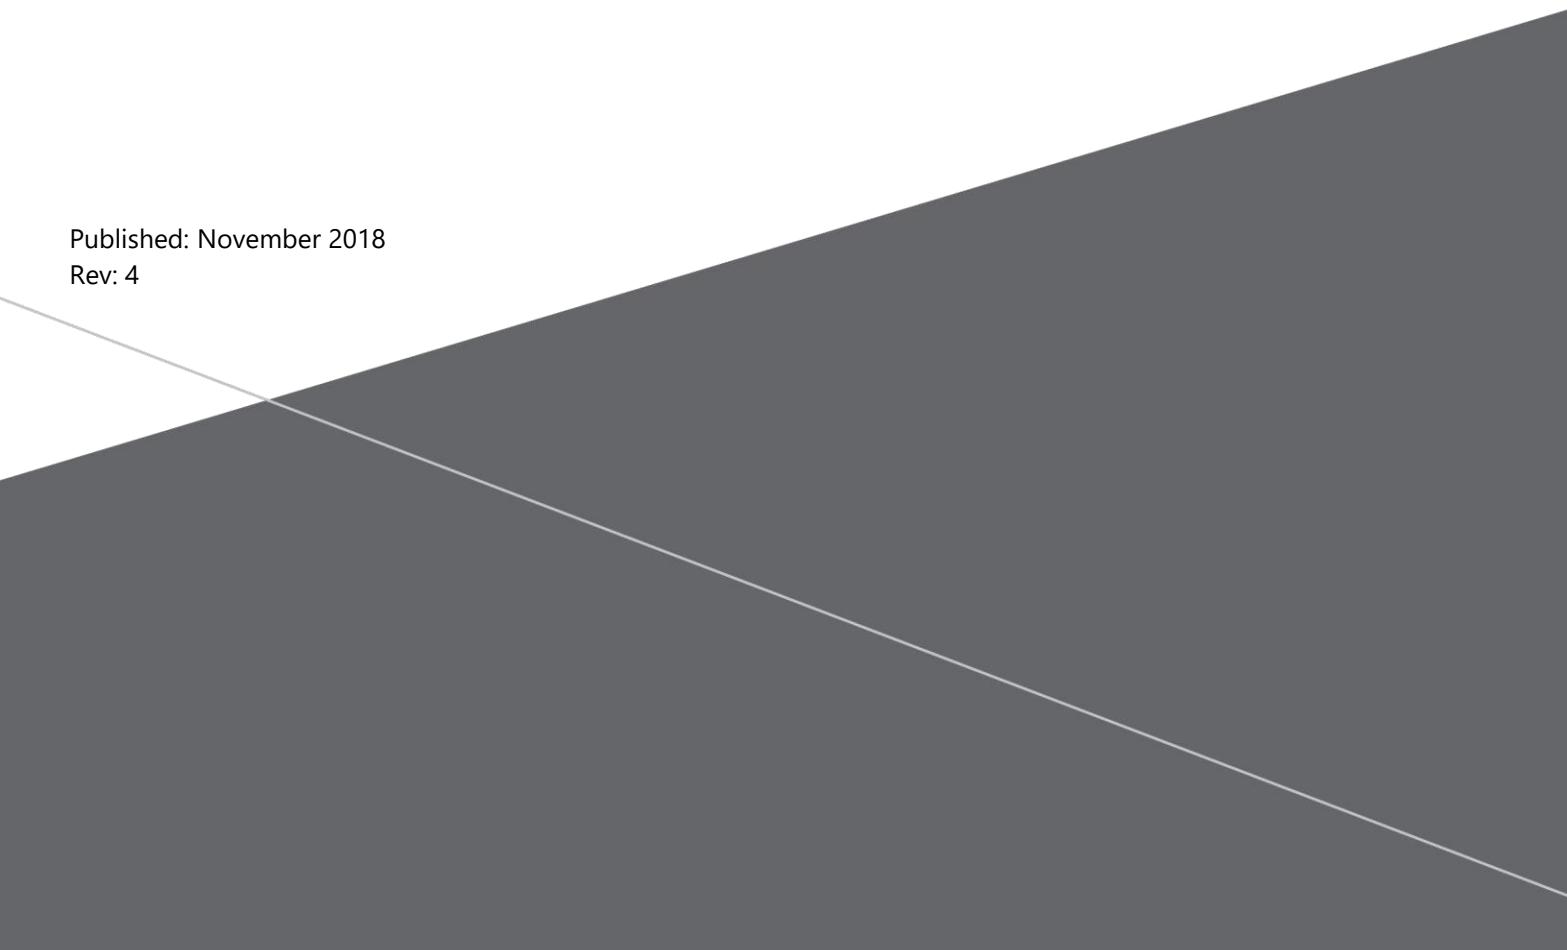


Table of Contents

Introduction.....	3
Using This Guide	4
Comware Differences	4
Navigation Differences Among CLIs.....	4
Configuration Differences Among CLIs	4
Terminology Differences	6
Disclaimer.....	6
Comparing View and Configuration Prompts	6
Comparing Frequently Used Commands.....	7
Chapter 1 Basic Switch Management.....	8
Management Access CLI comparision	8
Management Access Configurable options.....	8
Configuration Access CLI comparision	10
Configuration Access Configurable options.....	10
Console and Virtual Terminal Access—Timeout CLI comparision.....	12
Console and Virtual Terminal Access—Timeout Configurable options	12
Reload & Timed Reload CLI comparision.....	14
Reload & Timed Reload Configurable options.....	14
USB CLI comparision.....	19
USB CLI comparision Configurable options.....	19
System and Environment CLI comparision.....	21
System and Environment Configurable options	21
Remote Management Sessions—Viewing CLI comparision.....	31
Remote Management Sessions—Viewing CLI Configurable options	31
Tech Support Information Output Listing CLI comparision.....	33
Tech Support Information Output Listing CLI Configurable options.....	33
Motd CLI comparision.....	36
Motd CLI Configurable options	36
Source Interface for Management Communications CLI comparision.....	37

Source Interface for Management Communications CLI Configurable options.....	37
Chapter 2 Switch User ID and Password, and Console Access	41
Local User ID and Password, and console access CLI comparision	41
Local User ID and Password, and console access CLI Configurable options.....	42
Recover lost password CLI comparision	51
Recover lost password CLI Configurable options.....	51
Role based management CLI comparision.....	53
Role based management CLI Configurable options.....	53
Chapter 3 Time Service	66
NTP CLI Comparison.....	66
NTP Service configurable options	66
Chapter 4 CLI Management Access – SSH.....	75
SSH CLI Comparison.....	75
SSH Service configurable options.....	75
Chapter 5 GUI Management Access – HTTPS	84
HTTPS CLI Comparision	84
HTTPS Service configurable options.....	85
Chapter 6 Discovery Protocols – LLDP	88
LLDP CLI Comparision	88
LLDP configurable options	89
Chapter 7 Out-of-Band Management.....	98
Out-Of-Band CLI Comparision	98
Out-Of-Band configurable options.....	99
Chapter 8 Interface or Port Information and Nomenclature.....	115
Interface or Port Information CLI Comparision	115
Interface or Port Information configurable options	115
Chapter 9 Link Aggregation – LACP and Trunk	131
Link Aggregation Control Protocol (LACP) CLI comparision	131
Chapter 10 MSTP	141
MSTP CLI Comparison.....	141

MSTP CLI Configurable options.....	142
Chapter 11 VRRP	161
VRRP CLI Comparison	161
VRRP CLI Configurable options	162
Chapter 12 ACLs	171
ACL CLI Comparison.....	172
ACL CLI Configurable options.....	172
Chapter 13 BGP.....	179
BGP CLI Comparison.....	179
BGP CLI Configurable options.....	180
Chapter 14 OSPF.....	193
OSPF CLI Comparison.....	193
OSPF CLI Configurable options	193
Appendix A CLI Commands in ArubaOS-Switch Software	200
Fundamental Commands.....	200

CLI Reference Guide for ArubaOS-CX, ArubaOS-Switch, Comware and Cisco IOS

Introduction

Aruba designed this CLI Reference Guide to help Hewlett Packard Enterprise partners and customers who:

- Manage multi-vendor networks that include HPE/Aruba and Cisco core and aggregation switches
- Have experience deploying Cisco switches and are now deploying HPE/Aruba switches

This CLI Reference Guide compares many of the common commands in four switch operating systems: ArubaOS-CX, ArubaOS switch (now the Aruba OS), HPE Comware version 7, and Cisco IOS.

In this guide, we refer to 8400 as ArubaOS-CX, HPE ProVision as ArubaOS-Switch, HPE Comware as Comware7 and Cisco IOS is referenced as Cisco.

The ArubaOS-CX operating system runs on the 8400 and 8320 switches. The ArubaOS Switch operating system runs on Aruba 2530, Aruba 2920, Aruba 2930F, Aruba 2930M, Aruba 3810M, Aruba 5400R, HPE 2620, HPE 3500, HPE 5400 and HPE 3800 switch platforms.

The HPE Comware7 operating system runs on HPE FF 12900, HPE 12500, HPE 10500, HPE FF 7900, HPE 5930, HPE 5920, HPE 5940 HPE 5900, HPE FF 5700, and HPE 5130 switch platforms.

The commands included in this guide were tested on the following:

- Aruba 8400 – 8 slot chassis with dual management modules running ArubaOS-CX 10.01.0001
- Aruba 3810M-24G-PoE+ switch running ArubaOS-Switch KB.16.03.0003
- HPE 5900AF-48G-4XG-2QSFP+ switch running Comware 7.1.045, Release 2416
- Cisco switch running Cisco IOS Software 15.0(1)SE

Additional Aruba and Cisco switches and/or routers were used to provide systems connectivity and operational support as necessary. Likewise, various computers and Voice over IP (VoIP) phones were used to help test functionality and provide output for commands such as **show** or **display**.

Using This Guide

This CLI Reference Guide provides CLI command comparisons in two different formats:

- Side-by-side comparison—Provides a table of the basic commands required to execute a given function in each of the operating systems. In this side-by-side comparison, each platform's commands do not always start at the top of the column. Instead, commands that have similar functions are aligned side by side so that you can easily "translate" the commands on one platform with similar commands on another platform.
- Detailed comparison—Beneath the side-by-side comparison, this guide provides a more in-depth comparison, displaying the output of the command and its options.

Occasionally, the commands required to execute a function or feature in each operating system are completely different. In these instances, each column has the commands necessary to implement the specific function or feature, and the side-by-side comparison does not apply.

Comware Differences

If you are familiar with either the ArubaOS-Switch CLI or the Cisco IOS CLI, you will notice that the Comware CLI is organized slightly differently. Comware was designed for Internet service providers (ISPs). Many features and functions—such as security and Quality of Service (QoS)—are multi-tiered to support the different needs of multiple entities accessing the same switch.

Navigation Differences Among CLIs

Basic CLI navigation on all three platforms is very similar, with one notable difference:

- With ArubaOS-CX-Switch, you can use the **Tab** key for command completion; but you use the **?** key to find more command options. Using tab key also displays the further suboptions without the help description.
- With ArubaOS-Switch, you can use the **Tab** key for command completion; you can also use the **Tab** key or the **?** key to find more command options. In addition, typing "help" at the end of a command may provide additional descriptive information about the command.
- With Cisco, you can use the **Tab** key for command completion, but you use the **?** key to find more command options.

Configuration Differences Among CLIs

For interface IP addressing and interface-specific routing protocol configuration, you execute most commands differently depending on the platform:

- On ArubaOS-CX, you configure the aforementioned components in an interface (VLAN for switch) context. An Interface context can act as layer 3 after assigning an IP address converting it to a Switch Virtual Interface (SVI) of switch ports. There is no physical interface for the VLAN and the SVI provides the Layer 3 processing for packets from all switch ports associated with the VLAN. There is a one-to-one mapping between a VLAN and SVI, thus only a single SVI can be mapped to a VLAN.

- On ArubaOS-Switch, you configure the aforementioned components in a VLAN context. A virtual LAN (VLAN) is any broadcast domain that is partitioned and isolated in a computer network at the data link layer (OSI layer 2). VLANs can keep network applications separate despite being connected to the same physical network, and without requiring multiple sets of cabling and networking devices to be deployed.
- On Comware or Cisco, you configure the aforementioned components in an interface (VLAN for switch) context.

Terminology Differences

Among the three operating systems, there are some differences in the terms used to describe features. The table below lists three such terms that could be confusing.

In ArubaOS-CX-Switch, Comware and Cisco, for example, the term *trunk* refers to an interface that you configure to support 802.1Q VLAN tagged frames. That is, an interface that you configure to support multiple VLANs is a *trunk* interface in each VLAN. In the ArubaOS-Switch operating system, an interface that supports multiple VLANs is a *tagged* interface in each VLAN.

In addition, ArubaOS-CX-Switch refers to aggregated interfaces as a [Link Aggregation Group \(LAG\)](#). ArubaOS-Switch refers to aggregated interfaces as a [trunk](#). In Comware the term is [bridge aggregation](#), while in Cisco it is [EtherChannel/Port-Channel](#).

Comware supports hybrid port-type, which supports 0 or more untagged VLANs + 0 or more tagged VLANs, this is useful in access layer switches to implement Protocol-based, IP-Subnet-based, MAC-based VLANs

Interface use	ArubaOS-CX-Switch	ArubaOS-Switch	Comware	Cisco
Non-802.1Q interfaces (such as used for computers or printers)	access	untagged	access	access
802.1Q interfaces (such as used for switch-to-switch, switch-to-server, and switch-to-VoIP phones)	trunk	tagged (Note: some display views will denote tagged)	trunk (Note: some display views will denote tagged)	trunk
Aggregated interfaces	lag	trunk	bridge aggregation	Etherchannel / Port-Channel
Hybrid port	N/A	hybrid (default)	port hybrid	N/A

Disclaimer

Although Aruba conducted extensive testing to create this guide, it is impossible to test every possible configuration and scenario. Do not assume, therefore, that this document is complete for every environment or each manufacturer's complete product portfolio and software versions. For complete and detailed information on all commands and their options, refer to each manufacturer's documentation accordingly.

Comparing View and Configuration Prompts

The table below compares the differences in each system's display for view and configuration prompts.

Context Legend	ArubaOS-CX-Switch	ArubaOS-Switch	Comware	Cisco
----------------	-------------------	----------------	---------	-------

U = User Exec / User View	ArubaOS-CX-Switch>	ArubaOS-Switch>	<Comware>	Cisco>
P = Privileged Exec	ArubaOS-CX-Switch#	ArubaOS-Switch#		Cisco#
C = Configuration S = System View	ArubaOS-CX-Switch(config)#	ArubaOS-Switch(config) #	[Comware]	Cisco(config) #

Comparing Frequently Used Commands

The table below lists frequently used commands for each operating system.

	ArubaOS-CX-Switch		ArubaOS-Switch		Comware		Cisco
Configuration commands							
C	hostname	C	hostname	S	sysname	C	hostname
C	logging	C	logging	S	info-center	C	logging
C	Not supported	C	router rip	S	rip	C	router rip
C	access-list	C	access-list	S	acl	C	access-list
User Exec / Privileged Exec Commands							
U	enable	U	enable	U	system-view	U	enable
P	configure	P	configure	U	(configuration mode is same as being at System View)	U	configure terminal
U/P	Show images	U/P/C	show flash	U	dir	U/P	show flash
U/P	show version	U/P/C	show version	U/S	display version	U/P	show version
P	show run	P/C	show run	U/S	display current-configuration	P	show run
U/P	show vlan	P/C	show vlan	U/S	display saved-configuration	P	show vlan
P	show history	U/P/C	show history	U/S	display history	U/P	show history
U/P	show events	U/P/C	show logging	U/S	display info-center	U/P	show logging
U/P	show ip route	U/P/C	show ip route	U/S	display ip routing-table	U/P	show ip route
U/P	show ip interface brief	U/P/C	show ip	U/S	display ip interface brief	U/P	show ip interface brief
U/P	show interface brief	U/P/C	show interface brief	U/S	display interface brief	U/P	show interfaces status
P	erase startup-config	P/C	erase startup-config	U	reset saved	P	erase start
U/P	show checkpoint <checkpoint-name>	P/C	show config <filename>	U	more <filename>	P	more flash:/<filename>
P	boot system	P/C	reload	U	reboot	P	reload
P	write memory	P/C	write memory	U/S	save	P	write memory

U/P	show tech	P	show tech	U/S	display diagnostic-information	U/P	show tech-support
U/P	show	U/P/C	show	U/S	display	U/P	show
U/P/C	no	U/P/C	no	U/S	undo	P	no
P/C	end	C	end	S	return	C	end
U/P/C	exit	U/P/C	exit	U/S	quit	U/P/C	exit
P	erase	P/C	erase	U/S	delete	P	erase
P	copy	P/C	copy	U	copy/tftp	P	copy
P	Traceroute6	P/C	Traceroute6	S	ospf	P	Traceroute6
P	traceroute	P/C	traceroute	S	ip route-static	P	traceroute
P/C	ping / do ping	P/C	ping			P	ping

Chapter 1 Basic Switch Management

This chapter compares commands primarily used for device navigation, device information, and device management.

- Management access
- Configuration and Virtual Terminal access
- Console access
- Reload & Timed reload
- USB
- System and environment
- Remote management sessions (viewing and terminating)
- Tech support output
- Motd
- Source interface for management communications

Management Access CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
ArubaOS-CX-Switch> enable	ArubaOS-Switch> enable	<Comware> system-view System View: return to User View with Ctrl+Z.	Cisco> enable
ArubaOS-CX-Switch#	ArubaOS-Switch#	[Comware]	Cisco#

Management Access Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch> enable
ArubaOS-CX-Switch#
ArubaOS-Switch
ArubaOS-Switch> enable

```
ArubaOS-Switch#
```

Comware 7

```
<Comware> system-view  
System View: return to User View with Ctrl+Z.
```

```
[Comware]
```

Cisco

```
Cisco> enable  
Cisco#
```

Configuration Access CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
ArubaOS-CX-Switch# configure	ArubaOS-Switch# configure	No specific command, see note below	Cisco# configure terminal Enter configuration commands, one per line. End with CNTL/Z.
ArubaOS-CX-Switch(config) #	ArubaOS-Switch(config) #	[Comware]	Cisco(config) #

Configuration Access Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch# configure ? terminal Optional keyword of the configure command. <cr>
ArubaOS-CX-Switch# configure
ArubaOS-CX-Switch(config) #
ArubaOS-Switch
ArubaOS-Switch# configure ? terminal Optional keyword of the configure command. <cr>
ArubaOS-Switch# configure
ArubaOS-Switch(config) #
Comware
Comware does not have a specific configuration mode, when at "System View" context, configuration commands are entered directly at that prompt. When you are configuring interfaces, protocols, and so on, the prompt will change to indicate that sub-level. <Comware> system-view [Comware]
Cisco

```
Cisco# configure ?

confirm          Confirm replacement of running-config with a new config
                 file
memory           Configure from NV memory
network          Configure from a TFTP network host
overwrite-network Overwrite NV memory from TFTP network host
replace          Replace the running-config with a new config file
revert           Parameters for reverting the configuration
terminal         Configure from the terminal
<cr>
```

```
Cisco#configure terminal
```

```
Enter configuration commands, one per line. End with CNTL/Z.
```

```
Cisco(config) #
```

Console and Virtual Terminal Access—Timeout CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware7	Cisco
Configuration commands			
session-timeout 0	console inactivity-timer	user-interface aux 0	line console 0
		idle-timeout	exec-timeout
		user-interface vty 0	line vty 0
		idle-timeout	exec-timeout
Note: session works for ssh sessions as well.	Note: console inactivity-timer works for telnet and ssh sessions as well.		

Console and Virtual Terminal Access—Timeout Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch(config)# session-timeout ? <0-43200> Idle timeout range in minutes. Value 0 disables the timeout (30 is the default configuration setting)
ArubaOS-CX-Switch(config)# session-timeout 120
ArubaOS-CX-switch(config) #
Note: session-timeout works for ssh sessions as well.
ArubaOS-Switch
ArubaOS-Switch(config)# console inactivity-timer ? <0-120> Enter an integer number. (0 is the default configuration setting)
ArubaOS-Switch(config)# console inactivity-timer 120
ArubaOS-Switch(config) #
Note: console inactivity-timer works for telnet and ssh sessions as well.

Comware
[Comware]user-interface aux 0
[Comware-ui-aux0]idle-timeout ? INTEGER<0-35791> Specify the idle timeout in minutes for login user. (10 is the default configuration setting)
[Comware-ui-aux0]idle-timeout 20 ? INTEGER<0-59> Specify the idle timeout in seconds for login user. <cr> (0 is the default configuration setting)
[Comware-ui-aux0]idle-timeout 20 10
[Comware-ui-aux0]

[also]

```
[Comware]user-interface vty 0  
[Comware-ui-vty0]idle-timeout 20 10
```

Cisco

```
Cisco(config)#line console 0  
  
Cisco(config-line)#exec-timeout ?  
<0-35791> Timeout in minutes  
                                (10 is the default configuration setting)  
  
Cisco(config-line)#exec-timeout 20 ?  
<0-2147483> Timeout in seconds  
                                (0 is the default configuration setting)
```

```
Cisco(config-line)#exec-timeout 20 10
```

```
Cisco(config-line)#+
```

[also]

```
Cisco(config)#line vty 0  
  
Cisco(config-line)#exec-timeout 20 10
```

Reload & Timed Reload CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
boot system	reload	reboot	reload
boot system `?` <i>Displays further sub-options to boot the system</i>	reload	reboot slot <>	
		scheduler reboot	
show boot-history show boot-history all		display scheduler	show reload
	show reload		
		undo scheduler reboot	

Reload & Timed Reload Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch# boot set-default primary Set the default boot image to primary for future reboots secondary Set the default boot image to secondary for future reboots
ArubaOS-CX-Switch# boot fabric-module SLOT-ID The slot ID of the fabric module (e.g., 1/1)
ArubaOS-CX-Switch# boot line-module SLOT-ID The slot ID of the line module (e.g., 1/1)
ArubaOS-CX-Switch# boot management-module SLOT_ID Reboot a management module by slot number (e.g. 1/5) active Reboot the active management module standby Reboot the standby management module
ArubaOS-CX-Switch# boot system primary Reboot the system to the primary image secondary Reboot the system to the secondary image serviceos Reboot both MMs to ServiceOS <cr>
ArubaOS-CX-Switch# boot system primary <cr>
ArubaOS-CX-Switch# boot system primary Default boot image set to primary.
Do you want to save the current configuration (y/n)? y The running configuration was saved to the startup configuration.
This will reboot the entire switch and render it unavailable until the process is complete. Continue (y/n)? y The system is going down for reboot.
ArubaOS-CX-Switch# boot system primary Reboot the system to the primary image secondary Reboot the system to the secondary image serviceos Reboot both MMs to ServiceOS

```

<cr>

ArubaOS-CX-Switch# boot system secondary
  issu  Perform an in service system upgrade to the secondary image
<cr>
ArubaOS-CX-Switch# boot system secondary
Default boot image set to secondary.

Do you want to save the current configuration (y/n)? y
The running configuration was saved to the startup configuration.

This will reboot the entire switch and render it unavailable
until the process is complete.
Continue (y/n)? y
The system is going down for reboot.

```

ArubaOS-Switch

```

ArubaOS-Switch# reload
System will be rebooted from primary image. Do you want to continue [y/n]?

[for timed reboot]

ArubaOS-Switch# reload ?
after           Warm reboot in a specified amount of time.
at             Warm reboot at a specified time; If the mm/dd/yy is left blank,
              the current day is assumed.
<cr>

ArubaOS-Switch# reload at ?
HH:MM[:SS]      Time on given date to do a warm reboot.

ArubaOS-Switch# reload at 23:00 ?
MM/DD[/YY]YY    Date on which a warm reboot is to occur.
<cr>

ArubaOS-Switch# reload at 23:00 03/04/2015 ?
<cr>

ArubaOS-Switch# reload at 23:00 03/04/2015
  Reload scheduled at 23:00:13 03/04/2015
    (in 0 days, 23 hours, 12 minutes)
System will be rebooted at the scheduled time from primary image.
Do you want to continue [y/n]? y
ArubaOS-Switch#

-or-

ArubaOS-Switch# reload after
  [[DD:]HH:]MM      Enter a time.

ArubaOS-Switch# show reload ?
after           Shows the time until a warm reboot is scheduled.
at             Shows the time and date a warm reboot is scheduled.

ArubaOS-Switch# show reload after
  Reload scheduled for 23:00:57 03/04/2015
    (in 0 days, 23 hours, 9 minutes)

ArubaOS-Switch(config)# no reload

```

```
ArubaOS-Switch(config)# show reload after  
reload is not scheduled
```

Comware 7

```
<Comware7>reboot ?  
  force  Forcibly reboot without checking  
  slot   Specify the slot number  
<cr>  
  
<Comware7>reboot  
  
-or-  
  
<Comware7>reboot force ?  
<cr>  
  
<Comware7>reboot force  
  
<Comware7>reboot slot ?  
<1>  Slot number  
  
<Comware7>reboot slot 1 ?  
  force  Forcibly reboot without checking  
  subslot  Specify the subslot number  
<cr>  
  
<Comware7>reboot slot 1
```

[for timed reboot]

```
<Comware7>scheduler reboot ?  
  at     Specify the execution time  
  delay  Specify the delay time  
  
<Comware7>scheduler reboot at ?  
  TIME  Execution time (HH:MM)  
  
<Comware7>scheduler reboot at 23:00 ?  
  DATE  Execution date (MM/DD/YYYY or YYYY/MM/DD)  
<cr>  
  
<Comware7>scheduler reboot at 23:00 03/09/2015 ?  
<cr>  
  
<Comware7>scheduler reboot at 23:00 03/09/2015  
Reboot system at 23:00:00 03/09/2015(in 7 hours and 51 minutes). Confirm?[Y/N]:y  
<Comware7>%Mar 9 15:08:34:699 2015 Comware7 SCH/5/SCH_REBOOT_SCHEDULED: aux0 set schedule  
reboot parameters at 15:08:30 03/09/2015, and system will reboot at 23:00:00 03/09/2015.  
  
<Comware7>  
  
-or-  
  
<Comware7>scheduler reboot delay ?  
  STRING<1-6>  Interval (HH:MM or MM)  
  
<Comware7>scheduler reboot delay 07:45 ?  
<cr>  
  
<Comware7>scheduler reboot delay 07:45  
Reboot system at 22:56:01 03/09/2015(in 7 hours and 45 minutes). Confirm?[Y/N]:y
```

```
<Comware7>%Mar 9 15:11:04:975 2015 Comware7 SCH/5/SCH_REBOOT_SCHEDULED: aux0 set schedule  
reboot parameters at 15:11:01 03/09/2015, and system will reboot at 22:56:01 03/09/2015.
```

```
<Comware7>display scheduler reboot  
System will reboot at 23:00:00 03/09/2015(in 7 hours and 47 minutes).
```

```
<Comware7>undo schedule reboot  
<Comware7>%Mar 9 15:09:23:490 2015 Comware7 SCH/5/SCH_REBOOT_CANCEL: aux0 cancelled reboot  
parameters at 15:09:23 03/09/2015.
```

Cisco

```
Cisco#reload  
Proceed with reload? [confirm]
```

[for timed reboot]

```
Cisco#reload ?  
/noverify Don't verify file signature before reload.  
/verify Verify file signature before reload.  
LINE Reason for reload  
at Reload at a specific time/date  
cancel Cancel pending reload  
in Reload after a time interval  
slot Slot number card  
standby-cpu Standby RP  
<cr>
```

```
Cisco#reload at ?  
hh:mm Time to reload (hh:mm)
```

```
Cisco#reload at 23:00 ?  
<1-31> Day of the month  
LINE Reason for reload  
MONTH Month of the year  
<cr>
```

```
Cisco#reload at 23:00 march ?  
<1-31> Day of the month
```

```
Cisco#reload at 23:00 march 5 ?  
LINE Reason for reload  
<cr>
```

```
Cisco#reload at 23:00 march 5
```

```
System configuration has been modified. Save? [yes/no]: y  
Building configuration...
```

```
[OK]  
Reload scheduled for 23:00:00 central Thu Mar 5 2015 (in 22 hours and 16 minutes) by console  
Proceed with reload? [confirm]
```

```
Cisco#  
Mar 5 06:43:40.282: %SYS-5-SCHEDULED_RELOAD: Reload requested for 23:00:00 central Thu Mar  
5 2015 at 00:43:27 central Thu Mar 5 2015 by console.  
Cisco#
```

-or-

```
Cisco#reload in ?  
Delay before reload (mmm or hhh:mm)
```

```
Cisco#reload in 23:10 ?
LINE Reason for reload
<cr>

Cisco#show reload
Reload scheduled for 23:00:00 central Thu Mar 5 2015 (in 22 hours and 15 minutes) by console

Cisco#reload cancel
Cisco#

*** --- SHUTDOWN ABORTED ---
***

Mar  5 06:45:38.016: %SYS-5-SCHEDULED_RELOAD_CANCELLED:  Scheduled reload cancelled at
00:45:38 central Thu Mar 5 2015
```

USB CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
User Exec / Privileged Exec Commands			
usb	dir	dir usba0:/	dir usb
usb mount			
copy usb:/<filename> primary	copy usb flash <filename> primary		copy run usbflash0:test.cfg
show usb	show usb-port	display device usb	

USB CLI comparision Configurable options

ArubaOS-CX-Switch
<pre>ArubaOS-CX-Switch# usb mount Make an inserted USB drive available unmount Make an inserted USB drive unavailable to prepare for removal ArubaOS-CX-Switch(config)#usb mount ArubaOS-CX-Switch# sh usb Enabled: Yes Mounted: No</pre>
ArubaOS-Switch
<pre>ArubaOS-Switch# dir ? PATHNAME-STR Display a list of the files and subdirectories in a directory on a USB device. <cr> ArubaOS-Switch# dir Listing Directory /ufa0: -rwxrwxrwx 1 16719093 Nov 19 15:21 K_15_16_0005.swi -rwxrwxrwx 1 16208437 Sep 11 19:10 K_15_15_0008.swi -rwxrwxrwx 1 849 Mar 3 17:52 ArubaOS-Switch-config.cfg ArubaOS-Switch# show usb-port USB port status: enabled USB port power status: power on (USB device detected in port)</pre>
Comware 7
<pre><Comware7>display device usb ? > Redirect it to a file >> Redirect it to a file in append mode slot Specify the slot number verbose Display detailed information Matching output <cr> <Comware7>display device usb slot 1: Device Name : usba State : Normal <Comware7>dir usba0:/ Directory of usba0: 0 -rw- 7309312 Mar 23 2015 15:04:02 5900 5920-cmw710-boot-r2311p05.bin</pre>

```

1 -rw-    10986496 Mar 23 2015 15:08:32  5900_5920-cmw710-boot-r2416.bin
2 -rw-    54262784 Mar 23 2015 15:07:08  5900_5920-cmw710-system-r2311p05.bin
3 -rw-    66350080 Mar 23 2015 15:13:04  5900_5920-cmw710-system-r2416.bin
4 -rw-      5429 Mar 23 2015 14:43:04  test.cfg

984816 KB total (699456 KB free)

Cisco
Cisco# dir usbflash0:
Directory of usbflash0:/

1 ----          0   Feb  4 2015 07:21:52 +00:00  System Volume Information
2 -rw-    36326184   Feb  4 2015 08:07:24 +00:00  c1841-adventerprisek9-mz.124-
15.T17.bin

1000062976 bytes total (963723264 bytes free)
Cisco#copy run usbflash0:test.cfg
Destination filename [test.cfg]?

1419 bytes copied in 1.556 secs (912 bytes/sec)

```

System and Environment CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
User Exec / Privileged Exec Commands			
show system <i>Or abbreviations also works like:</i> sh sys	show system information show modules	display device manuinfo display device verbose	show inventory show version
show environment fan	show system fans	display fan	show env fan
show system resource-utilization	show system power-supply	display power	show env power
show environment led	show system temperature	display environment	show env temperature
show system error-counter-monitor			
show environment power-supply	Show running-config v3-specific	display current-configuration	

System and Environment Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch# show system error-counter-monitor Monitor error counters resource-utilization Utilization metrics of various system resources <cr>
ArubaOS-CX-Switch# show system Hostname : System Description : System Contact : System Location : Vendor : Aruba Product Name : 8400 Base Cbl Mgr X462 Bndl Chassis Serial Nbr : SG78K2G00G Base MAC Address : 94:f1:28:1e:65:00 ArubaOS-CX Version : XL.10.00.0002C-1-g1b84ef2 Time Zone : UTC Up Time : up 39 minutes CPU Util (%) : 10 Memory Usage (%) : 3
ArubaOS-CX-Switch# show system resource-utilization System Resources: Processes: 179 CPU usage(%): 10 Memory usage(%): 3 Open FD's: 3808

Process	CPU Usage (%)	Memory Usage (%)	Open FD's
<hr/>			
kworker/5:0H	0	0	0
portd	0	0	12
kworker/1:2	0	0	0
kworker/2:0H	0	0	0
hpe-powerd	0	0	13
vrfmgrd	0	0	11
kworker/5:1	0	0	0
hpe-cardd	0	0	25
hpe-buttond	0	0	11
hpe-udlhd	0	0	12
hpe-dnsclient	0	0	9
hpe-mgmdd	0	0	12
hpe-logd	0	0	14
kworker/2:1H	0	0	0
crond	0	0	6
ksoftirqd/1	0	0	0
kworker/6:0	0	0	0
hpe-psp0d	0	0	10
xcopy_wq	0	0	0
ops-classifierd	0	0	10
kworker/7:0	0	0	0
migration/3	0	0	0
rsyslogd	0	0	9
hpe-rdntmgmtd	0	0	17
ops-switchd	0	1	127
jbd2/sda4-8	0	0	0
kswapd0	0	0	0
kworker/5:1H	0	0	0
12macd	0	0	10
hpe-hw_monitor	0	0	11
kdevtmpfs	0	0	0
hpe-vrrpd	0	0	11
ksoftirqd/7	0	0	0
lag1	0	0	0
ntpd	0	0	20
kworker/6:0H	0	0	0
hpe-logsyncd	0	0	12
acpi_thermal_pm	0	0	0
hpe-kfibapp	0	0	11
ksoftirqd/3	0	0	0
ops-sysd	0	0	10
kworker/4:2	0	0	0
hpe-mstpd	0	0	11
bond0	0	0	0
dune_agent_9	0	0	72
lldpd	0	0	24
hpe-tsdbd	0	0	8
jbd2/sda5-8	0	0	0
systemd-resolve	0	0	17
scsi_eh_0	0	0	0
writeback	0	0	0
lacpd	0	0	12
kworker/3:2	0	0	0
kworker/5:0	0	0	0
kworker/0:0H	0	0	0
dune_agent_8	0	0	72
ksoftirqd/2	0	0	0
hpe-entityd	0	0	10
kworker/1:0H	0	0	0
perf	0	0	0
kworker/3:0H	0	0	0

hpe-rdiscd	0	0	13
ksoftirqd/0	0	0	0
kworker/0:2	0	0	0
kworker/4:0H	0	0	0
hpe-relay	0	0	10
hpe-restd	0	0	10
(sd-pam)	0	0	7
systemd-udevd	0	0	14
hpe-mclagkad	0	0	13
kworker/1:1	0	0	0
nfsiod	0	0	0
crash-handler	0	0	9
rcu_bh	0	0	0
hpe-tempd	0	0	11
kworker/2:0	0	0	0
login	0	0	5
kworker/u16:0	0	0	0
hpe-isp	0	0	8
systemd-journal	0	0	10
kaudit	0	0	0
kworker/2:1	0	0	0
systemd	0	0	14
chronyd	0	0	11
scsi_tmf_2	0	0	0
kworker/4:1	0	0	0
ksoftirqd/5	0	0	0
kworker/7:1	0	0	0
kworker/0:3	0	0	0
ksoftirqd/6	0	0	0
kblockd	0	0	0
migration/7	0	0	0
hpe-policyd	0	0	8
hpe-sshd	0	0	7
deferwq	0	0	0
jbd2/sda3-8	0	0	0
scsi_tmf_5	0	0	0
intfd	0	0	11
migration/0	0	0	0
ksoftirqd/4	0	0	0
hpe-mclagd	0	0	29
migration/2	0	0	0
migration/5	0	0	0
scsi_eh_4	0	0	0
rcu_sched	0	0	0
mcelog	0	0	5
kworker/4:1H	0	0	0
kworker/7:0H	0	0	0
snmpd_wrapper	0	0	8
bioset	0	0	0
kworker/4:0	0	0	0
hpe-profiled	0	0	10
lsyncd	0	0	4
kworker/6:2	0	0	0
scsi_tmf_3	0	0	0
ipv6_addrconf	0	0	0
scsi_tmf_1	0	0	0
tmr-rd_mcp	0	0	0
scsi_eh_2	0	0	0
kworker/3:0	0	0	0
hpe-fand	0	0	12
migration/6	0	0	0
vland	0	0	10
crypto	0	0	0

rpciod	0	0	0
migration/4	0	0	0
migration/1	0	0	0
rcu_preempt	5	0	0
fsnotify_mark	0	0	0
hpe-mgmtd	0	0	18
hpe-mgmtmd	0	0	15
nginx	0	0	16
scsi_eh_3	0	0	0
ext4-rsv-conver	0	0	0
hpe-config	0	0	7
hpe-repld	0	0	10
hpe-pvstd	0	0	12
hpe-lpd	0	0	14
ops-ledd	0	0	12
prometheus	0	0	24
hpe-routing	5	0	43
scsi_eh_5	0	0	0
hpe-sysmond	0	0	11
smartd	0	0	3
systemd-logind	0	0	12
ovsdb-server	0	0	91
pimd	0	0	16
vtysh	0	0	14
jbd2/sda2-8	0	0	0
pmd	0	0	36
dbus-daemon	0	0	14
aaautilspamcfg	0	0	9
kworker/4:3	0	0	0
kworker/6:1H	0	0	0
hpe-cpurx-filte	0	0	10
acpid	0	0	6
scsi_eh_1	0	0	0
kworker/5:2	0	0	0
netns	0	0	0
kworker/6:1	0	0	0
kworker/0:1H	0	0	0
kworker/u16:4	0	0	0
kworker/7:2	0	0	0
kworker/2:2	0	0	0
hpe-ledarbd	0	0	10
target_completi	0	0	0
bridge_normal	0	0	0
scsi_tmf_0	0	0	0
kworker/3:1	0	0	0
arpngrd	0	0	13
hpe-credmgr	0	0	13
kthreadd	0	0	0
vmstat	0	0	0
auditd	0	0	8
scsi_tmf_4	0	0	0
kworker/u16:5	0	0	0
hpe-mvrpd	0	0	11
kworker/1:1H	0	0	0
mtmd	0	0	12

```
ArubaOS-CX-Switch# show system error-counter-monitor
[IFNAME] physical interface name
<cr>
```

```
ArubaOS-CX-Switch# show system error-counter-monitor
Counter monitoring poll is disabled
```

```

ArubaOS-CX-Switch# show environment
fan Show system fan status information
led Show locator LED information
power-consumption Show module power consumption information
power-supply Power supply information
rear-display-module Show rear display module information
temperature Show temperature sensor information
<cr>
ArubaOS-CX-Switch# show environment fan
Fan tray information
-----
Mbr/Tray Description Status Serial Number Fans
-----
1/1 JL369A Aruba X731 Fan Tray ready SG78K2800R 6
1/2 JL369A Aruba X731 Fan Tray ready SG78K2806M 6
1/3 JL369A Aruba X731 Fan Tray ready SG78K2807K 6
Fan information
-----
Mbr/Tray/Fan Serial Number Speed Direction Status RPM
-----
1/1/1 SG77K290FY slow front-to-back ok 5957
1/1/2 SG77K29140 slow front-to-back ok 6003
1/1/3 SG77K290GY slow front-to-back ok 5994
1/1/4 SG77K29127 slow front-to-back ok 5975
1/1/5 SG77K29139 slow front-to-back ok 6021
1/1/6 SG77K290JK slow front-to-back ok 5985
1/2/1 SG77K290TX slow front-to-back ok 5966
1/2/2 SG77K291CG slow front-to-back ok 5975
1/2/3 SG77K290H4 slow front-to-back ok 5966
1/2/4 SG77K290TV slow front-to-back ok 5957
1/2/5 SG77K291RJ slow front-to-back ok 6003
1/2/6 SG77K290ZV slow front-to-back ok 5966
1/3/1 SG77K291T8 slow front-to-back ok 6003
1/3/2 SG77K291TB slow front-to-back ok 5994
1/3/3 SG77K290QF slow front-to-back ok 6012
1/3/4 SG77K291SY slow front-to-back ok 5966
1/3/5 SG77K2918L slow front-to-back ok 5966
1/3/6 SG77K291VN slow front-to-back ok 5966

ArubaOS-CX-Switch# show environment led
Name State Status
-----
locator off ok

ArubaOS-CX-Switch# show environment power-consumption
-----
Name Type Description Power Usage
-----
1/5 management-module JL368A 8400 Mgmt Mod 49
1/6 management-module JL368A 8400 Mgmt Mod 49
1/1 line-card-module JL363A 8400X 32P 10G SFP/SFP+ Msec Mod 137
1/2 line-card-module N/A N/A 0
1/3 line-card-module N/A N/A 0
1/4 line-card-module N/A N/A 0
1/7 line-card-module N/A N/A 0
1/8 line-card-module N/A N/A 0
1/9 line-card-module N/A N/A 0
1/10 line-card-module N/A N/A 0
1/1 fabric-card-module JL367A 8400X 7.2Tbps Fab Mod 94
1/2 fabric-card-module JL367A 8400X 7.2Tbps Fab Mod 96
1/3 fabric-card-module N/A N/A 0

```

Module Total Power Usage	425
Chassis Total Power Usage	516
Chassis Total Power Available	2700
Chassis Total Power Allocated (total of all max wattages)	1560
Chassis Total Power Unallocated	1140

Aruba OS-Switch

```
ArubaOS-Switch# show system ?
chassislocate      Show information about the Locator LED.
fans               Show system fan status.
information        Show global configured and operational system parameters.If
                   stacking is enabled it shows system information of all the stack
                   members.
power-consumption Show switch blade power consumption information.
power-supply       Show Chassis Power Supply info and settings.If stacking is
                   enabled, shows power supply info and settings of all the stack
                   members.
temperature        Show current temperature sensor information.
<cr>
```

```
ArubaOS-Switch# show system information
```

Status and Counters - General System Information

```
System Name      : ArubaOS-Switch
System Contact   :
System Location  :

MAC Age Time (sec) : 300

Time Zone        : -360
Daylight Time Rule : Continental-US-and-Canada

Software revision : KA.15.16.0005      Base MAC Addr      : 009c02-d53980
ROM Version      : KA.15.09          Serial Number     :xxxxxxxxxxxx

Up Time          : 34 mins           Memory - Total    : 795,353,088
CPU Util (%)     : 0                  Memory - Free     : 665,924,808

IP Mgmt - Pkts Rx : 199             Packet - Total    : 6750
                                      Pkts Tx : 220          Buffers Free      : 4830
                                                               Lowest      : 4810
                                                               Missed     : 0
```

```
ArubaOS-Switch# show modules
Status and Counters - Module Information
```

```
Chassis: 3800-24G-PoE+-2SFP+ J9573A      Serial Number: xxxxxxxxxxxx
```

Slot	Module Description	Serial Number	Status
-----	-----	-----	-----

```
ArubaOS-Switch# show system fans
```

Fan Information		
Num	State	Failures

```

-----+-----+
Fan-1 | Fan OK      | 0
Fan-2 | Fan OK      | 0
Fan-3 | Fan OK      | 0
Fan-4 | Fan OK      | 0

0 / 4 Fans in Failure State
0 / 4 Fans have been in Failure State

ArubaOS-Switch# show system power-supply

Power Supply Status:

PS#      Model          State       AC/DC + V   Wattage   Max
-----+-----+-----+-----+-----+-----+-----+
1        J9580A        Powered     AC 120V/240V 71        1000
2        Unknwn        Not Present           0          0

1 / 2 supply bays delivering power.
Currently supplying 71 W / 1000 W total power.

```

```
ArubaOS-Switch# show system temperature
```

```
System Air Temperature
Temp    Current  Max   Min
Sensor  Temp     Temp  Threshold OverTemp
-----+-----+-----+-----+-----+
Chassis 28C     28C    0C    55C      NO
```

Comware 7

```
<Comware>display device ?
chassis  Specify the chassis number
manuinfo  Manufacture information
slot     Specify the slot number
verbose   Display detail information
|         Matching output
<cr>

<Comware>display device manuinfo ?
slot   Specify the slot number
|       Matching output
<cr>

<Comware>display device manuinfo
Slot 1:
DEVICE_NAME      : S5500-28C-PWR-EI
DEVICE_SERIAL_NUMBER : xxxxxxxxxxxx
MAC_ADDRESS      : 0023-89D5-A059
MANUFACTURING_DATE : 2010-02-16
VENDOR_NAME       : H3C

<Comware>display device verbose ?
|       Matching output
<cr>

<Comware>display device verbose
Slot 1
```

SubSNo	PortNum	PCBVer	FPGAVer	CPLDVer	BootRomVer	AddrLM	Type	State
0	28	REV.C	NULL	002	710	IVL	MAIN	Normal

```

slot 1 info:
Up Time      : 0 weeks, 0 days, 1 hours, 22 minutes
Brd Type     : HP A5500-24G-PoE+ EI Switch with 2 Interface Slots
Brd Status   : Master
Sft Ver      : Release 2221P07
Patch Ver    : None
PCB Ver      : REV.C
BootRom Ver  : 721
CPLD Ver     : 002

<Comware>display fan ?
  slot  Display slot ID
  |      Matching output
<cr>

<Comware>display fan
Slot 1
  FAN      1
  State    : Normal

<Comware>display power ?
  slot  Display slot ID
  |      Matching output
<cr>

<Comware>display power
Slot 1
  Power    1
  State    : Normal
  Type     : AC

<Comware>display environment ?
  slot  Specify the slot number
  |      Matching output
<cr>

<Comware>display environment
Slot 1
System temperature information (degree centigrade):
-----
Sensor      Temperature  LowerLimit  WarningLimit  AlarmLimit  ShutdownLimit
hotspot 1    33           -5          55            NA          NA

```

Cisco

```
Cisco#show inventory
NAME: "1", DESCRIPTOR: "WS-C3750E-24TD"
PID: WS-C3750E-24TD-S , VID: V02 , SN: xxxxxxxxxxxx

NAME: "Switch 1 - Power Supply 0", DESCRIPTOR: "FRU Power Supply"
PID: C3K-PWR-265WAC , VID: V01Q , SN: xxxxxxxxxxxx

Cisco#show version
Cisco IOS Software, C3750E Software (C3750E-UNIVERSALK9-M), Version 15.0(1)SE, RELEASE
SOFTWARE (fc1)
...
Cisco uptime is 1 hour, 9 minutes
System returned to ROM by power-on
System restarted at 23:56:02 central Wed Mar 4 2015
System image file is "flash:c3750e-universalk9-mz.150-1.SE.bin"
...
cisco WS-C3750E-24TD (PowerPC405) processor (revision F0) with 262144K bytes of memory.
Processor board ID FDO1231V0US
Last reset from power-on
1 Virtual Ethernet interface
1 FastEthernet interface
28 Gigabit Ethernet interfaces
2 Ten Gigabit Ethernet interfaces
The password-recovery mechanism is enabled.

512K bytes of flash-simulated non-volatile configuration memory.
Base ethernet MAC Address : 00:22:91:AB:43:80
Motherboard assembly number : 73-10313-11
Motherboard serial number : xxxxxxxxxxxx
Model revision number : F0
Motherboard revision number : A0
Model number : WS-C3750E-24TD-S
Daughterboard assembly number : 800-28590-01
Daughterboard serial number : xxxxxxxxxxxx
System serial number : xxxxxxxxxxxx
Top Assembly Part Number : 800-27546-03
Top Assembly Revision Number : A0
Version ID : V02
CLEI Code Number : xxxxxxxxxxxx
Hardware Board Revision Number : 0x01

Switch Ports Model SW Version SW Image
----- ----- -----
* 1 30 WS-C3750E-24TD 15.0(1)SE C3750E-UNIVERSALK9-M

Cisco#sh env ?
all Show all environment status
fan Show fan status
power Show power supply status
rps Show RPS status
stack Show Stack-wide all environment status
temperature Show temperature status
xps Show XPS status

Cisco#show env fan
FAN is OK

Cisco#sh env power ?
all All power supplies
```

```
switch  Switch number
|       Output modifiers

<cr>

Cisco#show env power
SW   PID              Serial#      Status          Sys Pwr  PoE Pwr  Watts
-----  -----  -----
1   C3K-PWR-265WAC    xxxxxxxxxxxx  OK           Good    N/A     265/0

Cisco#show env temperature ?
status  Show Temperature status and threshold values
|       Output modifiers
<cr>

Cisco#show env temperature
SYSTEM TEMPERATURE is OK
```

Remote Management Sessions—Viewing CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
User Exec / Privileged Exec Commands			
show user information	show telnet	display users	show users

Remote Management Sessions—Viewing CLI Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch# show user WORD Specify the username. Maximum length is 32 characters. information Show information about logged in user
ArubaOS-CX-Switch# sh user information Username : admin Authentication type : local User group : administrators User privilege level : 15
ArubaOS-Switch
ArubaOS-Switch# show telnet ? <cr> ArubaOS-Switch# show telnet Telnet Activity Source IP Selection: Outgoing Interface ----- Session : ** 1 Privilege: Manager From : Console To : ----- Session : 2 Privilege: Manager From : 10.0.100.87 To : ----- Session : 3 Privilege: Manager From : 10.0.100.84 To :

Cisco
Cisco#show users ? all Include information about inactive ports wide use wide format Output modifiers <cr>
Cisco#show users Line User Host(s) Idle Location * 0 con 0 manager idle 00:00:00 1 vty 0 manager idle 00:08:29 10.0.100.84 2 vty 1 manager idle 00:00:44 10.0.100.87

Interface	User	Mode	Idle	Peer Address
Cisco#show users wide ?				
Output modifiers				
<cr>				
Cisco#show users wide				
Line	User	Host(s)	Idle	Location
* 0 con 0	manager	idle	00:00:00	
1 vty 0	manager	idle	00:00:09	10.0.100.84
2 vty 1	manager	idle	00:05:37	10.0.100.87
3 vty 2			00:00:00	
4 vty 3			00:00:00	
5 vty 4			00:00:00	
6 vty 5			00:00:00	
7 vty 6			00:00:00	
8 vty 7			00:00:00	
9 vty 8			00:00:00	
10 vty 9			00:00:00	
11 vty 10			00:00:00	
12 vty 11			00:00:00	
13 vty 12			00:00:00	
14 vty 13			00:00:00	
15 vty 14			00:00:00	
16 vty 15			00:00:00	

Interface	User	Mode	Idle	Peer Address
-----------	------	------	------	--------------

Tech Support Information Output Listing CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
User Exec / Privileged Exec Commands			
show tech	show tech	display diagnostic-information	show tech-support

Tech Support Information Output Listing CLI Configurable options

ArubaOS-CX-Switch
<pre>ArubaOS-CX-Switch# show tech aaa Authentication Authorization and Accounting acl Access Control Lists arp Address Resolution Protocol basic Show Tech Basic bgp Border Gateway Protocol copp Control Plane Policing dhcp-relay Dynamic Host Configuration Protocol Relay dhcpv6-relay Dynamic Host Configuration Protocol Version 6 Relay dns-client DNS client gre Generic Routing Encapsulation hw-health-monitor Hardware Health Monitor igmp IGMP interface Interfaces ip-statistics Show IP Errors Statistics ipv6-ra IPv6 Router Advertisement irdp ICMP Router Discovery Protocol isp Show versions of programmable devices isplog Show log of programmable device updates l2mac L2 MAC Table lacp Link Aggregation Control Protocol lldp Link Layer Discovery Protocol local-file Capture command-output into a local-file log-rotate Log Rotation loop-protect Loop Protect loopback Loopback Interface mclag Multi-Chassis Link Aggregation Group mgmt Management interface mirror Mirroring mstp Multiple Spanning Tree Protocol mvrp Multiple VLAN Registration Protocol ntp Network Time Protocol ospfv2 Open Shortest Path First version 2 Protocol ospfv3 Open Shortest Path First version 3 Protocol pim Protocol-Independent Multicast (PIM Sparse) policy Classifier Policies qos Quality of Service rpvst Per VLAN Spanning Tree Protocol sflow sFlow snmp SNMP source-interface-selection Source Interface Selection ssh SSH Server ucast-routing Unicast Routing Information udld Unidirectional Link Detection Protocol udpfwd UDP Broadcast Forwarder vlan Virtual Local Area Network vrf Virtual Rounting and Forwarding vrrp Virtual Router Redundancy Protocol xcvr Show Transceiver Information <cr></pre>

ArubaOS-Switch

```
ArubaOS-Switch# show tech ?
all          Display output of a predefined command sequence used by technical support.
buffers      Display output of a predefined command sequence used by technical support.
custom       Display output of a predefined command sequence used by technical support.
igmp        Display output of a predefined command sequence used by technical support.
instrumentation  Display output of a predefined command sequence used by technical support.
mesh         Display output of a predefined command sequence used by technical support.
mstp        Display output of a predefined command sequence used by technical support.
oobm        Display output of a predefined command sequence used by technical support.
rapid-pvst   Display output of a predefined command sequence used by technical support.
route        Display output of a predefined command sequence used by technical support.
smart-link   Display output of a predefined command sequence used by technical support.
statistics   Display output of a predefined command sequence used by technical support.
transceivers  Display output of a predefined command sequence used by technical support.
tunnel       Display output of a predefined command sequence used by technical support.
vrrp         Display output of a predefined command sequence used by technical support.

<cr>
```

Comware7

```
<Comware7>display diagnostic-information ?
STRING          [drive] [path] [file name]
flash:          Device name
hardware        Hardware information for diagnosis
infrastructure  Infrastructure information for diagnosis
12              L2 information for diagnosis
13              L3 information for diagnosis
service         Service information for diagnosis
slot1#flash:    Device name
slot1#usba0:    Device name
usba0:          Device name
<cr>
```

```
<Comware7>display diagnostic-information
Save or display diagnostic information (Y=save, N=display)? [Y/N]:
```

Cisco

```
Cisco#show tech-support ?  
cef          CEF related information  
ipc          IPC related information  
ipmulticast IP multicast related information  
ospf         OSPF related information  
page         Page through output  
password    Include passwords  
rsvp         IP RSVP related information  
|             Output modifiers  
  
<cr>
```

Motd CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
Configuration commands			
banner motd # Enter TEXT message. End with the character '#'.	banner motd # Enter TEXT message. End with the character '#'.	header motd Please input banner content, and quit with the character '#'. #	banner motd # Enter TEXT message. End with the character '#'. #

Motd CLI Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch(config)# banner motd # Enter TEXT message. End with the character '#'.
This is a secure lab network, do not connect to any production systems. Authorized users only! #
ArubaOS-Switch
ArubaOS-Switch(config)# banner motd # Enter TEXT message. End with the character '#'.
This is a secure lab network, do not connect to any production systems. Authorized users only! #
Comware
[Comware]header motd # Please input banner content, and quit with the character '#'. This is a secure lab network, do not connect to any production systems. Authorized users only! #
Cisco
Cisco(config)#banner motd # Enter TEXT message. End with the character '#'. This is a secure lab network, do not connect to any production systems. Authorized users only! #

Source Interface for Management Communications CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware	Cisco
Configuration commands			
ip source-interface tftp interface 1/1/1	ip source-interface	tftp client source interface Vlan-interface 1	ip <service> source-interface
ip source-interface tftp 10.0.0.1			
ip source-interface all interface 1/1/1	ip source-interface all 10.0.111.21		
ip source-interface all 10.0.0.1			
	ip source-interface syslog vlan 1	info-center loghost source Vlan-interface 1	logging source-interface vlan 1
	ip source-interface radius 10.0.111.21	radius nas-ip 10.0.111.31	ip radius source-interface vlan 1
	ip source-interface tacacs 10.0.111.21	hwtacacs nas-ip 10.0.111.31	ip tacacs source-interface vlan 1
		ftp client source interface Vlan-interface 1	ip ftp source-interface vlan 1
		ntp source-interface Vlan-interface 100	
		telnet client source interface Vlan-interface 1	
User Exec / Privileged Exec Commands			
show ip source-interface tftp	show ip source-interface		
show ip source-interface			

Source Interface for Management Communications CLI Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch(config)# ip source-interface tftp interface 1/1/1
ArubaOS-CX-Switch(config)# ip source-interface all All the defined protocols tftp TFTP protocol
ArubaOS-CX-Switch(config)# ip source-interface tftp A.B.C.D Specify an IP address interface Interface information
ArubaOS-CX-Switch(config)# ip source-interface tftp interface IFNAME Interface name (e.g. 1/1/1)
ArubaOS-CX-Switch(config)# ip source-interface tftp interface 1/1/1
ArubaOS-CX-Switch(config)# ip source-interface tftp 10.0.0.1 <cr>
ArubaOS-CX-Switch(config)# ip source-interface tftp 10.0.0.1
ArubaOS-CX-Switch(config)# ip source-interface all All the defined protocols tftp TFTP protocol

```

ArubaOS-CX-Switch(config)# ip source-interface all
A.B.C.D      Specify an IP address
interface    Interface information

ArubaOS-CX-Switch(config)# ip source-interface all interface
IFNAME     Interface name (e.g. 1/1/1)

ArubaOS-CX-Switch(config)# ip source-interface all interface 1/1/1

ArubaOS-CX-Switch(config)# ip source-interface all 10.0.0.1
<cr>

ArubaOS-CX-Switch(config)# ip source-interface all 10.0.0.1

ArubaOS-CX-Switch# show ip source-interface
Source-interface Configuration Information
-----
Protocol      Source Interface
-----
tftp          10.0.0.1

```

ArubaOS-Switch

```

ArubaOS-Switch(config)# ip source-interface ?
radius          The RADIUS protocol.
sntp            The SNTP protocol.
syslog          The syslog protocol.
tacacs          The TACACS+ protocol.
telnet          The Telnet protocol.
tftp            The TFTP protocol.
sflow           The sFlow protocol.
all             All protocols above.

ArubaOS-Switch(config)# ip source-interface all ?                                [note, same options for
all]                                         [note, same options for
IP-ADDR        Specify an IP address.                                         [protocols as seen in above]
loopback       Specify a loopback interface.
vlan           Specify a VLAN interface.

```

```
ArubaOS-Switch(config)# ip source-interface all 10.0.111.21
```

```
ArubaOS-Switch(config)# ip source-interface telnet vlan 1
```

```

ArubaOS-Switch(config)# snmp-server trap-source ?
IP-ADDR        IP Address for the source ip address field in the trap
                pdu.
loopback       For the specified loopback interface, lexicographically
                minimum configured ip address will be used as the source
                ip address in the trap pdu.

```

```
ArubaOS-Switch(config)# snmp-server trap-source 10.0.111.21
```

```

ArubaOS-Switch# show ip source-interface ?
detail          Show detailed source IP information.
radius          Specify the protocol.
sflow           Specify the protocol.
sntp            Specify the protocol.
status          Show source IP information.
syslog          Specify the protocol.
tacacs          Specify the protocol.

```

```

telnet          Specify the protocol.
tftp           Specify the protocol.
<cr>

ArubaOS-Switch# show ip source-interface

Source-IP Configuration Information

Protocol | Admin Selection Policy   IP Interface   IP Address
----- + ----- + ----- + -----
Tacacs    | Configured IP Address   vlan-1        10.0.111.21
Radius    | Configured IP Address   vlan-1        10.0.111.21
Syslog    | Configured IP Interface vlan-1
Telnet    | Configured IP Interface vlan-1
Tftp      | Configured IP Interface vlan-1
Sntp      | Configured IP Interface vlan-1
Sflow     | Configured IP Address   vlan-1        10.0.111.21

```

Comware7

```
[Comware7]ntp source Vlan-interface 1
```

Cisco

```

Cisco(config)#logging source-interface ?
  Async           Async interface
  Auto-Template  Auto-Template interface
  BVI             Bridge-Group Virtual Interface
  CTunnel         CTunnel interface
  Dialer          Dialer interface
  FastEthernet   FastEthernet IEEE 802.3
  Filter          Filter interface
  Filtergroup    Filter Group interface
  GigabitEthernet GigabitEthernet IEEE 802.3z
  GroupVI        Group Virtual interface
  Lex              Lex interface
  Loopback        Loopback interface
  Null             Null interface
  Port-channel   Ethernet Channel of interfaces
  Portgroup       Portgroup interface
  Pos-channel    POS Channel of interfaces
  TenGigabitEthernet Ten Gigabit Ethernet
  Tunnel          Tunnel interface
  Vif              PGM Multicast Host interface
  Virtual-Template Virtual Template interface
  Virtual-TokenRing Virtual TokenRing
  Vlan             Catalyst Vlans
  fcpx            Fiber Channel

```

```
Cisco(config)#logging source-interface vlan 1 ?
<cr>
```

```
Cisco(config)#logging source-interface vlan 1
```

(the following service commands are similar the above logging example)

```
Cisco(config)#ip radius source-interface vlan 1
```

```
Cisco(config)#ip tacacs source-interface vlan 1
```

```
Cisco(config)#ip ftp source-interface vlan 1
```

```
Cisco(config)#ip tftp source-interface vlan 1
```

```
Cisco(config)#ntp source vlan 1  
Cisco(config)#ip telnet source-interface vlan 1  
Cisco(config)#ip ssh source-interface vlan 1  
Cisco(config)#snmp-server source-interface traps vlan 1
```

Chapter 2 Switch User ID and Password, and Console Access

This chapter focuses on:

- Configuring local user ID (uid) and password (pw) options
- Recovering from a lost password
- Protecting the local password
- Role based management
- Password complexity

For network access, Cisco requires at least pw, while ArubaOS-Switch does not require either.

Network access methods for device management are covered in Chapters 8 and 9. Configuration details for Telnet and SSH are found in Chapter 8, and HTTP and HTTPS are found in Chapter 9.

Local User ID and Password, and console access CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
		[Comware7] super password role network- admin simple password	enable password 0 <password>
		[Comware7]super password role network-admin hash <hashtext password>	enable secret 0 <password>
user word group administrators password		[Comware7]local-user manager [Comware7-luser-manage- manager]password simple password [Comware7-luser-manage- manager]authorization- attribute user-role network-admin [Comware7-luser-manage- manager]service-type terminal	
user user-name password	password manager user-name <name> plaintext <password>	[Comware7]local-user <name> [Comware7-luser-manage- operator]password simple <password> [Comware7-luser-manage- operator]authorization- attribute user-role network-operator [Comware7-luser-manage- operator]service-type terminal	

user user-name password	password operator user-name <name> plaintext <password>	[Comware7]user- interface aux 0 [Comware7-line- aux0]authentication- mode password [Comware7-line-aux0]set authentication password simple password	username <name> privilege 15 password <password>
user user-name password			username <name> privilege 0 password <password>
user <username> group operators password	password configuration- control		
	password configuration history		password <password>
user <username> authorized-key PUBKEY			aaa common-criteria policy policy1
	password configuration aging		username username common- criteria-policy policy- name password <password>
	password configuration alert-before- expiry 10		config switchconfig strong-pwd {case- check consecutive- check default- check username- check all-checks} {enable disable}
	password configuration update-interval- time 0		
	password configuration expired-user-login 30		service paassword- encryption

Local User ID and Password, and console access CLI Configurable options

ArubaOS-CX-Switch

ArubaOS-CX-Switch(config) # user

```

WORD Specify the username. Maximum length is 32 characters.

ArubaOS-CX-Switch(config)# user word
authorized-key Add SSH client's authorized-key.
group Adding user to the group
password Update user password

ArubaOS-CX-Switch(config)# user word authorized-key
PUBKEY SSH client's authorized-key.

ArubaOS-CX-Switch(config)# user word authorized-key pubkey
PUBKEY SSH client's authorized-key.
<cr>

ArubaOS-CX-Switch(config)# user word authorized-key pubkey
Failed to add client-public-key. Invalid key format.
ArubaOS-CX-Switch(config)# user word
authorized-key Add SSH client's authorized-key.
group Adding user to the group
password Update user password
ArubaOS-CX-Switch(config)# user word password
ciphertext Update ciphertext password
<cr>

ArubaOS-CX-Switch(config)# user word password
Changing password for user word
Enter password: *****
Confirm new password: *****

ArubaOS-CX-Switch(config)# user word password
ciphertext Update ciphertext password
<cr>

ArubaOS-CX-Switch(config)# user word password ciphertext
WORD User's ciphertext password
QBapX4naW+gHsHPz9lucBMuGy1+OMKXsSJhhYaLA8rqLY9FZgAAAOL2ov5BSFDUgVwU3sua4Ekk/k1t
cIvX2pJVyTfPep6SLY0MnQBfL3RggNJ6TshDrQ3HtGjpDyUioQ3JcNSHuk8FaDGTeVTEfw9IO9T4C5aKLcrnB
GR4mhTNFpTqQ8DYoMfyUvtg==

ArubaOS-Switch

ArubaOS-Switch(config)# password ?
operator Configure operator access.
manager Configure manager access.
all Configure all available types of access.
minimum-length Configure minimum password length.

ArubaOS-Switch(config)# password manager ?
plaintext Enter plaintext password.
user-name Set username for the specified user category.
<cr>

ArubaOS-Switch(config)# password manager user-name ?
OCTET-STR Enter an octet string.

ArubaOS-Switch(config)# password manager user-name manager ?
plaintext Enter plaintext password.
<cr>

ArubaOS-Switch(config)# password manager user-name manager plaintext ?
PASSWORD Specify the password. If in enhanced secure-mode, you will be
prompted for the password.

ArubaOS-Switch(config)# password manager user-name manager plaintext password ?

```

```
<cr>
```

```
ArubaOS-Switch(config)# password manager user-name manager plaintext password  
ArubaOS-Switch(config)# password operator user-name operator plaintext password
```

Note: If ‘user-name’ is not configured for either the manager or operator category, then “manager” and “operator” are the default user names respectively.

Comware7

```
[Comware7]super ?  
authentication-mode Specify the authentication mode for user role switching  
default Default target user role  
password Set the password used to switch to a user role  
  
[Comware7]super password ?  
hash Specify a hashtext password  
role Specify the user role  
simple Specify a plaintext password  
<cr>  
  
[Comware7]super password role ?  
STRING<1-63> User role name  
network-admin  
network-operator  
level-0  
level-1  
level-2  
level-3  
level-4  
level-5  
level-6  
level-7  
level-8  
level-9  
level-10  
level-11  
level-12  
level-13  
level-14  
level-15  
security-audit  
  
[Comware7]super password role network-admin ?  
hash Specify a hashtext password  
simple Specify a plaintext password  
<cr>  
  
[Comware7]super password role network-admin simple ?  
STRING<1-63> Plaintext password string  
  
[Comware7]super password role network-admin simple password ?  
<cr>  
  
[Comware7]super password role network-admin simple password  
  
[Comware7]super password role network-admin hash ?  
STRING<1-110> Hashtext password string  
  
[Comware7]super password role network-admin hash password ?  
<cr>  
  
[Comware7]super password role network-admin hash password
```

```

[Comware7]local-user ?
STRING<1-55> Local user name, which cannot contain the domain name

[Comware7]local-user manager ?
<cr>

[Comware7]local-user manager
New local user added.

[Comware7-luser-manage-manager]?
Local-user protocol view commands:
access-limit           Specify the maximum concurrent access number for the
                        local user
authorization-attribute  Specify authorization attributes of local user
bind-attribute          Specify binding attributes of local user
cfdb                   Connectivity Fault Detection (CFD) module
diagnostic-logfile     Diagnostic log file configuration
display                 Display current system information
group                  Specify user group of local user
logfile                Log file configuration
monitor                System monitor
password               Specify password of local user
password-control       Password control feature
ping                  Ping function
quit                  Exit from current command view
return                Exit to User View
save                  Save current configuration
security-logfile       Security log file configuration
service-type           Specify a service type for the local user
state                 Specify state of local user
tracert                Tracert function
undo                  Cancel current setting

[Comware7-luser-manage-manager]password ?
hash      Specify a hashtext password
simple   Specify a plaintext password
<cr>

[Comware7-luser-manage-manager]password simple ?
STRING<1-63> Plaintext password string

[Comware7-luser-manage-manager]password simple password ?
<cr>

[Comware7-luser-manage-manager]password simple password

[Comware7-luser-manage-manager]authorization-attribute ?
acl          Specify ACL of local user
callback-number  Specify PPP callback number of local user
idle-cut      Specify idle cut function for local user
user-profile   Specify user profile of local user
user-role      Specify user role of the local user
vlan          Specify VLAN ID of local user
work-directory Specify work directory of local user

[Comware7-luser-manage-manager]authorization-attribute user-role ?
STRING<1-63>      User role name
network-admin
network-operator
level-0
level-1

```

```

level-2
level-3
level-4
level-5
level-6
level-7
level-8
level-9
level-10
level-11
level-12
level-13
level-14
level-15
security-audit

[Comware7-luser-manage-manager]authorization-attribute user-role network-admin ?

acl          Specify ACL of local user
callback-number  Specify PPP callback number of local user
idle-cut      Specify idle cut function for local user
user-profile   Specify user profile of local user
vlan          Specify VLAN ID of local user
work-directory  Specify work directory of local user
<cr>

[Comware7-luser-manage-manager]authorization-attribute user-role network-admin

[Comware7-luser-manage-manager]service-type ?

ftp          FTP service
http         HTTP service type
https        HTTPS service type
pad          X.25 PAD service
ssh          Secure Shell service
telnet       Telnet service
terminal     Terminal access service

[Comware7-luser-manage-manager]service-type terminal ?

http         HTTP service type
https        HTTPS service type
pad          X.25 PAD service
ssh          Secure Shell service
telnet       Telnet service
<cr>

[Comware7-luser-manage-manager]service-type terminal

[Comware7-luser-manage-manager]password ?

hash          Specify a hashtext password
simple        Specify a plaintext password
<cr>

[Comware7-luser-manage-manager]password hash ?
STRING<1-110>  Hashtext password string

[Comware7-luser-manage-manager]password hash password ?
<cr>

[Comware7-luser-manage-manager]password hash password

```

[the next command sets the use of uid/pw for login via console, even though the scheme is defined for AAA, it works with local uid/pw configuration]

```
[Comware7]user-interface aux 0

[Comware7-line-aux0]?
Line view commands:
activation-key      Specify a character to begin a terminal session
authentication-mode Login authentication mode
auto-execute        Automatic execution configuration
cfd                 Connectivity Fault Detection (CFD) module
command             Command authorization and accounting
databits            Set the databits of line
diagnostic-logfile Diagnostic log file configuration
display             Display current system information
escape-key          Escape key sequence configuration
flow-control        Set a flow control mode
history-command    History command buffer configuration
idle-timeout       User connection idle timeout
logfile             Log file configuration
monitor             System monitor
parity              Set the parity check method
ping                Ping function
protocol            Set the protocols to be supported by the line
quit                Exit from current command view
return              Exit to User View
save                Save current configuration
screen-length      Specify the number of lines to be displayed on a screen
security-logfile   Security log file configuration
set                 Specify line parameters
shell               Enable terminal user service
speed               Line transmission speed
stopbits            Specify the stop bit of line
terminal            Specify terminal attribute
tracert             Tracert function
undo               Cancel current setting
user-role           Specify user role configuration information
```

```
[Comware7-line-aux0]authentication-mode ?
none      Login without authentication
password  Password authentication
scheme    Authentication use AAA
```

```
[Comware7-line-aux0]authentication-mode scheme ?
<cr>
```

```
[Comware7-line-aux0]authentication-mode scheme
```

[the next command sets the use of password only for login via console]

```
[Comware7]user-interface aux 0

[Comware7-line-aux0]authentication-mode password ?
<cr>

[Comware7-line-aux0]authentication-mode password

[Comware7-line-aux0]set ?
authentication  Specify the authentication parameters for line
```

```
[Comware7-line-aux0]set authentication ?
password Specify the password of line

[Comware7-line-aux0]set authentication password ?
hash Specify a hashtext password
simple Specify a plaintext password

[Comware7-line-aux0]set authentication password simple ?
STRING<1-16> Plaintext password string

[Comware7-line-aux0]set authentication password simple password ?
<cr>

[Comware7-line-aux0]set authentication password simple password
```

Cisco

```
Cisco(config)#enable ?
last-resort Define enable action if no TACACS servers respond
password Assign the privileged level password (MAX of 25 characters)
secret Assign the privileged level secret (MAX of 25 characters)
use-tacacs Use TACACS to check enable passwords

Cisco(config)#enable password ?
0 Specifies an UNENCRYPTED password will follow
7 Specifies a HIDDEN password will follow
LINE The UNENCRYPTED (cleartext) 'enable' password
level Set exec level password

Cisco(config)#enable password 0 ?
LINE The UNENCRYPTED (cleartext) 'enable' password

Cisco(config)#enable password 0 password ?
LINE <cr>

Cisco(config)#enable password 0 password

Cisco(config)#enable secret ?
0 Specifies an UNENCRYPTED password will follow
5 Specifies an ENCRYPTED secret will follow
LINE The UNENCRYPTED (cleartext) 'enable' secret
level Set exec level password

Cisco(config)#enable secret 0 ?
LINE The UNENCRYPTED (cleartext) 'enable' secret

Cisco(config)#enable secret 0 secret ?
LINE <cr>

Cisco(config)#enable secret 0 secret

Cisco(config)#username ?
WORD User name

Cisco(config)#username manager ?
aaa AAA directive
access-class Restrict access by access-class
autocommand Automatically issue a command after the user logs in
callback-dialstring Callback dialstring
callback-line Associate a specific line with this callback
callback-rotary Associate a rotary group with this callback
dnis Do not require password when obtained via DNS
mac This entry is for MAC Filtering where username=mac
nocallback-verify Do not require authentication after callback
```

```

noescape          Prevent the user from using an escape character
nohangup         Do not disconnect after an automatic command
nopassword        No password is required for the user to log in
password          Specify the password for the user
privilege         Set user privilege level
secret            Specify the secret for the user
user-maxlinks    Limit the user's number of inbound links
view              Set view name
<cr>

Cisco(config)#username manager privilege ?
<0-15> User privilege level

Cisco(config)#username manager privilege 15 ?
aaa               AAA directive
access-class      Restrict access by access-class
autocommand       Automatically issue a command after the user logs in
callback-dialstring Callback dialstring
callback-line     Associate a specific line with this callback
callback-rotary   Associate a rotary group with this callback
dns               Do not require password when obtained via DNIS
mac               This entry is for MAC Filtering where username=mac
nocallback-verify Do not require authentication after callback
noescape          Prevent the user from using an escape character
nohangup         Do not disconnect after an automatic command
nopassword        No password is required for the user to log in
password          Specify the password for the user
privilege         Set user privilege level
secret            Specify the secret for the user
user-maxlinks    Limit the user's number of inbound links
view              Set view name
<cr>

Cisco(config)#username manager privilege 15 password ?
0      Specifies an UNENCRYPTED password will follow
7      Specifies a HIDDEN password will follow
LINE   The UNENCRYPTED (cleartext) user password

Cisco(config)#username manager privilege 15 password password ?
LINE   <cr>

Cisco(config)#username manager privilege 15 password password
Cisco(config)#username operator privilege 0 password password

[the next command sets the use of uid/pw for login via console]

Cisco(config)#line console 0

Cisco(config-line)#login ?
local   Local password checking
<cr>

Cisco(config-line)#login local ?
<cr>
Cisco(config-line)#login local

[the next command sets the use of password for login via console]

Cisco(config)#line console 0

```

```
Cisco(config-line)#login
% Login disabled on line 0, until 'password' is set

Cisco(config-line)#password ?
 0      Specifies an UNENCRYPTED password will follow
 7      Specifies a HIDDEN password will follow
 LINE   The UNENCRYPTED (cleartext) line password

Cisco(config-line)#password 0 password ?
LINE    <cr>

Cisco(config-line)#password 0 password
```

Recover lost password CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
See details below	See details below	See details below	See details below

Each procedure requires direct access to the switch through a console cable.

Recover lost password CLI Configurable options

ArubaOS-CX-Switch
<pre>switch login: admin Password: <forgot-password> One Time Token for password reset (valid for 30 mins) : AAEAAQABAAEAgI79uC8K+JJKJvxSu+U3JH7iLw8SqqaN/UdKYZeZw0WdXxKnhUQVamggmN5ZqJCLfxUnXAGvOES4eyBX5 p/FwcoYvBFF2dIJ5g5FeYOC862NTL95wmEX01e5V4VqhSVtxeMYOeuanzlmzSfkBZa0FWXVOwYHou3ptfj1JjPLjbz3 Login to MNP portal @ www.hpe.com/networking/register to generate the One-Time-Password. Copy the OTP and input at the prompt below. Enter the One-Time-Password:</pre>
ArubaOS-Switch
<p>Requires direct access to the switch (option 3 requires console cable). Default front panel security settings has all three options enabled.</p> <p>Option 1) erase local usernames/passwords by depressing front panel clear button for one second. Requires physical access to switch.</p> <p>Option 2) execute a factory reset by using a combination/sequence of the "clear" button and the "reset" button (reference product documentation for details). Requires physical access to switch.</p> <p>Option 3) password recovery procedure requires direct access to the switch (with console cable) and calling HPE Networking technical support (reference product documentation for details).</p>
Comware 7
<p>Requires direct access to the switch (with console cable).</p> <p>If password recovery capability is enabled (which is the default setting), a console user can access the device configuration without authentication and reconfigure the console login password and user privilege level passwords.</p> <p>If password recovery capability is disabled, a console user must restore the factory-default configuration before configuring new passwords. Restoring the factory-default configuration deletes the next-startup configuration files.</p> <p>Availability of related BootROM options varies with different versions of Comware.</p> <pre>Press Ctrl-B to enter Boot Menu... 1 BootRom password: Not required. Please press Enter to continue. Password recovery capability is disabled. BOOT MENU</pre>

1. Download application file to flash
2. Select application file to boot
3. Display all files in flash
4. Delete file from flash
5. Restore to factory default configuration
6. Enter bootrom upgrade menu
7. Skip current configuration file
8. Reserved
9. Set switch startup mode
0. Reboot

Ctrl+F: Format File System

Ctrl+D: Enter Debugging Mode

Ctrl+T: Enter Board Test Environment

Enter your choice(0-9) :

Select 7 in order for switch to load its default configuration file, then select 0 to Reboot the switch.

Cisco

Depending on configuration of the "password-recovery" feature (see section c, Protect Local Password), there are two methods available; both require direct access to the switch (with console cable) and depressing the appropriate front panel button.

See the Cisco product documentation for exact procedure.

Role based management CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware7	Cisco
			Cisco(config)#aaa new-model
ArubaOS-CX-Switch(config)# aaa authorization commands default group	ArubaOS-Switch(config)# aaa authorization commands local	[Comware7]role name network-admin2	Cisco(config)#parser view network-admin2 Cisco(config-view)#secret 0 password
ArubaOS-CX-Switch(config)# aaa authorization commands default group none	ArubaOS-Switch(config)# aaa authorization group network-admin2 1 match-command "command:show interface brief" permit log	[Comware7-role-network-admin2]rule 1 permit command display interface brief	Cisco(config-view)#commands exec include show interface summary
ArubaOS-CX-Switch(config)# aaa authorization commands default group tacacs	ArubaOS-Switch(config)# aaa authorization group network-admin2 2 match-command "command:show ip" permit log	[Comware7-role-network-admin2]rule 2 permit command display ip interface brief	Cisco(config-view)#commands exec include show ip interface brief
	ArubaOS-Switch# show authorization group network-admin2	[Comware7]local-user test1 class manage [Comware7-luser-manage-test1]password simple_password	(no specific show commands)
		[Comware7-luser-manage-test1]service-type telnet	
		[Comware7-luser-manage-test1]authorization-attribute user-role network-admin2	
		[Comware7]display role name network-admin2 [Comware7]display local-user user-name test1 class manage	

Role based management CLI Configurable options

ArubaOS-CX-Switch
Configure a tacacs server before creating a tacacs group.
ArubaOS-CX-Switch(config)# tacacs-server
auth-type Set authentication type. (Default: pap)
host Specify a TACACS+ server
key Set shared secret
timeout Set the transmission timeout interval

```

ArubaOS-CX-Switch(config)# tacacs-server host
WORD TACACS+ server IP address or hostname

ArubaOS-CX-Switch(config)# tacacs-server host 10.0.0.2
auth-type Set authentication type. (Default: global TACACS authentication type)
key Set shared secret
port Set authentication port
timeout Set the transmission timeout interval
vrf VRF Configuration
<cr>

ArubaOS-CX-Switch(config)# tacacs-server host 10.0.0.2

ArubaOS-CX-Switch(config)# aaa
authentication User authentication
authorization User authorization
group Define AAA server group
ArubaOS-CX-Switch(config)# aaa authorization
commands Command authorization

ArubaOS-CX-Switch(config)# aaa authorization commands
default Default authorization list

ArubaOS-CX-Switch(config)# aaa authorization commands default
group Server-group
none No authorization

ArubaOS-CX-Switch(config)# aaa authorization commands default
group Server-group
none No authorization

ArubaOS-CX-Switch(config)# aaa authorization commands default group
WORD Group Name or family name (Valid family names: tacacs, none)

ArubaOS-CX-Switch(config)# aaa authorization commands default group none
WORD Group Name or family name (Valid family names: tacacs, none)
<cr>

ArubaOS-CX-Switch(config)# aaa authorization commands default group none

```

ArubaOS-Switch

```

ArubaOS-Switch(config)# aaa authorization ?
commands Configure command authorization.
group Create or remove an authorization rule.

ArubaOS-Switch(config)# aaa authorization commands ?
access-level Configure command authorization level.
local Authorize commands using local groups.
radius Authorize commands using RADIUS.
none Do not require authorization for command access.
auto Authorize commands with the same protocol used for authentication.
tacacs Authorize commands using TACACS+.

ArubaOS-Switch(config)# aaa authorization commands local ?
<cr>
ArubaOS-Switch(config)# aaa authorization commands local

ArubaOS-Switch(config)# aaa authorization group ?
GROUPNAME-STR The group name.

ArubaOS-Switch(config)# aaa authorization group network-admin2 ?

```

```

<1-2147483647>          The sequence number.

ArubaOS-Switch(config)# aaa authorization group network-admin2 1 ?
match-command      Specify the command to match.

ArubaOS-Switch(config)# aaa authorization group network-admin2 1 match-command ?
COMMAND-STR        The command to match.

ArubaOS-Switch(config)# aaa authorization group network-admin2 1 match-command "command:show
interfaces brief" ?

permit            Permit the specified action.
deny              Deny the specified action.

ArubaOS-Switch(config)# aaa authorization group network-admin2 1 match-command "command:show
interface brief" permit ?

log                Generate an event log any time a match happens.
<cr>

ArubaOS-Switch(config)# aaa authorization group network-admin2 1 match-command "command:show
interface brief" permit log ?

<cr>

ArubaOS-Switch(config)# aaa authorization group network-admin2 1 match-command "command:show
interface brief" permit log

ArubaOS-Switch(config)# aaa authorization group network-admin2 2 match-command "command:show
ip
" permit log

ArubaOS-Switch(config)# aaa authentication ?
allow-vlan        Configure authenticator ports to apply VLAN changes immediately.
captive-portal    Configure redirection to a captive portal server for additional
                  client authentication.
console          Configure authentication mechanism used to control access to the
                  switch console.
disable-username Bypass the username during authentication while accessing the
                  switch to get Manager or Operator access.
local-user        Create or remove a local user account.
lockout-delay    The number of seconds after repeated login failures before a user
                  may again attempt login.
login             Specify that switch respects the authentication server's privilege
                  level.
mac-based        Configure authentication mechanism used to control mac-based port
                  access to the switch.
num-attempts     The number of login attempts allowed.
port-access       Configure authentication mechanism used to control access to the
                  network.
ssh               Configure authentication mechanism used to control SSH access to
                  the switch.
telnet            Configure authentication mechanism used to control Telnet access
                  to the switch.
web               Configure authentication mechanism used to control web access to
                  the switch.
web-based        Configure authentication mechanism used to control web-based port
                  access to the switch.

ArubaOS-Switch(config)# aaa authentication local-user ?
USERNAME-STR      The username.

ArubaOS-Switch(config)# aaa authentication local-user test1 ?

```

```

aging-period      Configures the password aging time for a user.
clear-history-record  Clears the history of the password for a user.
group            Specify the group for a username.
min-pwd-length    Configures the minimum password length for a user.

ArubaOS-Switch(config)# aaa authentication local-user test1 group ?
GROUPNAME-STR      The group name.

ArubaOS-Switch(config)# aaa authentication local-user test1 group network-admin2 ?
password          Specify the password.
<cr>

ArubaOS-Switch(config)# aaa authentication local-user test1 group network-admin2 password ?
plaintext        Use plain text password.
sha1             Use SHA-1 hash.

ArubaOS-Switch(config)# aaa authentication local-user test1 group network-admin2 password
plaint
ext ?

<cr>

ArubaOS-Switch(config)# aaa authentication local-user test1 group network-admin2 password
plaint
ext
New password for test1: *****
Please retype new password for test1: *****
```

```

ArubaOS-Switch# show authorization group ?
GROUPNAME-STR      The group name.
<cr>

ArubaOS-Switch# show authorization group network-admin2

Local Management Groups - Authorization Information

Group Name           : network-admin2
Group Privilege Level : 4

Users
-----
test1

Seq. Num. | Permission Rule Expression          Log
----- + ----- -----
1         | Permit      command:show interfaces brief   Enable
2         | Permit      command:show ip                 Enable
```

Comware 7

```

[Comware7]role ?
default-role  Specify the default user role configuration
feature-group Specify a feature group
name          Specify a name for the user role

[Comware7]role name ?
STRING<1-63> User role name
```

```

[Comware7]role name network-admin2 ?
<cr>

[Comware7]role name network-admin2
[Comware7-role-network-admin2]%Jun 25 21:48:33:154 2016 Comware7 RBAC/6/INFO: Anonymous user
created role network-admin2 successfully.

[Comware7-role-network-admin2]?
Role view commands:
  cfd           Connectivity Fault Detection (CFD) module
  description   Describe the user role
  diagnostic-logfile Diagnostic log file configuration
  display       Display current system information
  interface     Specify the privilege of processing interface
  ip            Specify IP configuration
  logfile       Log file configuration
  monitor       System monitor
  ping          Ping function
  quit          Exit from current command view
  return        Exit to User View
  rule          Specify a privilege control rule for the user role
  save          Save current configuration
  security-logfile Security log file configuration
  tracert       Tracert function
  undo          Cancel current setting
  vlan          Specify the privilege of processing VLAN
  vpn-instance  Specify the privilege of processing VPN instance

[Comware7-role-network-admin2]rule ?
  INTEGER<1-256> Rule number

[Comware7-role-network-admin2]rule 1 ?
  deny      Deny access to the matched commands
  permit    Permit access to the matched commands

[Comware7-role-network-admin2]rule 1 permit ?
  command   Specify a command matching string
  execute   Specify the execute (X) type commands
  read      Specify the read (R) type commands
  write     Specify the write (W) type commands

[Comware7-role-network-admin2]rule 1 permit command ?
  TEXT<1-128> Command matching string. It may comprise multiple segments
              separated by semicolons. Each segment represents one or more
              commands and can contain multiple wildcards (*). The commands of
              the next segment, if any, must be subcommands of the previous
              segment.

[Comware7-role-network-admin2]rule 1 permit command display interface brief ?
  TEXT<1-104> Command matching string. It may comprise multiple segments
              separated by semicolons. Each segment represents one or more
              commands and can contain multiple wildcards (*). The commands of
              the next segment, if any, must be subcommands of the previous
              segment.

<cr>

[Comware7-role-network-admin2]rule 1 permit command display interface brief
[Comware7-role-network-admin2]rule 2 permit command display ip interface brief

Comware7]local-user ?
  STRING<1-55> Local user name, which cannot contain the domain name

```

```

[Comware7]local-user test1 ?
  class  Specify a class for the local user
<cr>

[Comware7]local-user test1 class ?
  manage  Device management user
  network  Network access user

[Comware7]local-user test1 class manage ?
<cr>

[Comware7]local-user test1 class manage
New local user added.

[Comware7-luser-manage-test1]?
Local-user protocol view commands:
  access-limit          Specify the maximum concurrent access number for the
                        local user
  authorization-attribute  Specify authorization attributes of local user
  bind-attribute         Specify binding attributes of local user
  cfd                   Connectivity Fault Detection (CFD) module
  diagnostic-logfile    Diagnostic log file configuration
  display               Display current system information
  group                 Specify user group of local user
  ip                    Specify IP configuration
  logfile               Log file configuration
  monitor               System monitor
  password              Specify password of local user
  password-control      Password control feature
  ping                  Ping function
  quit                  Exit from current command view
  return                Exit to User View
  save                  Save current configuration
  security-logfile     Security log file configuration
  service-type          Specify a service type for the local user
  state                 Specify state of local user
  tracert               Tracert function
  undo                  Cancel current setting

[Comware7-luser-manage-test1]password ?
  hash     Specify a hashtext password
  simple   Specify a plaintext password
<cr>

[Comware7-luser-manage-test1]password simple ?
  STRING<1-63>  Plaintext password string

[Comware7-luser-manage-test1]password simple password ?
<cr>

[Comware7-luser-manage-test1]password simple password

[Comware7-luser-manage-test1]service-type ?
  ftp      FTP service
  http    HTTP service type
  https   HTTPS service type
  pad     X.25 PAD service
  ssh     Secure Shell service
  telnet  Telnet service
  terminal Terminal access service

[Comware7-luser-manage-test1]service-type telnet ?

```

```

http      HTTP service type
https    HTTPS service type
pad       X.25 PAD service
ssh       Secure Shell service
terminal  Terminal access service
<cr>

[Comware7-luser-manage-test1]service-type telnet

[Comware7-luser-manage-test1]authorization-attribute ?
acl          Specify ACL of local user
callback-number  Specify PPP callback number of local user
idle-cut     Specify idle cut function for local user
user-profile  Specify user profile of local user
user-role    Specify user role of the local user
vlan         Specify VLAN ID of local user
work-directory  Specify work directory of local user

[Comware7-luser-manage-test1]authorization-attribute user-role ?
STRING<1-63>      User role name
network-admin
network-operator
level-0
level-1
level-2
level-3
level-4
level-5
level-6
level-7
level-8
level-9
level-10
level-11
level-12
level-13
level-14
level-15
security-audit
network-admin2

[Comware7-luser-manage-test1]authorization-attribute user-role network-admin2 ?
acl          Specify ACL of local user
callback-number  Specify PPP callback number of local user
idle-cut     Specify idle cut function for local user
user-profile  Specify user profile of local user
vlan         Specify VLAN ID of local user
work-directory  Specify work directory of local user
<cr>

[Comware7-luser-manage-test1]authorization-attribute user-role network-admin2

[Comware7-luser-manage-test1]undo authorization-attribute user-role network-operator

[Comware7]display role ?
>           Redirect it to a file
>>         Redirect it to a file in append mode
feature     Specify a feature
feature-group  Specify a feature group
name        Specify a name for the user role
|           Matching output

```

```

<cr>

[Comware7]display role name ?
STRING<1-63>      User role name
network-admin
network-operator
level-0
level-1
level-2
level-3
level-4
level-5
level-6
level-7
level-8
level-9
level-10
level-11
level-12
level-13
level-14
level-15
security-audit
network-admin2

[Comware7]display role name network-admin2 ?
>      Redirect it to a file
>>     Redirect it to a file in append mode
|      Matching output
<cr>

[Comware7]display role name network-admin2
Role: network-admin2
Description:
VLAN policy: permit (default)
Interface policy: permit (default)
VPN instance policy: permit (default)
-----
Rule    Perm   Type   Scope           Entity
-----
1       permit   command   display interface brief
2       permit   command   display ip interface brief
R:Read W:Write X:Execute

[Comware7]display local-user ?
>      Redirect it to a file
>>     Redirect it to a file in append mode
class   Specify a class for the local user
idle-cut   Display local users with idle cut function
service-type   Display local users of specified service type
state   Display local users in state of active or block
user-name   Display local users using specified user name
vlan     Display local users in specified VLAN
|      Matching output
<cr>

[Comware7]display local-user user-name ?
STRING<1-55>  User name

[Comware7]display local-user user-name test1 ?
class   Specify a class for the local user

[Comware7]display local-user user-name test1 class ?

```

```

manage Device management user
network Network access user

[Comware7]display local-user user-name test1 class manage ?
> Redirect it to a file
>> Redirect it to a file in append mode
| Matching output
<cr>

[Comware7]display local-user user-name test1 class manage
Total 1 local users matched.

Device management user test1:
State: Active
Service type: Telnet
User group: system
Bind attributes:
Authorization attributes:
Work directory: flash:
User role list: network-admin2

```

Cisco

```

Cisco(config)#aaa new-model

Cisco(config)#parser ?
cache Configure parser cache
command Configure command serialization
config Configure config generation
maximum specify performance maximums for CLI operations
view View Commands

Cisco(config)#parser view ?
WORD View Name

Cisco(config)#parser view network-admin2 ?
superview SuperView Commands
<cr>

Cisco(config)#parser view network-admin2

Cisco(config-view)#?
View commands:
commands Configure commands for a view
default Set a command to its defaults
exit Exit from view configuration mode
no Negate a command or set its defaults
secret Set a secret for the current view

Cisco(config-view)#secret ?
0 Specifies an UNENCRYPTED password will follow
5 Specifies an ENCRYPTED secret will follow
LINE The UNENCRYPTED (cleartext) view secret string

Cisco(config-view)#secret 0 ?
LINE The UNENCRYPTED (cleartext) view secret string

Cisco(config-view)#secret 0 password ?
LINE <cr>

Cisco(config-view)#secret 0 password

```

```

Cisco(config-view)#commands ?
SASL-profile                                     SASL profile configuration mode
aaa-attr-list                                    AAA attribute list config mode
aaa-user                                         AAA user definition
acct_mlist                                       AAA accounting methodlist definitions
address-family                                   Address Family configuration mode
archive                                         Archive the router configuration mode
arp-nacl                                         ARP named ACL configuration mode
bgp address-family                             Address Family configuration mode
call-home                                        call-home config mode
call-home-profile                             call-home profile config mode
cc-policy                                         policy-map config mode
cfg-af-topo                                      Configure non-base topology mode
cns-connect-config                            CNS Connect Info Mode
cns-connect-intf-config                      CNS Connect Intf Info Mode
cns-tmpl-connect-config                     CNS Template Connect Info Mode
conf-attr-map                                    LDAP attribute map config mode
conf-ldap-server                                LDAP server config mode
conf-ldap-sg                                     LDAP server group config mode
conf-rad-filter                                  RADIUS filter config mode
conf-rad-server                                 RADIUS server config mode
conf-tac-server                                 Tacacs Server Definition
config-sensor-cdplist                         Subscriber CDP attribute list
config-sensor-dhcplist                        Subscriber DHCP attribute list
config-sensor-lldplist                         Subscriber LLDP attribute list
configure                                       Global configuration mode
crypto-identity                                Crypto identity config mode
crypto-ipsec-profile                          IPsec policy profile mode
crypto-keyring                                 Crypto Keyring command mode
crypto-map                                      Crypto map config mode
crypto-map-fail-close                         Crypto map fail close mode
crypto-transform                               Crypto transform config mode
dhcp                                            DHCP pool configuration mode
dhcp-class                                     DHCP class configuration mode
dhcp-guard                                     IPv6 dhcp guard configuration mode
dhcp-pool-class                               Per DHCP pool class configuration mode
dhcp-relay-info                                DHCP class relay agent info configuration mode
dhcp-subnet-secondary                         Per DHCP secondary subnet configuration mode
dot1x                                           CTS dot1x configuration mode
dot1x-credential-mode                         dot1x credential profile configuration mode
eap-mprofile-mode                            eap method profile configuration mode
eap-profile-mode                             eap profile configuration mode
eigrp_af_classic_submode                     Address Family configuration mode
eigrp_af_intf_submode                        Address Family interfaces configuration mode
eigrp_af_submode                             Address Family configuration mode
eigrp_af_topo_submode                        Address Family Topology configuration mode
eigrp_sf_intf_submode                        Service Family interfaces configuration mode
eigrp_sf_submode                            Service Family configuration mode
eigrp_sf_topo_submode                        Service Family Topology configuration mode
exec                                           Exec mode
extcomm-list                                   IP Extended community-list configuration mode
fallback-profile-mode                         fallback profile configuration mode
fh_applet                                     FH Applet Entry Configuration
fh_applet_trigger                            FH Applet Trigger Configuration
filterserver                                   AAA filter server definitions
flow-cache                                     Flow aggregation cache config mode
flow-sampler-map                             Flow sampler map config mode
flowexp                                         Flow Exporter configuration mode
flowmon                                         Flow Monitor configuration mode
flowrec                                         Flow Record configuration mode
identity-policy-mode                         identity policy configuration mode
identity-profile-mode                        identity profile configuration mode

```

if-topo	Configure interface topology parameters
interface	Interface configuration mode
ip-sla	IP SLAs entry configuration
ip-sla-dhcp	IP SLAs dhcp configuration
ip-sla-dns	IP SLAs dns configuration
ip-sla-ftp	IP SLAs ftp configuration
ip-sla-http	IP SLAs http configuration
ip-sla-http-rr	IP SLAs HTTP raw request Configuration
ip-sla-icmpEcho	IP SLAs icmpEcho configuration
ip-sla-pathEcho	IP SLAs pathEcho configuration
ip-sla-pathJitter	IP SLAs pathJitter configuration
ip-sla-tcp	IP SLAs tcpConnect configuration
ip-sla-udpEcho	IP SLAs udpEcho configuration
ip-sla-udpJitter	IP SLAs udpJitter configuration
ip-sla-video	IP SLAs video configuration
ipczone	IPC Zone config mode
ipczone-assoc	IPC Association config mode
ipenacl	IP named extended access-list configuration mode
iprbacl	IP role-based access-list configuration mode
ipsnacl	IP named simple access-list configuration mode
ipv6-router	IPv6 router configuration mode
ipv6-snooping	IPv6 snooping mode
ipv6acl	IPv6 access-list configuration mode
ipv6dhcp	IPv6 DHCP configuration mode
ipv6dhcpsvs	IPv6 DHCP Vendor-specific configuration mode
ipv6rbacl	IPv6 role-based access-list configuration mode
isakmp-profile	Crypto ISAKMP profile command mode
kron-occurrence	Kron Occurrence SubMode
kron-policy	Kron Policy SubMode
line	Line configuration mode
log_config	Log configuration changes made via the CLI
mac-enacl	MAC named extended ACL configuration mode
mac_address_config	MAC address group configuration mode
macro_auto_trigger_cfg	Configuration mode for autosmartport user triggers
manual	CTS manual configuration mode
map-class	Map class configuration mode
map-list	Map list configuration mode
mka-policy	MKA Policy config mode
mmon-fmon	Flow Monitor configuration mode
mmon-fmon-if-inline	Flow Monitor inline configuration mode under inline policy
mmon-fmon-pmap-inline	Flow Monitor inline configuration mode under policy class
mstp_cfg	MSTP configuration mode
mt-flowspec	mt flow specifier
mt-path	mt path-config
mt-prof-perf	mt profile perf-monitor
mt-prof-perf-params	mt profile perf-monitor parameters
mt-prof-perf-rtp-params	mt profile perf-monitor rtp parameters
mt-prof-sys	mt profile system
mt-prof-sys-params	mt profile system parameters
mt-sesparam	mt session-params
multicast-flows-classmap	multicast-classmap config mode
nd-inspection	IPv6 NDP inspection configuration mode
nd-raguard	IPv6 RA guard configuration mode
null-interface	Null interface configuration mode
parser_test	Test mode for internal test purposes
policy-list	IP Policy List configuration mode
preauth	AAA Preauth definitions
profile-map	profile-map config mode
radius-attrl	Radius Attribute-List Definition

radius-da-locsvr	Radius Application configuration
radius-locsvr-client	Radius Client configuration
radius-policy-device-locsvr	Radius Application configuration
radius-proxy-locsvr	Radius Application configuration
radius-sesm-locsvr	Radius Application configuration
rib_rwatch_test	RIB_RWATCH test configuration mode
route-map	Route map config mode
router	Router configuration mode
router-af-topology	Topology configuration mode
router_eigrp_classic	EIGRP Router configuration classic mode
router_eigrp_named	EIGRP Router configuration named mode
rsvp-local-if-policy	RSVP local policy interface configuration mode
rsvp-local-policy	RSVP local policy configuration mode
rsvp-local-subif-policy	RSVP local policy sub-interface configuration mode
saf_ec_cfg	Saf external-clients configuration mode
saf_ec_client_cfg	Saf external-client configuration mode
sampler	Sampler configuration mode
scope	scope configuration mode
scope address-family	Address Family configuration mode
scope address-family topology	Topology configuration mode
sep-init-config	WSMA Initiator profile Mode
sep-listen-config	WSMA Listener profile Mode
sf_client_reg_mode	service-family exec test mode
sg-radius	Radius Server-group Definition
sg-tacacs+	Tacacs+ Server-group Definition
sisf-sourceguard	IPv6 sourceguard mode
ssh-pubkey	SSH public key identification mode
ssh-pubkey-server	SSH public key entry mode
ssh-pubkey-user	SSH public key entry mode
subscriber-policy	Subscriber policy configuration mode
tcl	Tcl mode
template	Template configuration mode
template-peer-policy	peer-policy configuration mode
template-peer-session	peer-session configuration mode
top-af-base	AF base topology configuration mode
top-talkers	Netflow top talkers config mode
tracking-config	Tracking configuration mode
transceiver	Transceiver type config mode
vc-class	VC class configuration mode
view	View configuration mode
vrf	Configure VRF parameters
vrf-af	Configure IP VRF parameters
wsma-config-agent	WSMA Config Agent Profile configuration mode
wsma-exec-agent	WSMA Exec Agent Profile configuration mode
wsma-fsagent	WSMA FileSys Agent Profile configuration mode
wsma-notify-agent	WSMA Notify Agent Profile configuration mode
xml-app	XML Application configuration mode
xml-transport	XML Transport configuration mode

```
Cisco(config-view)#commands exec ?
exclude          Exclude the command from the view
include          Add command to the view
include-exclusive Include in this view but exclude from others

Cisco(config-view)#commands exec include ?
LINE  Keywords of the command
all    wild card support

Cisco(config-view)#commands exec include show interface summary ?
LINE  <cr>

Cisco(config-view)#commands exec include show interface summary
```

```
Cisco(config-view)#commands exec include show ip interface brief  
Cisco(config-view)#exit  
Cisco(config)#username test1 privilege 15 view network-admin2 password 0 password
```

Chapter 3 Time Service

This chapter compares commands to configure and synchronize the switch time with a trusted time source, using time protocols such as Network Time Protocol (NTP) and Simple NTP (SNTP).

Using time synchronization ensures a uniform time among interoperating devices. This helps to manage and troubleshoot switch operation by attaching meaningful time data to event and error messages.

NTP CLI Comparison

ArubaOS-CX-Switch	ArubaOS-Switch	Comware7	Cisco
Configuration commands			
ntp server 10.0.100.251	ntp server 10.0.100.251 ntp unicast ntp enable	ntp-service unicast- server 10.0.100.251	ntp server 10.0.100.251
clock timezone us/central	clock timezone us central	ntp-service enable	clock timezone US-Cent - 6
	clock summer-time	clock timezone US- Central minus 06:00:00	
ntp server {ip- address} [key key- id] [maxpoll max- poll] [minpoll min- poll] [prefer] [version] ntp vrf mgmt default	ntp server <IP- ADDR> ntp server <IPV6- ADDR>		ntp server {ip-address ipv6-address dns-name} [key key-id] [maxpoll max-poll] [minpoll min- poll] [prefer] ntp server vrf <>
User Exec / Privileged Exec Commands			
show ntp associations	show ntp association	display ntp-service sessions	show ntp associations
show ntp status	show ntp status		show ntp status
show clock	show time	display clock	show clock show clock detail

NTP Service configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch(config)# ntp authentication NTP Authentication configuration authentication-key NTP Authentication Key configuration server NTP Association configuration trusted-key NTP Trusted Key configuration vrf NTP VRF to use for NTP server connections
ArubaOS-CX-Switch(config)# ntp authentication authentication NTP Authentication configuration authentication-key NTP Authentication Key configuration
ArubaOS-CX-Switch(config)# ntp authentication <cr>
ArubaOS-CX-Switch(config)# ntp authentication-key <1-65534> NTP Key Number

```

ArubaOS-CX-Switch(config)# ntp authentication-key 33
  md5 MD5 Password configuration

ArubaOS-CX-Switch(config)# ntp authentication-key 33 md5
  WORD          NTP MD5 Password <8-16> chars
  ciphertext   NTP cipher-password is encoded cipher-text

ArubaOS-CX-Switch(config)# ntp authentication-key 44 md5 ciphertext222
  trusted    NTP Key is trusted
<cr>

ArubaOS-CX-Switch(config)# ntp authentication-key 44 md5 ciphertext222

ArubaOS-CX-Switch(config)# ntp server
  WORD  NTP Association server name or IP Address

ArubaOS-CX-Switch(config)# ntp server 10.0.0.2
  burst      NTP Association use burst mode
  iburst     NTP Association use iburst mode
  key-id    NTP Key ID
  maxpoll   NTP maximum poll time to use configuration
  minpoll   NTP minimum poll time to use configuration
  prefer     NTP Association preference configuration
  version   NTP Association version configuration
<cr>

ArubaOS-CX-Switch(config)# ntp server 10.0.0.2 minpoll
<4-17>  NTP minimum poll time as a power of 2 (default 6)

ArubaOS-CX-Switch(config)# ntp server 10.0.0.2 minpoll 5
  burst      NTP Association use burst mode
  iburst     NTP Association use iburst mode
  key-id    NTP Key ID
  maxpoll   NTP maximum poll time to use configuration
  prefer     NTP Association preference configuration
  version   NTP Association version configuration
<cr>

ArubaOS-CX-Switch(config)# ntp server 10.0.0.2 minpoll 5 maxpoll
<4-17>  NTP maximum poll time as a power of 2 (default 10)

ArubaOS-CX-Switch(config)# ntp server 10.0.0.2 minpoll 5 maxpoll 10
  burst      NTP Association use burst mode
  iburst     NTP Association use iburst mode
  key-id    NTP Key ID
  prefer     NTP Association preference configuration
  version   NTP Association version configuration
<cr>

ArubaOS-CX-Switch(config)# ntp server 10.0.0.2 minpoll 5 maxpoll 10

ArubaOS-CX-Switch# show ntp
  associations      Show NTP Association summary
  authentication-keys Show NTP Authentication Keys information
  servers           Show NTP Servers information
  statistics         Show NTP Statistics information
  status             Show NTP Status information

ArubaOS-CX-Switch# show ntp associations
  detail      Show NTP Association column header information
  vsx-peer   Displays VSX peer switch information

```

```

ArubaOS-CX-Switch# show ntp authentication-keys
vsx-peer Displays VSX peer switch information
<cr>

ArubaOS-CX-Switch# show ntp servers
vsx-peer Displays VSX peer switch information
<cr>

ArubaOS-CX-Switch# show ntp statistics
vsx-peer Displays VSX peer switch information
<cr>

ArubaOS-CX-Switch# show ntp status
vsx-peer Displays VSX peer switch information
<cr>

```

ArubaOS-Switch

```

ArubaOS-Switch(config)# ntp ?
authentication      Configure NTP authentication.
broadcast          Operate in broadcast mode.
enable             Enable/disable NTP.
max-association   Maximum number of Network Time Protocol (NTP) associations.
server             Configure a NTP server to poll for time synchronization.
trap               Enable/disable NTP traps.
unicast            Operate in unicast mode.

ArubaOS-Switch(config)# ntp server ?
IP-ADDR           The IPv4 address of the server
IPV6-ADDR         The IPv6 address of the server

ArubaOS-Switch(config)# ntp server 10.0.100.251 ?
burst              Enables burst mode.
iburst             Enables initial burst (iburst) mode.
key-id             Set the authentication key to use for this server.
max-poll           Configures the maximum time intervals in seconds.
min-poll           Configures the minimum time intervals in seconds.
oobm               Use the OOBM interface to connect to the server.
<cr>

ArubaOS-Switch(config)# ntp server 10.0.100.251

ArubaOS-Switch(config)# ntp unicast ?
<cr>

ArubaOS-Switch(config)# ntp unicast

ArubaOS-Switch(config)# timesync ?
ntp                Update the system clock using NTP.
sntp               Update the system clock using SNTP.
timep              Update the system clock using TIMEP.
timep-or-sntp     Update the system clock using TIMEP or SNTP.

ArubaOS-Switch(config)# timesync ntp ?
<cr>

ArubaOS-Switch(config)# timesync ntp

ArubaOS-Switch(config)# show ntp associations

                                NTP Associations Entries

    Remote      St      T      When      Poll      Reach      Delay      Offset      Dispersion

```

```
-----  
10.0.100.251    2      u     497     6     177      0.000     0.000    8.02417
```

```
ArubaOS-Switch# show ntp status
```

```
NTP Status Information
```

NTP Status	:	Enabled	NTP Mode	:	Unicast
Synchronization Status	:	Synchronized	Peer Dispersion	:	0.00000 sec
Stratum Number	:	3	Leap Direction	:	0
Reference Assoc ID	:	0	Clock Offset	:	-490.51406 sec
Reference ID	:	10.0.100.251	Root Delay	:	0.09215 sec
Precision	:	2**-18	Root Dispersion	:	490.54954 sec
NTP Up Time	:	0d 0h 20m	Time Resolution	:	440 nsec
Drift	:	0.00000 sec/sec			
System Time	:	Wed Apr 27 17:43:49 2016			
Reference Time	:	Wed Apr 27 16:21:27 2016			

```
ArubaOS-Switch(config)# clock ?
```

datetime	Specify the time and date
set	Set current time and/or date.
summer-time	Enable/disable daylight-saving time changes.
timezone	Set the number of hours your location is to the West(-) or East(+) of GMT.

```
<cr>
```

```
ArubaOS-Switch(config)# clock timezone ?
```

gmt	Number of hours your timezone is to the West(-) or East(+) of GMT.
us	Timezone for US locations.

```
ArubaOS-Switch(config)# clock timezone us
```

alaska
aleutian
arizona
central
east_indiana
eastern
hawaii
michigan
mountain
pacific
samoa

```
ArubaOS-Switch(config)# clock timezone us central
```

```
<cr>
```

```
ArubaOS-Switch(config)# clock summer-time
```

```
<cr>
```

```
ArubaOS-Switch(config)# time ?
```

begin-date	The begin date of daylight savings time
MM/DD/[YY]YY	New date
daylight-time-rule	The daylight savings time rule for your location
end-date	The end date of daylight savings time
HH:MM[:SS]	New time
timezone	The number of minutes your location is West(-) or East(+) of GMT

```
<cr>
```

```
ArubaOS-Switch(config)# time daylight-time-rule ?
```

```
none
```

```

alaska
continental-us-and-canada
middle-europe-and-portugal
southern-hemisphere
western-europe
user-defined

ArubaOS-Switch(config)# time daylight-time-rule continental-us-and-canada ?
begin-date          The begin date of daylight savings time
MM/DD/[YY]YY        New date
end-date            The end date of daylight savings time
HH:MM[:SS]          New time
timezone           The number of minutes your location is West(-) or East(+) of GMT
<cr>

ArubaOS-Switch(config)# time daylight-time-rule continental-us-and-canada

ArubaOS-Switch# show time
Wed Apr 27 17:45:52 2016

```

Comware 7

```

[Comware7]ntp-service ?
authentication      Configure NTP authentication
authentication-keyid Specify an authentication key ID
dscp                Set the Differentiated Services Codepoint (DSCP) value
enable              Enable NTP service
ipv6                IPv6 protocol
max-dynamic-sessions Specify the maximum number of dynamic NTP sessions
peer                Permit full access
query               Permit control query
refclock-master     Configure the local clock as a master clock
reliable             Specify a trusted key
server              Permit server access and query
source               Specify a source interface
synchronization      Permit server access only
unicast-peer         Specify a NTP peer
unicast-server       Specify a NTP server

[Comware7]ntp-service unicast-server ?
STRING<1-253> Host name of the NTP server
X.X.X.X             IP address of the NTP server

[Comware7]ntp-service unicast-server 10.0.100.251 ?
authentication-keyid Specify an authentication key ID
priority             Specify the NTP peer as the first choice under the same
                     condition
source               Specify a source interface
version              Specify NTP version
vpn-instance         Specify a VPN instance
<cr>

[Comware7]ntp-service unicast-server 10.0.100.251

[Comware7]ntp-service enable ?
<cr>

[Comware7]ntp-service enable

[Comware7]display ntp-service ?
sessions   NTP connection

```

```

status      NTP status and configuration information
trace       Trace the time synchronization information

[Comware7]display ntp-service sessions
    source          reference      stra reach poll   now offset  delay disper
*****
*[12345]10.0.100.251    216.218.192.202    2    255    64    18 3.1524 2.6092 4.0741
Notes: 1 source(master), 2 source(peer), 3 selected, 4 candidate, 5 configured.
Total sessions: 1

[Comware7]display ntp-service status
Clock status: synchronized
Clock stratum: 3
System peer: 10.0.100.251
Local mode: client
Reference clock ID: 10.0.100.251
Leap indicator: 00
Clock jitter: 0.000153 s
Stability: 0.000 pps
Clock precision: 2^-17
Root delay: 94.17725 ms
Root dispersion: 11.99341 ms
Reference time: d8be1d3e.190e4251 Thu, Mar 26 2015 0:53:02.097

[Comware7]clock ?
    protocol      Specify a time protocol
    summer-time  Configure daylight saving time
    timezone     Configure time zone

[Comware7]clock timezone ?
    STRING<1-32>  Name of time zone

[Comware7]clock timezone US-Central ?
    add          Add time zone offset
    minus        Minus time zone offset

[Comware7]clock timezone US-Central minus ?
    TIME        Time zone offset (hh:mm:ss)

[Comware7]clock timezone US-Central minus 06:00:00 ?
    <cr>

[Comware7]clock timezone US-Central minus 06:00:00

[Comware7]clock summer-time ?
    STRING<1-32>  Name of the daylight saving time

[Comware7]clock summer-time US-Central ?
    TIME        Time to start (HH:MM:SS)

[Comware7]clock summer-time US-Central 02:00:00 ?
    STRING<1-32>  Date to start (MM/DD)
    January      Start from January
    February     Start from February
    March        Start from March
    April         Start from April
    May          Start from May
    June         Start from June
    July          Start from July
    August        Start from August
    September    Start from September
    October      Start from October

```

```

November      Start from November
December     Start from December

[Comware7]clock summer-time US-Central 02:00:00 03/08 ?
    TIME   Time to end (hh:mm:ss)

[Comware7]clock summer-time US-Central 02:00:00 03/08 02:00:00 ?
    STRING<1-32> Date to end (MM/DD)

[Comware7]clock summer-time US-Central 02:00:00 03/08 02:00:00 11/01 ?
    TIME   Time offset (hh:mm:ss)

[Comware7]clock summer-time US-Central 02:00:00 03/08 02:00:00 11/01 01:00:00 ?
    <cr>

[Comware7]clock summer-time US-Central 02:00:00 03/08 02:00:00 11/01 01:00:00

[Comware7]clock protocol ?
    none   Manually set the system time at the CLI
    ntp    Use the Network Time Protocol (NTP)
    ptp    Use the Precision Time Protocol (PTP)

[Comware7]clock protocol ntp ?
    <cr>

[Comware7]clock protocol ntp

[Comware7]display clock
01:08:21 US-Central Thu 03/26/2015
Time Zone : US-Central minus 06:00:00
Summer Time : US-Central 02:00:00 03/08 02:00:00 11/01 01:00:00

```

Cisco

```

Cisco(config)#ntp ?
  access-group          Control NTP access
  allow                Allow processing of packets
  authenticate         Authenticate time sources
  authentication-key   Authentication key for trusted time sources
  broadcastdelay       Estimated round-trip delay
  clock-period        Length of hardware clock tick
  logging              Enable NTP message logging
  master               Act as NTP master clock
  max-associations    Set maximum number of associations
  maxdistance          Maximum Distance for synchronization
  passive              NTP passive mode
  peer                 Configure NTP peer
  server               Configure NTP server
  source               Configure interface for source address
  trusted-key          Key numbers for trusted time sources

Cisco(config)#ntp server ?
  A.B.C.D      IP address of peer
  WORD         Hostname of peer
  X:X:X:X::X  IPv6 address of peer
  ip           Use IP for DNS resolution
  ipv6         Use IPv6 for DNS resolution

Cisco(config)#ntp server 10.0.100.251 ?
  burst        Send a burst when peer is reachable
  iburst       Send a burst when peer is unreachable
  key          Configure peer authentication key
  maxpoll     Maximum poll interval

```

```

minpoll Minimum poll interval
prefer Prefer this peer when possible
source Interface for source address
version Configure NTP version
<cr>

Cisco(config)#ntp server 10.0.100.251

Cisco#show ntp ?
  associations NTP associations
  status       NTP status

Cisco#show ntp associations

  address      ref clock      st  when   poll  reach  delay  offset  disp
*~10.0.100.251    216.218.192.20  2     25    64   177  2.322  2.130 64.390
 * sys.peer, # selected, + candidate, - outlyer, x falseticker, ~ configured

Cisco#show ntp status

Clock is synchronized, stratum 3, reference is 10.0.100.251
nominal freq is 119.2092 Hz, actual freq is 119.2092 Hz, precision is 2**17
reference time is D8A9E976.CDEA704C (22:06:46.804 UTC Tue Mar 10 2015)
clock offset is 2.1303 msec, root delay is 102.49 msec
root dispersion is 447.09 msec, peer dispersion is 64.39 msec
loopfilter state is 'CTRL' (Normal Controlled Loop), drift is 0.000000007 s/s
system poll interval is 64, last update was 178 sec ago.

Cisco(config)#clock ?
  initialize  Initialize system clock on restart
  save       backup of clock with NVRAM
  summer-time Configure summer (daylight savings) time
  timezone   Configure time zone

Cisco(config)#clock timezone ?
  WORD name of time zone
Cisco(config)#clock timezone US-Central ?
  <-23 - 23> Hours offset from UTC
Cisco(config)#clock timezone US-Central -6 ?
  <0-59> Minutes offset from UTC
  <cr>
Cisco(config)#clock timezone US-Central -6
%Time zone name is limited to 7 characters

Cisco(config)#clock timezone US-Cent -6
Cisco(config)#clock summer-time ?
  WORD name of time zone in summer

Cisco(config)#clock summer-time US-Cent ?
  date      Configure absolute summer time
  recurring Configure recurring summer time

Cisco(config)#clock summer-time US-Cent date ?
  <1-31> Date to start
  MONTH    Month to start

Cisco(config)#clock summer-time US-Cent date mar ?
  <1-31> Date to start

Cisco(config)#clock summer-time US-Cent date mar 8 ?
  <1993-2035> Year to start

```

```
Cisco(config)#clock summer-time US-Cent date mar 8 2015 ?
hh:mm  Time to start (hh:mm)

Cisco(config)#clock summer-time US-Cent date mar 8 2015 02:00 ?
<1-31>  Date to end
MONTH   Month to end

Cisco(config)#clock summer-time US-Cent date mar 8 2015 02:00 nov ?
<1-31>  Date to end

Cisco(config)#clock summer-time US-Cent date mar 8 2015 02:00 nov 1 ?
<1993-2035>  Year to end

Cisco(config)#clock summer-time US-Cent date mar 8 2015 02:00 nov 1 2015 ?
hh:mm  Time to end (hh:mm)
Cisco(config)#clock summer-time US-Cent date mar 8 2015 02:00 nov 1 2015 02:00 ?
<1-1440>  Offset to add in minutes
<cr>
Cisco(config)#clock summer-time US-Cent date mar 8 2015 02:00 nov 1 2015 02:00 60 ?
<cr>
Cisco(config)#clock summer-time US-Cent date mar 8 2015 02:00 nov 1 2015 02:00 60

Cisco#show clock
17:16:15.928 US-Cent Tue Mar 10 2015

Cisco#show clock detail

17:16:45.950 US-Cent Tue Mar 10 2015
Time source is NTP
Summer time starts 02:00:00 US-Cent Sun Mar 8 2015
Summer time ends 02:00:00 US-Cent Sun Nov 1 2015
```

Chapter 4 CLI Management Access – SSH

This chapter compares the commands to enable and configure Secure Shell (SSH) services for device management via unencrypted and encrypted network access.

Note: ssh on Cisco does not support ‘local’ (password only) on vty interfaces and must be configured for ‘login local’.

You can find configuration details for User ID’s and Password’s in Chapter 2.

SSH CLI Comparison

ArubaOS-CX-Switch	ArubaOS-Switch	Comware7	Cisco
Configuration commands			
hostname ArubaOS-CX-Switch		public-key local create rsa	hostname Cisco
ip dns domain-name HPE-Aruba		ssh server enable	ip domain-name test
ssh host-key ed25519	crypto key generate ssh	user-interface vty 0 63 authentication-mode scheme protocol inbound ssh	crypto key generate
ssh known-host remove all		local-user <name> password simple password service-type ssh authorization-attribute user-role network-admin	username <name> privilege 15 password <password>
ssh server vrf mgmt			
Show/display commands			
show ssh server all-vrfs	show ip ssh	display public-key local rsa public	show ip ssh show ssh <0-97>
show ssh authentication-method			
show ssh host-key	show crypto host-public-key		show crypto key mypubkey rsa

SSH Service configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch(config)# ssh host-key SSH server host-keys. known-host Client trusted servers list. password-authentication Password authentication method enabled by default.

```

public-key-authentication Publickey authentication method enabled by default.
server                      Configure SSH server.

ArubaOS-CX-Switch(config)# ssh known-host
remove Delete client trusted servers list.

ArubaOS-CX-Switch(config)# ssh known-host remove
A.B.C.D   Specify the host IPv4 address of the remote system.
WORD      Specify the hostname of the remote system.
X:X::X:X  Specify the host IPv6 address of the remote system.
all       Delete client all trusted servers list.

ArubaOS-CX-Switch(config)# ssh known-host remove all
<cr>

ArubaOS-CX-Switch(config)# ssh known-host remove all

ArubaOS-CX-Switch(config)# ssh server
vrf   Configure SSH server for VRF.

ArubaOS-CX-Switch(config)# ssh server vrf
VRF-NAME  Enter the VRF instance. 'default' or 'mgmt' or a configured VRF instance.

ArubaOS-CX-Switch(config)# ssh server vrf mgmt.

ArubaOS-CX-Switch(config)# do show ssh
authentication-method Show authentication method.
host-key              Show SSH server host-keys.
server                Show SSH server details.

ArubaOS-CX-Switch(config)# do show ssh host-key
ecdsa    Show SSH server ECDSA host-key.
ed25519  Show SSH server ED25519 host-key.
rsa      Show SSH server RSA host-key.
<cr>

ArubaOS-CX-Switch(config)# do show ssh host-key

Key Type : ECDSA      Curve : ecdsa-sha2-nistp256
ecdsa-sha2-nistp256
AAAAE2VjZHNhLXNoYTItbmlzdHAyNTYAAAAbmIzbHAyNTYAAABBBLwI/ekxuJQxGvPviDCWsK2fp1c
fqJwdkzKFspuVOML85LI6zFB1JtOfJLG3K6nAY0h4OSVFm2iuBrPlqa8+KFY=


Key Type : ED25519
ssh-ed25519 AAAAC3NzaC1lZDI1NTE5AAAAIAvOajmFM4bL/0mydg+a82EnpreKuh01Dj5Qj7fw/oZY


Key Type : RSA          Key Size : 2048
ssh-rsa
AAAAB3NzaC1yc2EAAAQABAAQCA4TfLYwYz4t8C8UV4mk71UbyzQs15mxhJnlpXdgv5T6fPkSr5pJtfFXZ1iSk8/4AbjJ
928KXmfBRVCOJLCYn98fqGF1A70WhRk6u15MewA4I63Doc1VxL/nGzkje5nT/26r96wLwI91/A3FLjVJio9cSs4aIGZh6EV7c
11WYXvvkGQAIMDUmKyLhzLsX09Sr61CZm1tRsES1KLjYk9bwdY7BgvzS0rv4Gj6s/FEZ03HOW6S+M5bAmb3IqV1nTKz+hn8nK
3DwyZBM42tJyr+txRMgU9G2LDt66+lp/1sPaprQkYf7NU9bIyAOkrOwDKES+Tqw5aOHgTX00od1FSTsWv

```

ArubaOS-Switch

```

ArubaOS-Switch(config)# crypto ?
key           Install/remove RSA key file for ssh.
pki          Public Key Infrastructure management

ArubaOS-Switch(config)# crypto key ?
generate     Generate a new key.

```

```

zeroize           Delete existing key.

ArubaOS-Switch(config)# crypto key generate ?
autorun-key      Install RSA key file for autorun
ssh               Install host key file for ssh server.

ArubaOS-Switch(config)# crypto key generate ssh ?
dsa               Install DSA host key.
rsa               Install RSA host key.
<cr>

ArubaOS-Switch(config)# crypto key generate ssh
Installing new key pair. If the key/entropy cache is
depleted, this could take up to a minute.

ArubaOS-Switch(config)# ip ssh ?
cipher            Specify a cipher to enable/disable.
filetransfer      Enable/disable secure file transfer capability.
listen            Specify in which mode daemon should listen in.
mac               Specify a mac to enable/disable.
port              Specify the TCP port on which the daemon should listen for SSH
                  connections.
public-key        Configure a client public-key.
timeout          Specify the maximum length of time (seconds) permitted for
                  protocol negotiation and authentication.
<cr>

ArubaOS-Switch(config)# ip ssh

ArubaOS-Switch(config)# no telnet-server

ArubaOS-Switch# show ip ssh

SSH Enabled      : Yes          Secure Copy Enabled : No
TCP Port Number  : 22          Timeout (sec)       : 120
Host Key Type   : RSA         Host Key Size     : 2048

Ciphers          : aes256-ctr,aes256-cbc,rijndael-cbc@lysator.liu.se,aes192-ctr,
                   aes192-cbc,aes128-ctr,aes128-cbc,3des-cbc
MACs             : hmac-sha1-96,hmac-md5,hmac-sha1,hmac-md5-96

Ses  Type        | Source IP                         Port
---  ---+-----+-----+
1    console      |
2    telnet       |
3    ssh          | 10.0.100.80                      59987
4    inactive     |
5    inactive     |
6    inactive     |
7    inactive     |

```

ArubaOS-Switch# show crypto host-public-key

SSH host public key:

```

ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAQEA2tfJ6jJIdewRSD8D5YV8/wqWPLaOleK5VDBDBZeqmAIJ
GL7JQmO+N+WgPVvbIm8V20QCqR1WHVsVNUAE6O6ErFybfk098Y089HuA7v6ej8lTF9r0U0BMQuNLp5C4
++92wCh/mWJmwTUBIqY2w2tfq4rtNxap123456789054/6o5wiHHC8fNjUf5pwil+nXYOk/migsk1DAG
CyH6OdUWWO2Rb2J/nouBoyz/VKLLuT4kO8LF728rxPBQfk7m/a3cKBKkSAM90+cuTDzT1u3hOnc3zKGh

```

```
Q38nMfTPvCCQZLTljhGGywHl0uGxzHbSFShRyIRyIrMpvQtX85GcLcZLhw==
```

-or-

```
ArubaOS-Switch# show ip host-public-key
```

SSH host public key:

```
ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAQEA2tfJ6jJIdewRSD8D5YV8/wqWPLa0leK5VDBDBZeEqmAII  
GL7JQmO+N+WgPVvbIm8V20QCqR1WHVs123456789054Fybdk098Y0HuA7v6ej81TF9r0U0BMQuNLp5C4  
++92wCh/mWJmwTUBIqY2w2tfq4rtNxapHN+NTQAiPQIC/6o5wiHHC8fNjUf5pwil+nxYOk/migsklDAG  
CyH6OdUWWO2Rb2J/nouBoyz/VKLLuT4k08LF728rxPBQfk7m/a3cKBKkSAM90+cuTDzT1u3h0nc3zKGh  
Q38nMfTPvCCQZLTljhGGywHl0uGxzHbSFShRyIRyIrMpvQtX85GcLcZLhw==
```

Comware7

```
[Comware7]public-key ?  
local Local key pairs  
peer Configure peer's public key  
  
[Comware7]public-key local ?  
create Create a local key pair  
destroy Destroy local key pairs  
export Print or export the public key  
  
[Comware7]public-key local create ?  
dsa DSA key pair  
ecdsa ECDSA key pair  
rsa RSA key pairs  
  
[Comware7]public-key local create rsa ?  
name Specify the name of the key pair  
<cr>  
  
[Comware7]public-key local create rsa  
The range of public key modulus is (512 ~ 2048).  
If the key modulus is greater than 512, it will take a few minutes.  
Press CTRL+C to abort.  
Input the modulus length [default = 1024]:  
Generating Keys...  
  
[Comware7]user-interface vty 0 63  
  
[Comware7-line-vty0-63]authentication-mode ?  
none Login without authentication  
password Password authentication  
scheme Authentication use AAA  
  
[Comware7-line-vty0-63]authentication-mode scheme ?  
<cr>  
  
[Comware7-line-vty0-63]authentication-mode scheme  
  
[Comware7-line-vty0-63]protocol ?  
inbound Incoming protocols  
  
[Comware7-line-vty0-63]protocol inbound ?  
all All protocols  
ssh SSH protocol  
telnet Telnet protocol  
  
[Comware7-line-vty0-63]protocol inbound ssh ?
```

```

<cr>

[Comware7-line-vty0-63]protocol inbound ssh

[Comware7]local-user <name>

[Comware7-luser-manage-ssh-manager]password simple password

[Comware7-luser-manage-ssh-manager]service-type ?
  ftp      FTP service
  http    HTTP service type
  https   HTTPS service type
  pad     X.25 PAD service
  ssh     Secure Shell service
  telnet  Telnet service
  terminal Terminal access service

[Comware7-luser-manage-ssh-manager]service-type ssh ?
  http    HTTP service type
  https   HTTPS service type
  pad     X.25 PAD service
  telnet  Telnet service
  terminal Terminal access service
<cr>

[Comware7-luser-manage-ssh-manager]service-type ssh

NOTE: by configuring 'protocol inbound ssh' on the vty interfaces, if telnet access was previously enabled, it is now functionally disabled, however still remove the 'telnet server enable' command, as done later in a few steps.

[Comware7-luser-manage-ssh-manager]authorization-attribute ?
  acl          Specify ACL of local user
  callback-number  Specify PPP callback number of local user
  idle-cut     Specify idle cut function for local user
  user-profile  Specify user profile of local user
  user-role     Specify user role of the local user
  vlan         Specify VLAN ID of local user
  work-directory  Specify work directory of local user

[Comware7-luser-manage-ssh-manager]authorization-attribute user-role ?
  STRING<1-63>      User role name
  network-admin
  network-operator
  level-0
  level-1
  level-2
  level-3
  level-4
  level-5
  level-6
  level-7
  level-8
  level-9
  level-10
  level-11
  level-12
  level-13
  level-14
  level-15
  security-audit

```

```
[Comware7-luser-manage-ssh-manager]authorization-attribute user-role network-admin ?
acl Specify ACL of local user
callback-number Specify PPP callback number of local user
idle-cut Specify idle cut function for local user
user-profile Specify user profile of local user
vlan Specify VLAN ID of local user
work-directory Specify work directory of local user
<cr>

[Comware7-luser-manage-ssh-manager]authorization-attribute user-role network-admin

[Comware7]undo telnet server enable

[Comware7]ssh ?
  client SSH client configuration
  server Specify the server attribute
  user SSH user

[Comware7]ssh server ?
  acl Specify an ACL used to control the SSH clients' access
  authentication-retries Specify authentication retry times
  authentication-timeout Specify authentication timeout
  compatible-ssh1x Enable compatible ssh1x
  dscp Set the Differentiated Services Codepoint (DSCP) value
  enable Enable Stelnet Server
  ipv6 IPv6 information
  rekey-interval Specify the SSH server key rekey-interval

[Comware7]ssh server enable ?
<cr>

[Comware7]ssh server enable

[Comware7]display ssh server ?
  session Server session
  status Server state

[Comware7]display ssh server status
  Stelnet server: Enable
  SSH version : 1.99
  SSH authentication-timeout : 60 second(s)
  SSH server key generating interval : 0 hour(s)
  SSH authentication retries : 3 time(s)
  SFTP server: Disable
  SFTP Server Idle-Timeout: 10 minute(s)
  NETCONF server: Disable
  SCP server: Disable

[Comware7]display ssh server session
  UserPid SessID Ver Encrypt State Retries Serv Username
  583      0       2.0   aes256-cbc Established 0       Stelnet ssh-manager

[Comware7]display public-key local rsa public
=====
Key name: hostkey(default)
Key type: RSA
Time when key pair created: 17:51:54 2015/03/26
Key code:
```

```
30819F300D06092A864886F70D010101050003818D0030818902818100BF00CF5B0FC7B9DA
6AB174B8F791617F737BD82DE62BA6E08F93067AEAC21AC025307DAF5C2C2934B95AD686C6
9D6281E76387E938743A29033123456789054FEFC0BE17FDCBA9E470BE1DCB1FF6D8E5B10E
A3BC17337C52A34297C849B3EF15D08FE49A239A3574516F5EF2C97234B588071A0E89CC7F
786818BBD277CA84FF0203010001
```

```
=====
Key name: serverkey(default)
Key type: RSA
Time when key pair created: 17:51:54 2015/03/26
Key code:
```

```
307C300D06092A864886F70D0101010500036B003068026100C9A1E046BBEF0B7CAE47A07C
DF278BA5B7C0BADC12462EEB1234567890541FFD2935C27F8220AA7AE0DBB1600091E104CA
F8577E0EAE794EC8B8E094CEBA16277583A06EF175EC91FE6E0045EFC806B551402940EC9
4074F97B9588FF45FDFF0203010001
```

Cisco

Note: must configure the hostname and default domain before the 'crypto key generate' process.

```
Cisco(config)#hostname Cisco
Cisco(config)#ip domain-name test

Cisco(config)#crypto ?
ca      Certification authority
key    Long term key operations
pki    Public Key components
```

```
Cisco(config)#crypto key ?
decrypt      Decrypt a keypair.
encrypt      Encrypt a keypair.
export       Export keys
generate     Generate new keys
import       Import keys
move        Move keys
pubkey-chain Peer public key chain management
storage      default storage location for keypairs
zeroize      Remove keys
```

```
Cisco(config)#crypto key generate ?
rsa  Generate RSA keys
<cr>

Cisco(config)#crypto key generate
The name for the keys will be: Cisco.test
Choose the size of the key modulus in the range of 360 to 2048 for your
General Purpose Keys. Choosing a key modulus greater than 512 may take
a few minutes.
```

```
How many bits in the modulus [512]:
% Generating 512 bit RSA keys, keys will be non-exportable...[OK]
```

```
Cisco(config)#ip ssh ?
authentication-retries  Specify number of authentication retries
```

break-string	break-string
dh	Diffie-Hellman
dscp	IP DSCP value for SSH traffic
logging	Configure logging for SSH
maxstartups	Maximum concurrent sessions allowed
port	Starting (or only) Port number to listen on
precedence	IP Precedence value for SSH traffic
pubkey-chain	pubkey-chain
rsa	Configure RSA keypair name for SSH
source-interface	Specify interface for source address in SSH connections
stricthostkeycheck	Enable SSH Server Authentication
time-out	Specify SSH time-out interval
version	Specify protocol version to be supported

```

Cisco(config)#ip ssh version ?

<1-2> Protocol version

Cisco(config)#ip ssh version 2

Cisco(config)#line vty 0 15

Cisco(config-line)#login ?

local Local password checking
<cr>

Cisco(config-line)#login local ?
<cr>

Cisco(config-line)#login local

Cisco(config-line)#transport ?

input Define which protocols to use when connecting to the terminal
server
output Define which protocols to use for outgoing connections
preferred Specify the preferred protocol to use

Cisco(config-line)#transport input ?

all All protocols
none No protocols
ssh TCP/IP SSH protocol
telnet TCP/IP Telnet protocol

Cisco(config-line)#transport input ssh ?

telnet TCP/IP Telnet protocol
<cr>

Cisco(config-line)#transport input ssh

Cisco(config)#username <name> privilege 15 password <password>

Cisco#show ip ssh

SSH Enabled - version 2.0
Authentication timeout: 120 secs; Authentication retries: 3

```

```

Minimum expected Diffie Hellman key size : 1024 bits
IOS Keys in SECSH format(ssh-rsa, base64 encoded):
ssh-rsa AAAAB3NzaC1yc2EAAAQABAAAAgQDEbwH5h57hZcqQbC07QmgIUC7icCexxBtx52vejCnp
ZAsaZzXMXahBSiGYs+GTZePb12345678905Zrk1BwpoZICO05S8Fk7Gu0e9ilfRdETAstz01YmboassJ
5rUp3sIasRHGMp3CZHQt520Dv22bDHoCBGEQ8+JF5IJ0kgYkhw==

Cisco#show ssh

Connection Version Mode Encryption Hmac State Username
0 2.0 IN aes256-cbc hmac-shal Session started manager
0 2.0 OUT aes256-cbc hmac-shal Session started manager
%No SSHv1 server connections running.

Cisco#show crypto key mypubkey rsa

% Key pair was generated at: 18:03:26 US-Cent Feb 28 1993
Key name: TP-self-signed-2443920256
Storage Device: private-config
Usage: General Purpose Key
Key is not exportable.

Key Data:
30819F30 0D06092A 864886F7 0D010101 05000381 8D003081 89028181 00C46F01
F9879EE1 65CA906C 2D3B4268 08502EE2 7027B1C4 1B71E76B DE8C29E9 640B1A67
35CC5DA8 414A2198 B3E19365 E312384E 9A386D0D D80699AE 4D41C29A 1920238E
E52F0593 B1AED1EF 6295F45D 11302CB7 3D356266 E86A4569 E6B529DE C21AB111
C6329DC2 64742DE7 6D03BF6D 9B0C7A02 046110F3 E245E482 74920624 87020301 0001

% Key pair was generated at: 01:34:01 US-Cent Mar 27 2015

Key name: TP-self-signed-2443920256.server
Temporary key
Usage: Encryption Key
Key is not exportable.

Key Data:
307C300D 06092A86 4886F70D 01010105 00036B00 30680261 00B51791 797FFD80
F0484B82 1F944989 BF12382B 035B1DC4 92B6C4D9 F9FF1AE8 B8D6CDFF B6AF6BDF
A9764C7B CB1B9E58 C711892E 1C2B11F5 D1A38AA2 1C456427 2D3F2A49 5757F8D4
8F9D0DA4 FB0D0AD43 CC513CA3 91F790F1 0B57EBC6 2164D46E 85020301 0001

% Key pair was generated at: 02:28:42 US-Cent Mar 27 2015

Key name: Cisco.test
Storage Device: not specified
Usage: General Purpose Key
Key is not exportable.

Key Data:
305C300D 06092A86 4886F70D 01010105 00034B00 30480241 00AB1487 78C90D6E
3332E08F AD4B26DB 541233F8 1D56986A 5F89DB27 074456AD 07022442 F6DB3765
4CF3E3FE 7C55A9A7 F958A17C 2CDFCD8B 1E7F86C6 B41894EB 6B020301 0001

```

Chapter 5 GUI Management Access – HTTPS

This chapter compares the commands used to enable and configure browser-based applications to manage the switch via unencrypted and encrypted network access methods.

Enable standard TCP port 80 access for unencrypted management access to the switch.

For encrypted management access to the switch use TCP port 443, and must configure Secure Sockets Layer (SSL).

You can find configuration details for User ID's and Password's in Chapter 2.

HTTPS CLI Comparison

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
HTTP access is disabled by default and is available as soon as it is enabled manually using CLI To control HTTPS access with UID/PW or PW (only), see Ch2 for configuring UID/PW or PW only.	HTTP access is enabled by default and is available as soon as an IP addr is assigned to a VLAN, without UID/PW access control. To control HTTPS access with UID/PW or PW (only), see Ch2 for configuring UID/PW or PW only.	For Comware7, HTTP is not enabled by default, requires: configure local uid/pw with 'service-type web' and enable http support	HTTP server is enabled by default, but must configure http authentication type. Must have all the device web files for full functionality.
Configuration commands			
user admin password			username <name> privilege 15 password <password>
https-server vrf <mgmt/default>	web-management plaintext		ip http server
https-server rest access-mode read-only			ip http authentication local
https-server rest access-mode read-write			
Show/display commands			
show https-server			show ip http server connection

HTTPS Service configurable options

ArubaOS-CX-Switch

```
ArubaOS-CX-Switch(config)# https-server
  rest  REST API configuration
  vrf   Configure HTTPS Server for VRF

ArubaOS-CX-Switch(config)# https-server rest
  access-mode REST API access-mode configuration

ArubaOS-CX-Switch(config)# https-server rest access-mode
  read-only  Allow reads only (default)
  read-write Allow reads and writes

ArubaOS-CX-Switch(config)# https-server rest access-mode read-only
<cr>

ArubaOS-CX-Switch(config)# https-server rest access-mode read-only

ArubaOS-CX-Switch(config)# https-server rest access-mode read-write
ArubaOS-CX-Switch(config)# do sh https-server
<cr>

ArubaOS-CX-Switch(config)# do sh https-server

HTTPS Server Configuration
-----
VRF          : <none>
REST Access Mode : read-write
```

ArubaOS-Switch

HTTP access is enabled by default and is available as soon as an IP addr is assigned to a VLAN, without UID/PW access control. If passwords are assigned to the operator and/or manager users, then those will be used during HTTP access.

```
ArubaOS-Switch(config)# web-management
  idle-timeout      Set the idle timeout for web management sessions.
  listen            Specify in which mode HTTP Server should listen in
  management-url   Specify URL for web interface [?] button.
  plaintext        Enable/disable the http server (insecure).
  ssl               Enable/disable the https server (secure).
  support-url     Specify URL for web interface Support page.
<cr>
```

```
ArubaOS-Switch(config)# web-management plaintext
<cr>
```

```
ArubaOS-Switch(config)# web-management plaintext
```

Note, even though the above command can be entered to enable HTTP access, it is the default state and will not appear in the configuration.

Comware7

HTTP is not enabled by default.

```
[Comware7]local-user manager
```

```
[Comware7-luser-manage-manager]password simple password
```

```
[Comware7-luser-manage-manager]authorization-attribute user-role network-admin

[Comware7-luser-manage-manager]service-type http

[Comware7]ip ?
  as-path           Specify an AS path
  community-list   Specify a community list entry
  extcommunity-list Specify an extended community-list entry
  fast-forwarding  IP fast-forwarding information
  host             Add a static host name-to-IPv4 address mapping
  http             Hypertext Transfer Protocol (HTTP) module
  https            Hypertext Transfer Protocol Secure (HTTPS) module
  icmp             Specify ICMP configuration information
  load-sharing     IP forwarding load-sharing
  local            Apply a policy to locally generated packets
  prefix-list      Specify an IPv4 prefix list
  redirects        Send ICMP Redirect packets
  route-static     Establish a static route
  rpf-route-static Specify static multicast route
  source           Source binding function
  ttl-expires      Send ICMP Time Exceeded packets
  unreachables    Send ICMP Destination Unreachable packets
  urpf             Unicast reverse path forward function
  vpn-instance     Specify a VPN instance

[Comware7]ip http ?
  acl      Specify a basic IPv4 ACL to filter hosts that use HTTP service
  enable   Enable HTTP server
  port     Specify an HTTP server port number

[Comware7]ip http enable ?
<cr>

[Comware7]display web ?
  menu   Web menu information
  users  Web users

[Comware7]display web users ?
  >     Redirect it to a file
  >>   Redirect it to a file in append mode
  |     Matching output
<cr>

[Comware7]display web users
UserID          Name          Type  Language JobCount LoginTime LastOperation
900b01302b0010f manager       HTTP  English    0      15:39:39  15:49:02
```

Cisco

HTTP server is enabled by default, but must configure http authentication type.

Note: must have all the device web files (these are in addition to IOS) on the switch for full functionality.

```

Cisco(config)#username manager privilege 15 password password

Cisco(config)#ip http ?
access-class                                     Restrict http server access by access-class
active-session-modules                         Set up active http server session modules
authentication                                    Set http server authentication method
client                                         Set http client parameters
help-path                                       HTML help root URL
max-connections                                 Set maximum number of concurrent http server
                                                connections
path                                            Set base path for HTML
port                                           Set http server port
secure-active-session-modules                  Set up active http secure server session
                                                modules
secure-ciphersuite                            Set http secure server ciphersuite
secure-client-auth                           Set http secure server with client
                                                authentication
secure-port                                    Set http secure server port number for
                                                listening
secure-server                                  Enable HTTP secure server
secure-trustpoint                            Set http secure server certificate trustpoint
server                                         Enable http server
session-module-list                           Set up a http(s) server session module list
timeout-policy                                Set http server time-out policy parameters

Cisco(config)#ip http authentication ?
aaa      Use AAA access control methods
enable   Use enable passwords
local    Use local username and passwords

Cisco(config)#ip http authentication local ?
<cr>

Cisco(config)#ip http authentication local

Cisco(config)#ip http server ?
<cr>

Cisco(config)#ip http server

Cisco#show ip http server connection

HTTP server current connections:
local-ipaddress:port  remote-ipaddress:port  in-bytes  out-bytes
  10.0.111.41:80        10.1.1.108:55648   1612      70843

```

Chapter 6 Discovery Protocols – LLDP

Link Layer Discovery Protocol (LLDP) and Cisco Discovery Protocol (CDP) , both are link layer protocols which helps to discover directly connected LLDP and CDP-capable neighbors

- Link Layer Discovery Protocol (LLDP), an industry standard protocol for device discovery
- Cisco Discovery Protocol (CDP), a Cisco-specific protocol for device discovery.

This chapter covers the commands required to configure LLDP.

ArubaOS-Switch provide limited support for CDP.

In a heterogeneous network, a standard configuration exchange platform ensures that different types of network devices from different vendors can discover one another and exchange configuration for the sake of interoperability and management.

LLDP CLI Comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
(Enabled by default, both globally and per port)	(Enabled by default, both globally and per port)	(Generally enabled by default, both globally and per port. See notes for additional information)	(Not enabled by default)
Configuration commands			
lldp lldp reinit 10	lldp run	lldp global enable	lldp run
lldp < holdtime-multiplier management-ipv4-address management-ipv6-address reinit select-tlv timer txdelay >	lldp admin-status oobm [txonly rxonly tx_rx disable]	[Comware7]lldp global enable [Comware7]interface g1/0/1 [Comware7-GigabitEthernet1/0/1]lldp enable	lldp < holdtime reinit run timer tlv-select > lldp tlv-select < 4-wire-power-management mac-phy-cfg management-address port-description port-vlan power-management system-capabilities system-description system-name >
User Exec / Privileged Exec Commands			
show lldp neighbor-info show lldp neighbor-info 1/1/1	show lldp info remote-device show lldp info remote-device 1	[Comware7]display lldp neighbor-information list show lldp neighbor-information interface GE1/0/1 [Comware7]display lldp neighbor-information interface g1/0/1 verbose	show lldp neighbors show lldp neighbors g1/0/1 detail

show lldp statistics	show lldp stats	show lldp statistics	show lldp traffic show lldp errors
show lldp tlv		Show lldp tlv-config	
show lldp configuration	show lldp config	Show lldp status	
show lldp local-device	show lldp info local-device oobm show lldp stats oobm		show lldp entry *

LLDP configurable options

ArubaOS-CX-Switch

```

ArubaOS-CX-Switch(config)# lldp
  holdtime-multiplier      The multiplier to apply for the total hold period for a neighbor.
  management-ipv4-address   LLDP management IPv4 address to be sent in TLV
  management-ipv6-address   LLDP management IPv6 address to be sent in TLV
  reinit                   Time delay to initialize LLDP on an interface in seconds.
  select-tlv                Specifies the TLVs to send and receive in LLDP packets.
  timer                     Time interval for transmitting LLDP status updates in seconds.
  txdelay                  Time delay to send a LLDP advertisement upon an update in
seconds.
<cr>

ArubaOS-CX-Switch(config)# lldp reinit
<1-10> Set the Reinitialization timer. Default is 2 seconds.

ArubaOS-CX-Switch(config)# lldp reinit 10
<cr>

ArubaOS-CX-Switch(config)# lldp reinit 10

ArubaOS-CX-Switch(config)# lldp timer
<5-32768> Set lldp timer. Default is 30 seconds.

ArubaOS-CX-Switch(config)# lldp timer 222
<cr>

ArubaOS-CX-Switch(config)# lldp timer 222

ArubaOS-CX-Switch(config)# lldp holdtime-multiplier
<2-10> Set the Hold-Time multiplier. Default is 4.

ArubaOS-CX-Switch(config)# lldp holdtime-multiplier 4
<cr>

ArubaOS-CX-Switch(config)# lldp holdtime-multiplier 4

ArubaOS-CX-Switch(config)# lldp
  holdtime-multiplier      The multiplier to apply for the total hold period for a neighbor.
  management-ipv4-address   LLDP management IPv4 address to be sent in TLV
  management-ipv6-address   LLDP management IPv6 address to be sent in TLV
  reinit                   Time delay to initialize LLDP on an interface in seconds.
  select-tlv                Specifies the TLVs to send and receive in LLDP packets.
  timer                     Time interval for transmitting LLDP status updates in seconds.

```

```

txdelay           Time delay to send a LLDP advertisement upon an update in
seconds.
<cr>

ArubaOS-CX-Switch(config)# lldp management-ipv
management-ipv4-address  LLDP management IPv4 address to be sent in TLV
management-ipv6-address  LLDP management IPv6 address to be sent in TLV

ArubaOS-CX-Switch(config)# lldp management-ipv4-address
A.B.C.D  LLDP management IPv4 address

ArubaOS-CX-Switch(config)# lldp management-ipv4-address 10.0.0.1
<cr>
ArubaOS-CX-Switch(config)# lldp management-ipv4-address 10.0.0.1

ArubaOS-CX-Switch(config)# lldp txdelay
<1-8192>  Set the TxDelay timer. Default is 2 seconds.

ArubaOS-CX-Switch(config)# lldp txdelay 33
<cr>

ArubaOS-CX-Switch(config)# lldp txdelay 33

ArubaOS-CX-Switch(config)# do show lldp
configuration  Show LLDP configuration
local-device   Show LLDP local device information
neighbor-info  Show global LLDP neighbor information
statistics     Show LLDP statistics
tlv            Show TLVs advertised by LLDP

ArubaOS-CX-Switch(config)# do show lldp local-device
<cr>

ArubaOS-CX-Switch(config)# do show lldp local-device

Global Data
=====
Chassis-ID      : f4:03:43:7f:ad:00
System Name     : switch
System Description : Aruba JL375A XL.10.00.0002
Management Address : 10.0.0.1
Capabilities Available : Bridge, Router
Capabilities Enabled   : Bridge, Router
TTL             : 888

ArubaOS-CX-Switch(config)# do show lldp neighbor-info

LLDP Neighbor Information
=====

Total Neighbor Entries      : 0
Total Neighbor Entries Deleted : 0
Total Neighbor Entries Dropped : 0
Total Neighbor Entries Aged-Out : 0

LOCAL-PORT  CHASSIS-ID          PORT-ID        PORT-DESC        TTL        SYS-NAME
-----
ArubaOS-CX-Switch(config)# do show lldp local-device

Global Data
=====
```

```

Chassis-ID          : f4:03:43:7f:ad:00
System Name        : switch
System Description : Aruba JL375A XL.10.00.0002
Management Address : 10.0.0.1
Capabilities Available : Bridge, Router
Capabilities Enabled   : Bridge, Router
TTL                 : 888

```

```
ArubaOS-CX-Switch(config)# do show lldp statistics
```

LLDP Global Statistics

```
=====
```

```

Total Packets Transmitted      : 0
Total Packets Received         : 0
Total Packets Received And Discarded : 0
Total TLVs Unrecognized       : 0

```

LLDP Port Statistics

```
=====
```

POR-TID	TX-PACKETS	RX-PACKETS	RX-DISCARDED	TLVS-UNKNOWN
1/1/1	0	0	0	0
1/1/2	0	0	0	0
1/1/3	0	0	0	0
1/1/4	0	0	0	0
1/1/5	0	0	0	0
1/1/6	0	0	0	0
1/1/7	0	0	0	0
1/1/8	0	0	0	0
1/1/9	0	0	0	0
1/1/10	0	0	0	0
1/1/11	0	0	0	0
1/1/12	0	0	0	0
1/1/13	0	0	0	0
1/1/14	0	0	0	0
1/1/15	0	0	0	0
1/1/16	0	0	0	0
1/1/17	0	0	0	0
1/1/18	0	0	0	0
1/1/19	0	0	0	0
1/1/20	0	0	0	0
1/1/21	0	0	0	0
1/1/22	0	0	0	0
1/1/23	0	0	0	0
1/1/24	0	0	0	0
1/1/25	0	0	0	0
1/1/26	0	0	0	0
1/1/27	0	0	0	0
1/1/28	0	0	0	0
1/1/29	0	0	0	0
1/1/30	0	0	0	0
1/1/31	0	0	0	0
1/1/32	0	0	0	0

```
ArubaOS-CX-Switch(config)# do show lldp tlv
```

TLVs Advertised

```
=====
```

```
Management Address
```

```

Port Description
Port VLAN-ID
System Capabilities
System Description
System Name
ArubaOS-CX-Switch(config)# do show lldp configuration

LLDP Global Configuration
=====
LLDP Enabled : Yes
LLDP Transmit Interval : 222
LLDP Hold Time Multiplier : 4
LLDP Transmit Delay Interval : 33
LLDP Reinit Time Interval : 10

TLVs Advertised
=====

Management Address
Port Description
Port VLAN-ID
System Capabilities
System Description
System Name

LLDP Port Configuration
=====
PORT TX-ENABLED RX-ENABLED
-----
1/1/1 Yes Yes
1/1/2 Yes Yes
1/1/3 Yes Yes
1/1/4 Yes Yes
1/1/5 Yes Yes
1/1/6 Yes Yes
1/1/7 Yes Yes
1/1/8 Yes Yes
1/1/9 Yes Yes
1/1/10 Yes Yes
1/1/11 Yes Yes
1/1/12 Yes Yes
1/1/13 Yes Yes
1/1/14 Yes Yes
1/1/15 Yes Yes
1/1/16 Yes Yes
1/1/17 Yes Yes
1/1/18 Yes Yes
1/1/19 Yes Yes
1/1/20 Yes Yes
1/1/21 Yes Yes
1/1/22 Yes Yes
1/1/23 Yes Yes
1/1/24 Yes Yes
1/1/25 Yes Yes
1/1/26 Yes Yes
1/1/27 Yes Yes
1/1/28 Yes Yes
1/1/29 Yes Yes
1/1/30 Yes Yes
1/1/31 Yes Yes
1/1/32 Yes Yes

```

ArubaOS-Switch

(Enabled by default, both globally and per port)

(if needed)

```
ArubaOS-Switch(config)# lldp
admin-status           Set the port operational mode.
auto-ArubaOS-Switch   Configure various parameters related to lldp automatic
ArubaOS-Switching.
config                 Set the TLV parameters to advertise on port.
enable-notification    Enable or disable notification on port.
fast-start-count       Set the MED fast-start count in seconds.
holdtime-multiplier   Set the holdtime multiplier.
refresh-interval      Set refresh interval/transmit interval in seconds.
run                   Start or stop LLDP on the device.
top-change-notify     Enable or disable LLDP MED topology change notification.
```

```
ArubaOS-Switch(config)# lldp run ?
<cr>
```

```
ArubaOS-Switch(config)# lldp run
```

```
ArubaOS-Switch# show lldp ?
auto-ArubaOS-Switch   Show LLDP auto-ArubaOS-Switch related info for radio-ports.
config                Show LLDP configuration information.
info                  Show LLDP information about the local or remote device.
stats                Show LLDP statistics.
```

```
ArubaOS-Switch# show lldp info ?
local-device          Show LLDP local device information.
remote-device         Show LLDP remote device information.
```

```
ArubaOS-Switch# show lldp info remote-device ?
[ethernet] PORT-LIST Show local or remote device information for the specified ports.
<cr>
```

```
ArubaOS-Switch# show lldp info remote-device
```

LLDP Remote Devices Information

LocalPort	ChassisId	PortId	PortDescr	SysName
1	c0 91 34 83 8d 80	3	3	2520G-1

```
ArubaOS-Switch# show lldp info remote-device 1
```

LLDP Remote Device Information Detail

Local Port	:	1
ChassisType	:	mac-address
ChassisId	:	c0 91 34 83 8d 80
PortType	:	local
PortId	:	3
SysName	:	2520G-1
System Descr	:	ProCurve J9299A Switch 2520G-24-PoE, revision J.14.54, RO...
PortDescr	:	3
Pvid	:	

System Capabilities Supported : bridge

```

System Capabilities Enabled      : bridge

Remote Management Address
  Type    : ipv4
  Address : 10.0.111.2

```

Comware7

By default:

- If the switch starts up with empty configuration, LLDP is disabled globally (initial setting).
- If the switch starts up with the default configuration file (also included via the .ipe file), LLDP is enabled globally (factory default).

(Based on above information, generally enabled by default, both globally and per port)

(if needed)

```

[Comware7]lldp ?
  compliance      Enable compliance with another link layer discovery protocol
  fast-count     The fast-start times of transmitting frames
  global          Specify global
  hold-multiplier Hold multiplicator for TTL
  max-credit      Specify LLDP maximum transmit credit
  mode            Specify LLDP bridge mode
  timer           Timer of LLDP

[Comware7]lldp global ?
  enable   Enable capability

[Comware7]lldp global enable ?
  <cr>

[Comware7]lldp global enable

[Comware7]interface g1/0/1

[Comware7-GigabitEthernet1/0/1]lldp enable

[Comware7]display lldp ?
  local-information  Display local information
  neighbor-information  Display neighbor information
  statistics        Display statistics information
  status            Display LLDP status and configuration
  tlv-config       Display TLV configuration

[Comware7]display lldp neighbor-information ?
  >                Redirect it to a file
  >>              Redirect it to a file in append mode
  agent            Specify LLDP agent
  interface        Specify interface
  list             Neighbor list
  verbose          Verbose message
  |                Matching output
  <cr>

[Comware7]display lldp neighbor-information list
Chassis ID : * -- -- Nearest nontpmr bridge neighbor
               # -- -- Nearest customer bridge neighbor
               Default -- -- Nearest bridge neighbor
System Name      Local Interface Chassis ID      Port ID

```

2520G-1

GE1/0/1

c091-3483-8d80 13

```
[Comware7]display lldp neighbor-information interface g1/0/1 ?
>      Redirect it to a file
>>     Redirect it to a file in append mode
agent   Specify LLDP agent
verbose  Verbose message
|       Matching output
<cr>

[Comware7]display lldp neighbor-information interface g1/0/1
LLDP neighbor-information of port 1[GigabitEthernet1/0/1]:
LLDP agent nearest-bridge:
LLDP neighbor index : 1
ChassisID/subtype   : c091-3483-8d80/MAC address
PortID/subtype       : 13/Locally assigned
Capabilities         : Bridge

[Comware7]display lldp neighbor-information interface g1/0/1 verbose
LLDP neighbor-information of port 1[GigabitEthernet1/0/1]:
LLDP agent nearest-bridge:
LLDP neighbor index : 1
Update time          : 0 days, 0 hours, 1 minutes, 57 seconds
Chassis type         : MAC address
Chassis ID           : c091-3483-8d80
Port ID type         : Locally assigned
Port ID              : 13
Time to live         : 120
Port description     : 13
System name          : 2520G-1
System description    : ProCurve J9299A Switch 2520G-24-PoE, revision J.14.54, RO
                         M J.14.05 (/sw/code/build/walle(J_t4b))
System capabilities supported : Bridge
System capabilities enabled   : Bridge
Management address type   : IPv4
Management address        : 10.0.111.2
Management address interface type : IfIndex
Management address interface ID  : Unknown
Management address OID     : 0
Auto-negotiation supported : Yes
Auto-negotiation enabled   : Yes
OperMau                : Speed(1000) /Duplex(Full)
```

Cisco

(Not enabled by default)

```
Cisco(config)#lldp run
```

```
Cisco#show lldp ?
```

```
entry      Information for specific neighbor entry
errors     LLDP computational errors and overflows
interface  LLDP interface status and configuration
neighbors  LLDP neighbor entries
traffic    LLDP statistics
|          Output modifiers
<cr>
```

```
Cisco#show lldp neighbors ?
```

```

FastEthernet      FastEthernet IEEE 802.3
GigabitEthernet   GigabitEthernet IEEE 802.3z
TenGigabitEthernet Ten Gigabit Ethernet
detail           Show detailed information
|                Output modifiers
<cr>

Cisco#show lldp neighbors

Capability codes:
  (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
  (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

Device ID        Local Intf     Hold-time  Capability      Port ID
2520G-1          Gi1/0/1       120         B              15

Total entries displayed: 1

Cisco#show lldp neighbors g1/0/1 ?

detail  Show detailed information
|       Output modifiers
<cr>

Cisco#show lldp neighbors g1/0/1

Capability codes:
  (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
  (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

Device ID        Local Intf     Hold-time  Capability      Port ID
2520G-1          Gi1/0/1       120         B              15

Total entries displayed: 1

Cisco#show lldp neighbors g1/0/1 detail
-----
Chassis id: c091.3483.8d80
Port id: 15
Port Description: 15
System Name: 2520G-1

System Description:
ProCurve J9299A Switch 2520G-24-PoE, revision J.14.54, ROM J.14.05
(/sw/code/build/walle(J_t4b))

Time remaining: 99 seconds
System Capabilities: B
Enabled Capabilities: B
Management Addresses:
  IP: 10.0.111.2
Auto Negotiation - supported, enabled
Physical media capabilities:
  1000baseT(FD)
  100base-TX(FD)
  100base-TX(HD)

```

10base-T (FD)
10base-T (HD)

Media Attachment Unit type: 30
Vlan ID: - not advertised

Total entries displayed: 1

Chapter 7 Out-of-Band Management

One of the first key questions about securing a network switch is "Is my management traffic in-band or out-of-band?" The differences can be described as follows:

- In-band – switch management traffic travels with the network data traffic on the data plane and can be impacted when communication problems arise on the data plane
- Out-of-band – switch management traffic travels on a different plane than the network data traffic and is not impacted when communication problems arise on the data plane.

In documentation, it is common to describe "out-of-band" connections as being associated with the Management Plane and "in-band" connections as being associated with the Data Plane.

Management Plane

Serial Console: For the out-of-band, switches supports a serial console allowing a computer or console server to connect. This connection is speed limited and limited to the Command Line Interface. In addition, the serial interface doesn't support other types of management traffic – like RADIUS, SNMP, or Syslog – where the switch is acting like a client.

Out-of-band Management (OOBM) and Management ports generally refer to an Ethernet port that is dedicated to management. A variety of protocols can be supported over the management port based on available features by product/operating system.

Data Plane

A management Virtual Local Area Network (VLAN) is a VLAN with severe network configuration restrictions focused only on switch management.

A loopback interface can be protected using Access Control Lists, and when combined with other security settings, can offer a high degree of security confidence when a management VLAN is too restrictive.

A Data Plane configuration for switch management may be necessary if you need to manage the switch via a Fiber connection since OOBM ports are RJ-45 or if there is no OOBM ports on the switch. In addition, using the Loopback interface method, you can have and control access from multiple VLANs in the network. Of course the downside is that such connections are in the Data Plane and subject to interruption by Data Plane troubles.

Out-Of-Band CLI Comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
Configuration commands			

interface mgmt. ip static 10.0.0.1/24	Oobm ip address 10.199.111.21/24	interface M-GigabitEthernet 0/0/0 ip address 10.199.111.51 255.255.255.0	interface fastEthernet 0 ip address 10.199.111.41 255.255.255.0
ssh server vrf mgmt	ip ssh listen oobm	telnet client source interface <>	ip ssh source-interface <>
https-server vrf mgmt	web-management listen oobm	ssh client source interface <>	
		ntp source <>	
Show/display commands			
ping <target-ip> vrf mgmt	ping <target-ip> source oobm	Ping -i <source-ip> <target-ip>	Ping -a <source-ip> <target-ip>
copy tftp://10.120.0.9/halon/<file>.swi primary vrf mgmt	copy tftp flash 10.199.111.200 KA_16_01_0006.swi primary oobm		copy tftp://10.199.111.200 /c3750e-universalk9-mz.150-2.SE7.bin flash:/boot/c3750e-universalk9-mz.150-2.SE7.bin

Out-Of-Band configurable options

ArubaOS-CX-Switch

```
ArubaOS-CX-Switch(config)# interface mgmt
<cr>

ArubaOS-CX-Switch(config)# interface mgmt.

ArubaOS-CX-Switch(config-if-mgmt)# ip
  dhcp      Set the mode as dhcp
  static    Set the mode as static

ArubaOS-CX-Switch(config-if-mgmt)# ip static
  A.B.C.D/M   Enter the IPv4 address
  X:X::X:X/M   Enter the IPv6 address

ArubaOS-CX-Switch(config-if-mgmt)# ip static 10.0.0.1/24
<cr>

ArubaOS-CX-Switch(config-if-mgmt)# ip static 10.0.0.1/24

ArubaOS-CX-Switch(config-if-mgmt)# exit

ArubaOS-CX-Switch(config)# ssh
  host-key          SSH server host-keys.
  known-host        Client trusted servers list.
  password-authentication Password authentication method enabled by default.
  public-key-authentication Publickey authentication method enabled by default.
  server            Configure SSH server.

ArubaOS-CX-Switch(config)# ssh server vrf
```

```

VRF-NAME Enter the VRF instance. 'default' or 'mgmt' or a configured VRF instance.

ArubaOS-CX-Switch(config)# ssh server vrf mgmt
<cr>

ArubaOS-CX-Switch(config)# ssh server vrf mgmt.

ArubaOS-CX-Switch(config)# https-server
  rest REST API configuration
  vrf Configure HTTPS Server for VRF
ArubaOS-CX-Switch(config)# https-server vrf
  NAME Specify VRF name

ArubaOS-CX-Switch(config)# https-server vrf mgmt
<cr>

ArubaOS-CX-Switch(config)# https-server vrf mgmt
Failed to enable https-server on VRF mgmt. 'admin' password is not set.

ArubaOS-CX-Switch(config)# user admin password
Changing password for user admin
Enter password: *****
Confirm new password: *****

ArubaOS-CX-Switch(config)# https-server vrf mgmt.

ArubaOS-CX-Switch(config)# do show interface mgmt
  Management interface is disabled

ArubaOS-CX-Switch(config)# interface mgmt.

ArubaOS-CX-Switch(config-if-mgmt)# no shut

ArubaOS-CX-Switch(config-if-mgmt)# exit

ArubaOS-CX-Switch(config)# do show interface mgmt
  Address Mode : static
  Admin State : up
  Mac Address : f4:03:43:7f:ad:01
  IPv4 address/subnet-mask : 10.0.0.1/24
  Default gateway IPv4 :
  IPv6 address/prefix :
  IPv6 link local address/prefix:
  Default gateway IPv6 :
  Primary Nameserver :
  Secondary Nameserver :
```

ArubaOS-Switch

```

ArubaOS-Switch(config)# oobm
  disable          Disable OOBM.
  enable          Enable OOBM.
  interface        Configure various interface parameters for OOBM.
  ip              Configure various IP parameters for the OOBM.
  ipv6            Configure various IPv6 parameters for the OOBM.
  ntp              Enable/configure NTP operation on the VLAN/OOBM.
<cr>

ArubaOS-Switch(oobm)# ip ?
  address          Set IP parameters for communication within an IP network.
  default-gateway Configure the IPv4 default gateway address, which will be used
                    when routing is not enabled on the switch.
```

```

ArubaOS-Switch(oobm)# ip address ?
dhcp-bootp          Configure the interface to use DHCP/Bootp server to acquire
                     parameters.
IP-ADDR/MASK-LENGTH Interface IP address/mask.

ArubaOS-Switch(oobm)# ip address 10.199.111.21/24 ?
<cr>
ArubaOS-Switch(oobm)# ip address 10.199.111.21/24

ArubaOS-Switch(oobm)# ip default-gateway ?
IP-ADDR             IPv4 address of the default gateway.

ArubaOS-Switch(oobm)# ip default-gateway 10.199.111.1 ?
<cr>
ArubaOS-Switch(oobm)# ip default-gateway 10.199.111.1

ArubaOS-Switch(config)# telnet-server listen ?
oobm                Enable Telnet Server on OOBM Interface only.
data                Enable Telnet Server on Data Plane only.
both                Enable Telnet Server on both OOBM and Data planes.

ArubaOS-Switch(config)# telnet-server listen oobm

ArubaOS-Switch(config)# ip ssh listen ?
oobm                Enable SSH on OOBM Interface only.
data                Enable SSH on Data Plane only.
both                Enable SSH on both OOBM and Data planes.

ArubaOS-Switch(config)# ip ssh listen oobm

ArubaOS-Switch(config)# web-management listen ?
oobm                Enable HTTP Server on OOBM Interface only.
data                Enable HTTP Server on Data Plane only.
both                Enable HTTP Server on both OOBM and Data planes.

ArubaOS-Switch(config)# web-management listen oobm

ArubaOS-Switch(config)# ntp server 10.199.111.251 ?
burst               Enables burst mode.
iburst              Enables initial burst (iburst) mode.
key-id              Set the authentication key to use for this server.
max-poll            Configures the maximum time intervals in seconds.
min-poll            Configures the minimum time intervals in seconds.
oobm                Use the OOBM interface to connect to the server.
<cr>

ArubaOS-Switch(config)# ntp server 10.199.111.251 oobm ?
burst               Enables burst mode.
iburst              Enables initial burst (iburst) mode.
key-id              Set the authentication key to use for this server.
max-poll            Configures the maximum time intervals in seconds.
min-poll            Configures the minimum time intervals in seconds.
<cr>

ArubaOS-Switch(config)# ntp server 10.199.111.251 oobm

ArubaOS-Switch# ping 10.199.111.51 ?
ip-option           Specify the IP options to use.

```

<code>tos</code>	Specify the Type of Service value to send.
<code>data-fill</code>	Specify the data pattern to send.
<code>data-size</code>	Specify the ping data size.
<code>interval</code>	Specify the interval between pings in seconds.
<code>repetitions</code>	Ping the device multiple times.
<code>source</code>	Specify the ping source.
<code>timeout</code>	Specify the ping timeout in seconds.
<code><cr></code>	

```
ArubaOS-Switch# ping 10.199.111.51 source ?
  IP-ADDR           The source IPv4 address.
  loopback          Specify the source loopback interface.
  oobm              Use the OOBM interface.
  VLAN-ID           The source VLAN.
```

```
ArubaOS-Switch# ping 10.199.111.51 source oobm ?
  data-fill         Specify the data pattern to send.
  data-size         Specify the ping data size.
  interval          Specify the interval between pings in seconds.
  repetitions       Ping the device multiple times.
  timeout           Specify the ping timeout in seconds.
<cr>
```

```
ArubaOS-Switch# ping 10.199.111.51 source oobm
10.199.111.51 is alive, time = 1 ms
```

```
ArubaOS-Switch# copy tftp flash 10.199.111.200 KA_16_01_0006.swi primary ?
  oobm              Use the OOBM interface to reach TFTP server.
<cr>
```

```
ArubaOS-Switch# copy tftp flash 10.199.111.200 KA_16_01_0006.swi primary oobm ?
<cr>
ArubaOS-Switch# copy tftp flash 10.199.111.200 KA_16_01_0006.swi primary oobm
```

```
ArubaOS-Switch# show lldp info remote-device ?
  oobm              Show local or remote device information for the OOBM port.
  [ethernet] PORT-LIST Show local or remote device information for the specified ports.
<cr>
```

```
ArubaOS-Switch# show lldp info remote-device oobm ?
<cr>
```

```
ArubaOS-Switch# show lldp info remote-device oobm
```

LLDP Remote Device Information Detail

<code>Local Port</code>	:	OOBM
<code>ChassisType</code>	:	mac-address
<code>ChassisId</code>	:	00 25 61 d7 c5 60
<code>PortType</code>	:	local
<code>PortId</code>	:	1
<code>SysName</code>	:	2520-8-OOBM
<code>System Descr</code>	:	ProCurve J9137A Switch 2520-8-PoE, revision S.14.03, ROM ...
<code>PortDescr</code>	:	1
<code>Pvid</code>	:	
<code>System Capabilities Supported</code>	:	bridge
<code>System Capabilities Enabled</code>	:	bridge

Remote Management Address

```
Type      : ipv4
Address  : 10.199.111.2
```

Comware7

```
[Comware7] interface M-GigabitEthernet 0/0/0

[Comware7-M-GigabitEthernet0/0/0]?
M-gigabitethernet interface view commands:
arp                  ARP module
bandwidth           Specify the expected bandwidth
bfd                 BFD module
cfdf                Connectivity Fault Detection (CFD) module
ddns                Dynamic Domain Name System (DDNS) module
default              Restore the default settings
description         Describe the interface
dhcp                Dynamic Host Configuration Protocol (DHCP) commands
diagnostic-logfile Diagnostic log file configuration
display              Display current system information
duplex              Status of duplex
ip                  Specify IP configuration
ipsec               IP Security (IPsec) module
ipv6                Specify IPv6 configuration
isis                Configure interface parameters for IS-IS
link-delay          Set the physical state change suppression
lldp                Link Layer Discovery Protocol(802.1ab)
logfile             Log file configuration
mad                 Multi-active detection
monitor             System monitor
mtu                Specify Maximum Transmission Unit(MTU) of the interface
ospf               OSPF interface commands
ospfv3              OSPFv3 interface commands
packet-filter       Packet filter settings
ping               Ping function
quit                Exit from current command view
return              Exit to User View
rip                 Configure interface parameters for RIP
ripng              Configure interface parameters for RIPng
save                Save current configuration
security-logfile   Security log file configuration
shutdown            Shut down the interface
speed               Specify speed of current port
tracert             Tracert function
undo               Cancel current setting

[Comware7-M-GigabitEthernet0/0/0]ip ?
address             Set the IP address of an interface
binding             Bind the interface with a VPN instance
forwarding-table   IP forwarding table
irdp                Enable the ICMP Router Discovery Protocol

[Comware7-M-GigabitEthernet0/0/0]ip address ?
X.X.X.X           IP address
bootp-alloc        Obtain an IP address through BOOTP
dhcp-alloc         Obtain an IP address through DHCP

[Comware7-M-GigabitEthernet0/0/0]ip address 10.199.111.51 255.255.255.0 ?
```

```

irf-member  Specify an IP address for an IRF member device
sub        Indicate a subordinate address
<cr>

[Comware7-M-GigabitEthernet0/0/0]ip address 10.199.111.51 255.255.255.0

[Comware7]telnet ?
  client  Specify telnet client attribute
  server  Telnet server configuration

[Comware7]telnet client ?
  source  Specify a source

[Comware7]telnet client source ?
  interface  Specify a source interface
  ip        Specify a source IP address

[Comware7]telnet client source interface ?
  M-GigabitEthernet  MGE interface
  Vlan-interface    VLAN interface

[Comware7]telnet client source interface M-GigabitEthernet 0/0/0 ?
<cr>

[Comware7]telnet client source interface M-GigabitEthernet 0/0/0

[Comware7]ssh ?
  client  SSH client configuration
  server  Specify the server attribute
  user    SSH user

[Comware7]ssh client ?
  ipv6    Specify IPv6 protocol
  source  Specify a source address or interface for the SSH client

[Comware7]ssh client source ?
  interface  Specify a source interface
  ip        Specify a source IPv4 address

[Comware7]ssh client source interface ?
  M-GigabitEthernet  MGE interface
  Vlan-interface    VLAN interface

[Comware7]ssh client source interface m
[Comware7]ssh client source interface M-GigabitEthernet 0/0/0 ?
<cr>

[Comware7]ssh client source interface M-GigabitEthernet 0/0/0

[Comware7]ntp ?
  authentication      Configure NTP authentication
  authentication-keyid Specify an authentication key ID
  dscp               Set the Differentiated Services Codepoint (DSCP) value
  enable              Enable NTP service
  ipv6                IPv6 protocol
  max-dynamic-sessions Specify the maximum number of dynamic NTP sessions
  peer                Permit full access
  query               Permit control query
  refclock-master     Configure the local clock as a master clock
  reliable             Specify a trusted key

```

```

server          Permit server access and query
source          Specify a source interface
synchronization Permit server access only
unicast-peer   Specify a NTP peer
unicast-server Specify a NTP server

[Comware7]ntp source ?
M-GigabitEthernet MGE interface
Vlan-interface    VLAN interface

[Comware7]ntp source M-GigabitEthernet 0/0/0 ?
<cr>

[Comware7]ntp source M-GigabitEthernet 0/0/0

[Comware7]ping ?
-a              Specify the source IP address
-c              Specify the number of echo requests
-f              Specify packets not to be fragmented
-h              Specify the TTL value
-i              Specify an outgoing interface
-m              Specify the interval for sending echo requests
-n              Numeric output only. No attempt will be made to lookup host
addresses for symbolic names
-p              No more than 8 "pad" hexadecimal characters to fill out the
sent packet. For example, -p f2 will fill the sent packet with
000000f2 repeatedly
-q              Display only summary
-r              Record route. Include the RECORD_ROUTE option in the
ECHO_REQUEST packets and display the route
-s              Specify the payload length
-t              Specify the wait time for each reply
-tos            Specify the TOS value
-v              Display the received ICMP packets other than ECHO-RESPONSE
packets
-vpn-instance   Specify a VPN instance
STRING<1-253> IP address or hostname of remote system
ip              IP information
ipv6            IPv6 information
mpls            MPLS ping
trill           TRansparent Interconnection of Lots of Links (TRILL) module

[Comware7]ping -i ?
M-GigabitEthernet MGE interface
Vlan-interface    VLAN interface

[Comware7]ping -i M-GigabitEthernet 0/0/0 ?
-a              Specify the source IP address
-c              Specify the number of echo requests
-f              Specify packets not to be fragmented
-h              Specify the TTL value
-m              Specify the interval for sending echo requests
-n              Numeric output only. No attempt will be made to lookup host
addresses for symbolic names
-p              No more than 8 "pad" hexadecimal characters to fill out the
sent packet. For example, -p f2 will fill the sent packet with
000000f2 repeatedly
-q              Display only summary
-r              Record route. Include the RECORD_ROUTE option in the
ECHO_REQUEST packets and display the route
-s              Specify the payload length
-t              Specify the wait time for each reply

```

```

-tos          Specify the TOS value
-v           Display the received ICMP packets other than ECHO-RESPONSE
             packets
-vpn-instance Specify a VPN instance
STRING<1-253> IP address or hostname of remote system

[Comware7]ping -i M-GigabitEthernet 0/0/0 10.199.111.41 ?
<cr>

[Comware7]ping -i M-GigabitEthernet 0/0/0 10.199.111.41
Ping 10.199.111.41 (10.199.111.41): 56 data bytes, press CTRL_C to break
56 bytes from 10.199.111.41: icmp_seq=0 ttl=255 time=3.488 ms
56 bytes from 10.199.111.41: icmp_seq=1 ttl=255 time=3.065 ms
56 bytes from 10.199.111.41: icmp_seq=2 ttl=255 time=1.773 ms
56 bytes from 10.199.111.41: icmp_seq=3 ttl=255 time=90.936 ms
56 bytes from 10.199.111.41: icmp_seq=4 ttl=255 time=21.390 ms

--- Ping statistics for 10.199.111.41 ---
5 packet(s) transmitted, 5 packet(s) received, 0.0% packet loss
round-trip min/avg/max/std-dev = 1.773/24.130/90.936/34.177 ms
[Comware7]Jun 10 14:42:08:954 2016 Comware7 PING/6/PING_STATIS_INFO: Ping statistics for
10.199.111.41: 5 packet(s) transmitted, 5 packet(s) received, 0.0% packet loss, round-trip
min/avg/max/std-dev = 1.773/24.130/90.936/34.177 ms.

<Comware7>tftp ?
STRING<1-253> IP address or hostname of the TFTP Server
ipv6          IPv6 TFTP Client

<Comware7>tftp 10.199.111.200 ?
get      Download a file from the TFTP server
put      Upload a local file to the TFTP server
sget    Download a file from the TFTP server securely

<Comware7>tftp 10.199.111.200 get ?
STRING<1-255> Source filename

<Comware7>tftp 10.199.111.200 get 5900_5920-CMW710-R2422P01.ipe ?
STRING<1-255> Destination filename
dscp       Set the Differentiated Services Codepoint (DSCP) value
source     Specify the source address for outgoing TFTP packets
vpn-instance Specify a VPN instance
<cr>

<Comware7>tftp 10.199.111.200 get 5900_5920-CMW710-R2422P01.ipe source ?
interface   Use the primary address of an interface
ip          Use a local IP address

<Comware7>tftp 10.199.111.200 get 5900_5920-CMW710-R2422P01.ipe source interface ?
M-GigabitEthernet MGE interface
Vlan-interface    VLAN interface

<Comware7>tftp 10.199.111.200 get 5900_5920-CMW710-R2422P01.ipe source interface
M-GigabitEthernet 0/0/0 ?
dscp       Set the Differentiated Services Codepoint (DSCP) value
<cr>

<Comware7>tftp 10.199.111.200 get 5900_5920-CMW710-R2422P01.ipe source interface
M-GigabitEthernet 0/0/0

<Comware7>display lldp ?
local-information  Display local information

```

```

neighbor-information  Display neighbor information
statistics           Display statistics information
status               Display LLDP status and configuration
tlv-config          Display TLV configuration

<Comware7>display lldp neighbor-information ?
  >                 Redirect it to a file
  >>                Redirect it to a file in append mode
agent               Specify LLDP agent
interface           Specify interface
list                Neighbor list
verbose             Verbose message
|                  Matching output
<cr>

<Comware7>display lldp neighbor-information interface ?
  FortyGigE          FortyGigE interface
  GigabitEthernet     GigabitEthernet interface
  M-GigabitEthernet   MGE interface
  Ten-GigabitEthernet Ten-GigabitEthernet interface

<Comware7>display lldp neighbor-information interface M-GigabitEthernet 0/0/0 ?
  >                 Redirect it to a file
  >>                Redirect it to a file in append mode
agent               Specify LLDP agent
verbose             Verbose message
|                  Matching output
<cr>

<Comware7>display lldp neighbor-information interface M-GigabitEthernet 0/0/0
LLDP neighbor-information of port 26446[M-GigabitEthernet0/0/0]:
LLDP agent nearest-bridge:
  LLDP neighbor index : 1
  ChassisID/subtype   : 0025-61d7-c560/MAC address
  PortID/subtype      : 6/Locally assigned
  Capabilities        : Bridge

```

Cisco

```

Cisco(config)#interface fastEthernet 0

Cisco(config-if)#?
Interface configuration commands:
  aaa                      Authentication, Authorization and Accounting.
  access-expression         Build a bridge boolean access expression
  arp                       Set arp type (arpa, probe, snap) or timeout or log
                            options
  bandwidth                Set bandwidth informational parameter
  bgp-policy               Apply policy propagated by bgp community string
  carrier-delay             Specify delay for interface transitions
  cdp                      CDP interface subcommands
  clns                     CLNS interface subcommands
  crypto                   Encryption/Decryption commands
  cts                      Configure Cisco Trusted Security
  dampening                Enable event dampening
  datalink                 Interface Datalink commands
  default                  Set a command to its defaults
  delay                    Specify interface throughput delay
  description              Interface specific description
  duplex                   Configure duplex operation.
  eou                      EAPoUDP Interface Configuration Commands
  exit                     Exit from interface configuration mode

```

flow-sampler	Attach flow sampler to the interface
flowcontrol	Configure flow operation.
glbp	Gateway Load Balancing Protocol interface commands
help	Description of the interactive help system
history	Interface history histograms - 60 second, 60 minute and 72 hour
hold-queue	Set hold queue depth
ip	Interface Internet Protocol config commands
ipv6	IPv6 interface subcommands
isis	IS-IS commands
iso-igrp	ISO-IGRP interface subcommands
keepalive	Enable keepalive
link	Configure Link
lldp	LLDP interface subcommands
load-interval	Specify interval for load calculation for an interface
location	Interface location information
logging	Configure logging for interface
loopback	Configure internal loopback on an interface
macro	Command macro
max-reserved-bandwidth	Maximum Reservable Bandwidth on an Interface
mka	MACsec Key Agreement (MKA) interface configuration
neighbor	interface neighbor configuration mode commands
network-policy	Network Policy
nmsp	NMSP interface configuration
no	Negate a command or set its defaults
ntp	Configure NTP
pagg	PAgP interface subcommands
power	Power configuration
rate-limit	Rate Limit
routing	Per-interface routing configuration
service-policy	Configure CPL Service Policy
shutdown	Shutdown the selected interface
small-frame	Set rate limit parameters for small frame
snmp	Modify SNMP interface parameters
source	Get config from another source
spanning-tree	Spanning Tree Subsystem
speed	Configure speed operation.
standby	HSRP interface configuration commands
timeout	Define timeout values for this interface
topology	Configure routing topology on the interface
traffic-shape	Enable Traffic Shaping on an Interface or Sub-Interface
transmit-interface	Assign a transmit interface to a receive-only interface
tx-ring-limit	Configure PA level transmit ring limit
vrf	VPN Routing/Forwarding parameters on the interface
vrrp	VRP Interface configuration commands
vtp	Enable VTP on this interface

Cisco(config-if)#ip ?	
Interface IP configuration subcommands:	
access-group	Specify access control for packets
accounting	Enable IP accounting on this interface
address	Set the IP address of an interface
admission	Apply Network Admission Control
auth-proxy	Apply authentication proxy
authentication	authentication subcommands
bandwidth-percent	Set EIGRP bandwidth limit
bgp	BGP interface commands
broadcast-address	Set the broadcast address of an interface
cef	Cisco Express Forwarding interface commands
cgmp	Enable/disable CGMP

dampening-change	Percent interface metric must change to cause update
dampening-interval	Time in seconds to check interface metrics
dhcp	Configure DHCP parameters for this interface
directed-broadcast	Enable forwarding of directed broadcasts
flow	NetFlow related commands
header-compression	IPHC options
hello-interval	Configures EIGRP-IPv4 hello interval
helper-address	Specify a destination address for UDP broadcasts
hold-time	Configures EIGRP-IPv4 hold time
igmp	IGMP interface commands
information-reply	Enable sending ICMP Information Reply messages
irdp	ICMP Router Discovery Protocol
load-sharing	Style of load sharing
local-proxy-arp	Enable local-proxy ARP
mask-reply	Enable sending ICMP Mask Reply messages
mrm	Configure IP Multicast Routing Monitor tester
mroute-cache	Enable switching cache for incoming multicast packets
mtu	Set IP Maximum Transmission Unit
multicast	IP multicast interface commands
next-hop-self	Configures EIGRP-IPv4 next-hop-self
ospf	OSPF interface commands
pim	PIM interface commands
policy	Enable policy routing
probe	Enable HP Probe support
proxy-arp	Enable proxy ARP
rarp-server	Enable RARP server for static arp entries
redirects	Enable sending ICMP Redirect messages
rgmp	Enable/disable RGMP
rip	Router Information Protocol
route-cache	Enable fast-switching cache for outgoing packets
router	IP router interface commands
rsvp	RSVP Interface Commands
rtp	RTP parameters
sap	Session Advertisement Protocol interface commands
security	DDN IP Security Option
split-horizon	Perform split horizon
sticky-arp	Allow the creation of sticky ARP entries
summary-address	Perform address summarization
tcp	TCP interface commands
unnumbered	Enable IP processing without an explicit address
unreachables	Enable sending ICMP Unreachable messages
urd	Configure URL Rendezvous
verify	Enable per packet validation
vrf	VPN Routing/Forwarding parameters on the interface
wccp	WCCP interface commands

Cisco(config-if)#ip address ?

```
A.B.C.D  IP address
dhcp      IP Address negotiated via DHCP
pool      IP Address autoconfigured from a local DHCP pool
```

Cisco(config-if)#ip address 10.199.111.41 255.255.255.0 ?

```
secondary  Make this IP address a secondary address
<cr>
```

Cisco(config-if)#ip address 10.199.111.41 255.255.255.0

Cisco(config)#ip telnet ?

```
comport      Specify RFC 2217 options
```

```

hidden          Don't display telnet addresses or hostnames
quiet           Don't display non-error telnet messages
source-interface Specify source interface
tos             Specify type of service

Cisco(config)#ip telnet source-interface ?

Async           Async interface
Auto-Template   Auto-Template interface
BVI             Bridge-Group Virtual Interface
CTunnel          CTunnel interface
Dialer           Dialer interface
FastEthernet    FastEthernet IEEE 802.3
Filter           Filter interface
Filtergroup     Filter Group interface
GigabitEthernet GigabitEthernet IEEE 802.3z
GroupVI          Group Virtual interface
Lex              Lex interface
Loopback         Loopback interface
Null             Null interface
Port-channel    Ethernet Channel of interfaces
Portgroup        Portgroup interface
Pos-channel     POS Channel of interfaces
TenGigabitEthernet Ten Gigabit Ethernet
Tunnel           Tunnel interface
Vif              PGM Multicast Host interface
Virtual-Template Virtual Template interface
Virtual-TokenRing Virtual TokenRing
Vlan             Catalyst Vlans
fcpa             Fiber Channel

Cisco(config)#ip telnet source-interface fastEthernet 0 ?
<cr>

Cisco(config)#ip telnet source-interface fastEthernet 0

Cisco(config)#ip ssh ?

authentication-retries  Specify number of authentication retries
break-string            break-string
dh                      Diffie-Hellman
dscp                   IP DSCP value for SSH traffic
logging                 Configure logging for SSH
maxstartups            Maximum concurrent sessions allowed
port                   Starting (or only) Port number to listen on
precedence              IP Precedence value for SSH traffic
pubkey-chain           pubkey-chain
rekey                  Configure rekey values
rsa                     Configure RSA keypair name for SSH
source-interface        Specify interface for source address in SSH
connections            connections
stricthostkeycheck    Enable SSH Server Authentication
time-out               Specify SSH time-out interval
version                Specify protocol version to be supported

Cisco(config)#ip ssh source-interface ?

Async           Async interface
Auto-Template   Auto-Template interface
BVI             Bridge-Group Virtual Interface
CTunnel          CTunnel interface
Dialer           Dialer interface

```

FastEthernet	FastEthernet IEEE 802.3
Filter	Filter interface
Filtergroup	Filter Group interface
GigabitEthernet	GigabitEthernet IEEE 802.3z
GroupVI	Group Virtual interface
Lex	Lex interface
Loopback	Loopback interface
Null	Null interface
Port-channel	Ethernet Channel of interfaces
Portgroup	Portgroup interface
Pos-channel	POS Channel of interfaces
TenGigabitEthernet	Ten Gigabit Ethernet
Tunnel	Tunnel interface
Vif	PGM Multicast Host interface
Virtual-Template	Virtual Template interface
Virtual-TokenRing	Virtual TokenRing
Vlan	Catalyst Vlans
fcpa	Fiber Channel

```
Cisco(config)#ip ssh source-interface fastEthernet 0 ?
<cr>
```

```
Cisco(config)#ip ssh source-interface fastEthernet 0
```

```
Cisco(config)#ntp source ?
```

Async	Async interface
Auto-Template	Auto-Template interface
BVI	Bridge-Group Virtual Interface
CTunnel	CTunnel interface
Dialer	Dialer interface
FastEthernet	FastEthernet IEEE 802.3
Filter	Filter interface
Filtergroup	Filter Group interface
GigabitEthernet	GigabitEthernet IEEE 802.3z
GroupVI	Group Virtual interface
Lex	Lex interface
Loopback	Loopback interface
Null	Null interface
Port-channel	Ethernet Channel of interfaces
Portgroup	Portgroup interface
Pos-channel	POS Channel of interfaces
TenGigabitEthernet	Ten Gigabit Ethernet
Tunnel	Tunnel interface
Vif	PGM Multicast Host interface
Virtual-Template	Virtual Template interface
Virtual-TokenRing	Virtual TokenRing
Vlan	Catalyst Vlans
fcpa	Fiber Channel

```
Cisco(config)#ntp source fastEthernet 0 ?
<cr>
```

```
Cisco(config)#ntp source fastEthernet 0
```

```
Cisco(config)#ip tftp source-interface ?
```

Async	Async interface
Auto-Template	Auto-Template interface
BVI	Bridge-Group Virtual Interface
CTunnel	CTunnel interface

Dialer	Dialer interface
FastEthernet	FastEthernet IEEE 802.3
Filter	Filter interface
Filtergroup	Filter Group interface
GigabitEthernet	GigabitEthernet IEEE 802.3z
GroupVI	Group Virtual interface
Lex	Lex interface
Loopback	Loopback interface
Null	Null interface
Port-channel	Ethernet Channel of interfaces
Portgroup	Portgroup interface
Pos-channel	POS Channel of interfaces
TenGigabitEthernet	Ten Gigabit Ethernet
Tunnel	Tunnel interface
Vif	PGM Multicast Host interface
Virtual-Template	Virtual Template interface
Virtual-TokenRing	Virtual TokenRing
Vlan	Catalyst Vlans
fcpa	Fiber Channel

```

Cisco(config)#ip tftp source-interface fastEthernet 0 ?
<cr>

Cisco(config)#ip tftp source-interface fastEthernet 0

Cisco#ping ?

WORD  Ping destination address or hostname
clns  CLNS echo
ip    IP echo
ipv6 IPv6 echo
tag   Tag encapsulated IP echo
<cr>

Cisco#ping 10.199.111.21 ?

data      specify data pattern
df-bit   enable do not fragment bit in IP header
repeat   specify repeat count
size     specify datagram size
source   specify source address or name
timeout  specify timeout interval
validate  validate reply data
<cr>

Cisco#ping 10.199.111.21 source ?

A.B.C.D          Source address
Async            Async interface
Auto-Template   Auto-Template interface
BVI              Bridge-Group Virtual Interface
CTunnel          CTunnel interface
Dialer           Dialer interface
FastEthernet    FastEthernet IEEE 802.3
Filter           Filter interface
Filtergroup     Filter Group interface
GigabitEthernet GigabitEthernet IEEE 802.3z
GroupVI         Group Virtual interface
Lex              Lex interface
Loopback         Loopback interface
Null             Null interface
Port-channel    Ethernet Channel of interfaces

```

Portgroup	Portgroup interface
Pos-channel	POS Channel of interfaces
TenGigabitEthernet	Ten Gigabit Ethernet
Tunnel	Tunnel interface
Vif	PGM Multicast Host interface
Virtual-Template	Virtual Template interface
Virtual-TokenRing	Virtual TokenRing
Vlan	Catalyst Vlans
fcpa	Fiber Channel

Cisco#ping 10.199.111.21 source fastEthernet 0 ?

data	specify data pattern
df-bit	enable do not fragment bit in IP header
repeat	specify repeat count
size	specify datagram size
timeout	specify timeout interval
validate	validate reply data

<cr>

Cisco#ping 10.199.111.21 source fastEthernet 0

Type escape sequence to abort.
 Sending 5, 100-byte ICMP Echos to 10.199.111.21, timeout is 2 seconds:
 Packet sent with a source address of 10.199.111.41
 !!!!!
 Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/8 ms

Cisco#copy tftp:?

tftp: A URL beginning with this prefix

Cisco#copy tftp://10.199.111.200/c3750e-universalk9-mz.150-2.SE7.bin ?

flash1:	Copy to flash1: file system
flash:	Copy to flash: file system
null:	Copy to null: file system
nvram:	Copy to nvram: file system
running-config	Update (merge with) current system configuration
startup-config	Copy to startup configuration
syslog:	Copy to syslog: file system
system:	Copy to system: file system
tmpsys:	Copy to tmpsys: file system

Cisco#copy tftp://10.199.111.200/c3750e-universalk9-mz.150-2.SE7.bin flash:/boot/c3750e-universalk9-mz.150-2.SE7.bin

Destination filename [/boot/c3750e-universalk9-mz.150-2.SE7.bin]?
 Accessing tftp://10.199.111.200/c3750e-universalk9-mz.150-2.SE7.bin...
 Loading c3750e-universalk9-mz.150-2.SE7.bin from 10.199.111.200 (via FastEthernet0):

Cisco#show lldp neighbors ?

FastEthernet	FastEthernet IEEE 802.3
GigabitEthernet	GigabitEthernet IEEE 802.3z
TenGigabitEthernet	Ten Gigabit Ethernet
detail	Show detailed information
	Output modifiers

```
<cr>

Cisco#show lldp neighbors fastEthernet 0 ?

    detail  Show detailed information
    |        Output modifiers
<cr>

Cisco#show lldp neighbors fastEthernet 0

Capability codes:

    (R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device
    (W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

Device ID          Local Intf      Hold-time  Capability      Port ID
2520-8-OOBM       Fa0            98          B              7

Total entries displayed: 1
```

Chapter 8 Interface or Port Information and Nomenclature

This chapter compares the commands used to collect information about interfaces; configure interface names, speeds, and/or duplex settings; and disable/enable interfaces. It also compares differences between interface and VLAN context.

These commands help on how each operating system references ports. ArubaOS-Switch ASIC chassis-based (modular) switches and stackable switches that have a module slot designate ports using the format "slot/port." For example, on the HP 8212 zl switch, port 24 on the module in slot A is referred to as interface A24. Stackable switches simply use the port number.

Cisco switches (both chassis-based and stackable) designate ports using the format "interface_type slot/sub-slot/port" or "interface_type slot/port."

Interface or Port Information CLI Comparison

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
Configuration commands			
interface 1/1/1	Interface 1/1	interface g1/0/1	interface g1/0/1
interface loopback <number>			interface loopback <number>
[configuring a SVI interface:] interface vlan 1		duplex auto	interface vlan <number>
For creating a L2 VLAN: vlan 5	vlan 5		vlan 5
description link-to-core	name link-to-core	description link-to-core	description link-to-core
shutdown no shutdown	disable enable	shutdown undo shutdown	shutdown no shutdown
ip address 10.93.20.10/24			ip address 10.93.20.10 255.255.255.0
		speed auto	speed auto
Show/display commands			
show interfaces brief	show interfaces brief	display interface brief	show interfaces status
show interfaces 1/1/1	show interfaces brief 1/1	display interface g1/0/1 brief	show interfaces g1/0/1 status
show interface 1/1/1	show interfaces 1/1	display interface g1/0/1	show interfaces g1/0/1

Interface or Port Information configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch(config-if)# do show interface IFNAME Interface name (e.g. 1/1/1) brief Show brief info for interfaces

```

dom      Show transceiver diagnostics info for interfaces
loopback Show details of a loopback interface
mgmt     Management interface details
queues   Show tx queue info for interfaces
transceiver Show transceiver info for interfaces
tunnel    Show details of a tunnel interface
<cr>

ArubaOS-CX-Switch(config)#interface
IFNAME    Interface's name
IFNAME    PORT identifier range.
lag       Configure link-aggregation parameters
loopback Configure loopback interface
mgmt     Configure management interface
tunnel    Tunnel Configuration
vlan     VLAN configuration

ArubaOS-CX-Switch(config)# interface vlan
vlan  VLAN configuration

ArubaOS-CX-Switch(config)# interface vlan
<1-4094>  Vlan id within <1-4094> and should not be an internal vlan

ArubaOS-CX-Switch(config)# interface vlan 2
<cr>

ArubaOS-CX-Switch(config)# interface vlan 2

ArubaOS-CX-Switch(config-if-vlan)#
active-gateway  Configure active-gateway for the SVI
arp            Configure ARP commands
description    Add a description
end           End current mode and change to enable mode
exit          Exit current mode and change to previous mode
ip             IP information
ipv6          IPv6 information
list          Print command list
no            Negate a command or set its defaults
shutdown      Enable/disable an interface
track         Track information
vrf           VRF Configuration
vrrp          VRRP information

ArubaOS-CX-Switch(config)# do show interface brief
<cr>

ArubaOS-CX-Switch(config)# do show interface brief
-----
Port      Native   Mode    Type        Enabled  Status   Reason          Speed
VLAN                                         (Mb/s)
-----
1/1/1    --       routed  --       no       down    No XCVR installed   --
1/1/2    --       routed  --       no       down    No XCVR installed   --
1/1/3    --       routed  --       no       down    No XCVR installed   --
1/1/4    --       routed  --       no       down    No XCVR installed   --
1/1/5    --       routed  --       no       down    No XCVR installed   --
1/1/6    --       routed  --       no       down    No XCVR installed   --
1/1/7    --       routed  --       no       down    No XCVR installed   --
1/1/8    --       routed  SFP+LR  no       down    Administratively down   --
1/1/9    --       routed  SFP+LR  no       down    Administratively down   --
1/1/10   --       routed  SFP+LR  no       down    Administratively down   --
1/1/11   --       routed  --       no       down    No XCVR installed   --
1/1/12   --       routed  --       no       down    No XCVR installed   --

```

1/1/13	--	routed --	no	down	No XCVR installed	--
1/1/14	--	routed --	no	down	No XCVR installed	--
1/1/15	--	routed --	no	down	No XCVR installed	--
1/1/16	--	routed --	no	down	No XCVR installed	--
1/1/17	--	routed --	no	down	No XCVR installed	--
1/1/18	--	routed --	no	down	No XCVR installed	--
1/1/19	--	routed --	no	down	No XCVR installed	--
1/1/20	--	routed --	no	down	No XCVR installed	--
1/1/21	--	routed --	no	down	No XCVR installed	--
1/1/22	--	routed --	no	down	No XCVR installed	--
1/1/23	--	routed SFP+LR	no	down	Administratively down	--
1/1/24	--	routed SFP+LR	no	down	Administratively down	--
1/1/25	--	routed SFP+LR	no	down	Administratively down	--
1/1/26	--	routed --	no	down	No XCVR installed	--
1/1/27	--	routed --	no	down	No XCVR installed	--
1/1/28	--	routed --	no	down	No XCVR installed	--
1/1/29	--	routed --	no	down	No XCVR installed	--
1/1/30	--	routed --	no	down	No XCVR installed	--
1/1/31	--	routed --	no	down	No XCVR installed	--
1/1/32	--	routed --	no	down	No XCVR installed	--

```
ArubaOS-CX-Switch(config)# do show interface 1/1/1
```

```
Interface 1/1/1 is down (Administratively down)
Admin state is down
State information: No XCVR installed
Description:
Hardware: Ethernet, MAC Address: f4:03:43:7f:ad:00
MTU 1500
Type --
qos trust none
Speed 0 Mb/s
Auto-Negotiation is off
Input flow-control is off, output flow-control is off
Rx
    0 input packets          0 bytes
    0 input error            0 dropped
    0 CRC/FCS
Tx
    0 output packets         0 bytes
    0 input error            0 dropped
    0 collision
```

```
ArubaOS-CX-Switch(config)# interface 1/1/1
```

```
ArubaOS-CX-Switch(config)# vlan {vlan-id | vlan-range}
SW-BA-01(config)# vlan 5
```

"This command creates a VLAN or a range of VLANs. If you enter a number that is already assigned to a VLAN, the device puts you into the VLAN configuration submode for that VLAN. If you enter a number that is assigned to an internally allocated VLAN, the system returns an error message. However, if you enter a range of VLANs and one or more of the specified VLANs is outside the range of internally allocated VLANs, the command takes effect on only those VLANs outside the range. The range is from 2 to 4094; VLAN1 is the default VLAN and cannot be created or deleted. You cannot create or delete those VLANs that are reserved for internal use."

```
ArubaOS-CX-Switch(config-if)# description
LINE 1-64 printable ASCII characters
```

```
ArubaOS-CX-Switch(config-if)# description link-to-core
```

```
ArubaOS-CX-Switch(config-if)# shut
```

```
ArubaOS-CX-Switch(config-if)# no shutdown
```

ArubaOS-Switch

```
ArubaOS-Switch# show interfaces ?
brief                  Show port operational parameters.
config                 Show port configuration information.
custom                Show port parameters in a customized table.
display               Show summary of network traffic handled by the ports.
[ethernet] PORT-LIST  Show summary of network traffic handled by the ports.
port-utilization      Show port bandwidth utilization.
status                Show interfaces tagged or untagged VLAN information.
transceiver           Show the transceiver information.
tunnel                Show tunnel configuration and status information.
<cr>
```

```
ArubaOS-Switch# show interfaces brief ?
[ethernet] PORT-LIST  Show summary of network traffic handled by the ports.
<cr>
```

```
ArubaOS-Switch# show interfaces brief
```

Status and Counters - Port Status

Port	Type	Intrusion			Mode	MDI Mode	Flow Ctrl	Bcast Limit
		Alert	Enabled	Status				
1	100/1000T	No	Yes	Up	1000FDx	MDIX	off	0
2	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
3	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
4	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
5	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
6	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
7	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
8	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
9	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
10	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
11	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
12	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
13	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
14	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
15	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
16	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
17	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
18	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
19	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
20	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
21	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
22	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
23	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
24	100/1000T	No	Yes	Down	1000FDx	Auto	off	0
25		No	Yes	Down	.		off	0
26		No	Yes	Down	.		off	0

```
ArubaOS-Switch# show interfaces brief 1
```

Status and Counters - Port Status

Port	Type	Intrusion			Mode	MDI Mode	Flow Ctrl	Bcast Limit
		Alert	Enabled	Status				
1	100/1000T	No	Yes	Up	1000FDx	MDIX	off	0

```
ArubaOS-Switch# show interfaces 1 ?
hc                                Show summary of network traffic handled by the ports.
<cr>
```

```
ArubaOS-Switch# show interfaces 1
```

```
Status and Counters - Port Counters for port 1
```

```
Name      :
MAC Address       : 009c02-d539bf
Link Status       : Up
Totals (Since boot or last clear) :
  Bytes Rx        : 2,069,285,321    Bytes Tx        : 214,736,598
  Unicast Rx       : 1,922,572      Unicast Tx       : 1,283,973
  Bcast/Mcast Rx   : 588,985       Bcast/Mcast Tx  : 326,260
Errors (Since boot or last clear) :
  FCS Rx          : 0              Drops Tx         : 0
  Alignment Rx     : 0              Collisions Tx   : 0
  Runts Rx         : 0              Late Colln Tx   : 0
  Giants Rx        : 0              Excessive Colln : 0
  Total Rx Errors : 0              Deferred Tx     : 0
Others (Since boot or last clear) :
  Discard Rx       : 0              Out Queue Len   : 0
  Unknown Protos  : 0
Rates (5 minute weighted average) :
  Total Rx (bps)   : 510824      Total Tx (bps)   : 517072
  Unicast Rx (Pkts/sec) : 18      Unicast Tx (Pkts/sec) : 20
  B/Mcast Rx (Pkts/sec) : 0      B/Mcast Tx (Pkts/sec) : 0
  Utilization Rx   : 00.51 %    Utilization Tx   : 00.51 %
```

```
ArubaOS-Switch(config)# interface ?
loopback           Enter the loopback Configuration Level.
[ethernet] PORT-LIST Enter the Interface Configuration Level, or execute one command
                      for that level.
tunnel             Enter a tunnel context.
```

```
ArubaOS-Switch(config)# interface 1
```

```
ArubaOS-Switch(eth-1)#?
arp-protect          Configure the port as trusted or untrusted.
bandwidth-min        Enable/disable and configure guaranteed minimum bandwidth
                      settings for outgoing traffic on the port(s).
broadcast-limit      Limit network bandwidth used by broadcast traffic.
dhcp-snooping         Configure port-specific DHCP snooping parameters.
dhcpv6-snooping      Configure DHCPv6 snooping settings on a port.
disable              Disable interface.
enable               Enable interface.
energy-efficient-e... Enables or disables EEE on each port in the port list.
flow-control          Enable/disable flow control negotiation on the port(s) during
                      link establishment.
forbid               Prevent ports from becoming a member of specified VLANs.
gvrp                 Set the GVRP timers for the port.
ignore-untagged-mac Prevent MAC address learning for certain untagged control
                      traffic.
ip                   Apply an access control list to inbound packets on port.
ipv6                Configure various IPv6 parameters for the VLAN.
lacp                Define whether LACP is enabled on the port, and whether it is in
                      active or passive mode when enabled.
link-keepalive        Configure UniDirectional Link Detection (UDLD) on the port.
mac-count-notify     Send a trap when the number of MAC addresses learned on the
                      specified ports exceeds the threshold.
```

mac-notify	Configures SNMP traps for changes in the MAC address table.
mdix-mode	Set port MDI/MDIX mode (default: auto).
monitor	Monitor traffic on the port.
name	Change the interface name.
poe-allocate-by	Configure the power allocation method.
poe-lldp-detect	Enabling this feature causes the port to allocate power based on the link-partner's capabilities via LLDP.
poe-value	Set the maximum power allocation for the port.
power-over-ethernet	Enable per-port power distribution.
qos	Configure port-based traffic prioritization.
rate-limit	Enable rate limiting for various types of traffic.
service-policy	Apply the QoS/Mirror policy on the interface.
smart-link	Configure the control VLANs for receiving flush packets.
speed-duplex	Define mode of operation for the port(s).
tagged	Assign ports to specified VLANs as tagged.
unknown-vlans	Configure the GVRP mode.
untagged	Assign ports to specified VLAN as untagged.
<cr>	

```
ArubaOS-Switch(eth-1) # name ?
PORT-NAME-STR      Specify a port name up to 64 characters length.
```

```
ArubaOS-Switch(eth-1) # name link-to-core
```

```
ArubaOS-Switch(eth-1) # speed-duplex ?
10-half           10 Mbps, half duplex.
100-half          100 Mbps, half duplex.
10-full           10 Mbps, full duplex.
100-full          100 Mbps, full duplex.
1000-full         1000 Mbps, full duplex.
auto              Use Auto Negotiation for speed and duplex mode.
auto-10           10 Mbps, use Auto Negotiation for duplex mode.
auto-100          100 Mbps, use Auto Negotiation for duplex mode.
auto-1000         1000 Mbps, use Auto Negotiation for duplex mode.
auto-10-100       10 or 100 Mbps, use Auto Negotiation for duplex mode.
auto-10g          10 Gbps, use Auto Negotiation for duplex mode.
```

```
ArubaOS-Switch(eth-1) # speed-duplex auto
```

```
ArubaOS-Switch(eth-1) # disable
```

```
ArubaOS-Switch(eth-1) # enable
```

Comware7

<Comware7>display interface ?	
>	Redirect it to a file
>>	Redirect it to a file in append mode
FortyGigE	FortyGigE interface
GigabitEthernet	GigabitEthernet interface
InLoopBack	InLoopBack interface
M-GigabitEthernet	MGE interface
NULL	NULL interface
Register-Tunnel	Register Tunnel interface
Ten-GigabitEthernet	Ten-GigabitEthernet interface
Vlan-interface	VLAN interface
brief	Brief information of status and configuration for interface(s)
range	Display range information
	Matching output
<cr>	

```

<Comware7>display interface brief ?
    >          Redirect it to a file
    >>        Redirect it to a file in append mode
description  Display the complete description information
down        Display all down ports brief information
|           Matching output
<cr>

<Comware7>display interface brief
Brief information on interfaces in route mode:
Link: ADM - administratively down; Stby - standby
Protocol: (s) - spoofing
Interface      Link Protocol Primary IP      Description
InLoop0        UP   UP(s)    --
M-GE0/0/0      DOWN DOWN    --
NULL0          UP   UP(s)    --
REG0           UP   --       --
Vlan1          UP   UP       10.0.111.51

Brief information on interfaces in bridge mode:
Link: ADM - administratively down; Stby - standby
Speed: (a) - auto
Duplex: (a)/A - auto; H - half; F - full
Type: A - access; T - trunk; H - hybrid
Interface      Link Speed   Duplex Type PVID Description
FGE1/0/53      DOWN auto    A     A     1
FGE1/0/54      DOWN auto    A     A     1
GE1/0/1        UP   1G(a)   F(a)  A     1
GE1/0/2        DOWN auto    A     A     1
GE1/0/3        DOWN auto    A     A     1
GE1/0/4        DOWN auto    A     A     1
GE1/0/5        DOWN auto    A     A     1
GE1/0/6        DOWN auto    A     A     1
GE1/0/7        DOWN auto    A     A     1
GE1/0/8        DOWN auto    A     A     1
GE1/0/9        DOWN auto    A     A     1
GE1/0/10       DOWN auto    A     A     1
GE1/0/11       DOWN auto    A     A     1
GE1/0/12       DOWN auto    A     A     1
GE1/0/13       DOWN auto    A     A     1
GE1/0/14       DOWN auto    A     A     1
GE1/0/15       DOWN auto    A     A     1
GE1/0/16       DOWN auto    A     A     1
GE1/0/17       DOWN auto    A     A     1
GE1/0/18       DOWN auto    A     A     1
GE1/0/19       DOWN auto    A     A     1
GE1/0/20       DOWN auto    A     A     1
GE1/0/21       DOWN auto    A     A     1
GE1/0/22       DOWN auto    A     A     1
GE1/0/23       DOWN auto    A     A     1
GE1/0/24       DOWN auto    A     A     1
GE1/0/25       DOWN auto    A     A     1
GE1/0/26       DOWN auto    A     A     1
GE1/0/27       DOWN auto    A     A     1
GE1/0/28       DOWN auto    A     A     1
GE1/0/29       DOWN auto    A     A     1
GE1/0/30       DOWN auto    A     A     1
GE1/0/31       DOWN auto    A     A     1
GE1/0/32       DOWN auto    A     A     1
GE1/0/33       DOWN auto    A     A     1
GE1/0/34       DOWN auto    A     A     1
GE1/0/35       DOWN auto    A     A     1

```

GE1/0/36	DOWN	auto	A	A	1
GE1/0/37	DOWN	auto	A	A	1
GE1/0/38	DOWN	auto	A	A	1
GE1/0/39	DOWN	auto	A	A	1
GE1/0/40	DOWN	auto	A	A	1
GE1/0/41	DOWN	auto	A	A	1
GE1/0/42	DOWN	auto	A	A	1
GE1/0/43	DOWN	auto	A	A	1
GE1/0/44	DOWN	auto	A	A	1
GE1/0/45	DOWN	auto	A	A	1
GE1/0/46	DOWN	auto	A	A	1
GE1/0/47	DOWN	auto	A	A	1
GE1/0/48	DOWN	auto	A	A	1
XGE1/0/49	ADM	auto	A	A	1
XGE1/0/50	ADM	auto	A	A	1
XGE1/0/51	DOWN	auto	A	A	1
XGE1/0/52	DOWN	auto	A	A	1

```

<Comware7>display interface g1/0/1 ?
    >      Redirect it to a file
    >>     Redirect it to a file in append mode
brief  Brief information of status and configuration for interface(s)
|      Matching output
<cr>

<Comware7>display interface g1/0/1 brief
Brief information on interfaces in bridge mode:
Link: ADM - administratively down; Stby - standby
Speed: (a) - auto
Duplex: (a)/A - auto; H - half; F - full
Type: A - access; T - trunk; H - hybrid
Interface          Link Speed   Duplex Type PVID Description
GE1/0/1            UP    1G(a)    F(a)    A     1

```

```

<Comware7>display interface g1/0/1
GigabitEthernet1/0/1
Current state: UP
Line protocol state: UP
IP packet frame type: Ethernet II, hardware address: cc3e-5f73-baf4
Description: GigabitEthernet1/0/1 Interface
Bandwidth: 1000000 kbps
Loopback is not set
Media type is twisted pair
Port hardware type is 1000_BASE_T
1000Mbps-speed mode, full-duplex mode
Link speed type is autonegotiation, link duplex type is autonegotiation
Flow-control is not enabled
Maximum frame length: 10000
Allow jumbo frames to pass
Broadcast max-ratio: 100%
Multicast max-ratio: 100%
Unicast max-ratio: 100%
PVID: 1
MDI type: automdix
Port link-type: Access
Tagged VLANs: None
Untagged VLANs: 1
Port priority: 0
Last clearing of counters: Never
Peak input rate: 90 bytes/sec, at 2015-04-07 00:31:58
Peak output rate: 33 bytes/sec, at 2015-04-07 00:22:05

```

```

Last 300 second input: 0 packets/sec 83 bytes/sec 0%
Last 300 second output: 0 packets/sec 19 bytes/sec 0%
Input (total): 1728 packets, 215498 bytes
    146 unicasts, 37 broadcasts, 1545 multicasts, 0 pauses
Input (normal): 1728 packets, - bytes
    146 unicasts, 37 broadcasts, 1545 multicasts, 0 pauses
Input: 0 input errors, 0 runts, 0 giants, 0 throttles
    0 CRC, 0 frame, - overruns, 0 aborts
    - ignored, - parity errors
Output (total): 253 packets, 50800 bytes
    152 unicasts, 10 broadcasts, 91 multicasts, 0 pauses
Output (normal): 253 packets, - bytes
    152 unicasts, 10 broadcasts, 91 multicasts, 0 pauses
Output: 0 output errors, - underruns, - buffer failures
    0 aborts, 0 deferred, 0 collisions, 0 late collisions
    0 lost carrier, - no carrierr

```

```

[Comware7] interface ?
Bridge-Aggregation      Bridge-Aggregation interface
FortyGigE                 FortyGigE interface
GigabitEthernet            GigabitEthernet interface
LoopBack                  LoopBack interface
M-GigabitEthernet          MGE interface
NULL                      NULL interface
Route-Aggregation         Route-Aggregation interface
Ten-GigabitEthernet        Ten-GigabitEthernet interface
Tunnel                     Tunnel interface
Vlan-interface             VLAN interface
range                      Configure an interface range

```

[Comware7] interface g1/0/1

```

[Comware7-GigabitEthernet1/0/1]?
Gigabitethernet_12 interface view commands:
apply                      Apply a PoE profile
arp                        ARP module
bandwidth                  Specify the expected bandwidth
bpdu-drop                  Specify BPDU drop function
broadcast-suppression     Broadcast storm suppression function
cdp                        Non standard IEEE discovery protocol
cfd                        Connectivity Fault Detection (CFD) module
dcbx                       Data Center Bridge Capability Exchange Protocol
default                     Restore the default settings
description                Describe the interface
dhcp                        DHCP module
diagnostic-logfile         Diagnostic log file configuration
display                     Display current system information
dldp                       DLDP module
dot1x                      802.1X module
duplex                     Status of duplex
eee                         Energy efficient ethernet
enable                     Enable functions
evb                         Edge Virtual Bridging (EVB) module
flex10                     Configure Flex10
flow-control                Enable flow control function
flow-interval               Set the interface statistics interval
igmp-snooping               IGMP snooping module
ip                          Specify IP configuration
ipv6                       Specify IPv6 configuration
jumboframe                 Specify jumbo frame forwarding
l2vpn                      Layer 2 Virtual Private Network (L2VPN) module
lacp                       Configure LACP protocol

```

link-aggregation	Specify link aggregation group configuration information
link-delay	Set the physical state change suppression
lldp	Link Layer Discovery Protocol(802.1ab)
logfile	Log file configuration
loopback	Specify loopback of current port
loopback-detection	Loopback detection module
mac-address	Configure MAC address
mac-authentication	MAC authentication module
mac-forced-forwarding	Specify MAC-forced forwarding configuration information
mac-vlan	MAC VLAN configuration
mdix-mode	Specify mdix type
mirroring-group	Specify mirroring group
mld-snooping	MLD snooping module
monitor	System monitor
mrp	Multiple registration protocol
multicast-suppression	Multicast storm suppression function
mvrp	Multiple VLAN registration protocol
oam	OAM module
packet-filter	Packet filter settings
pbb	Provider Backbone Bridge (PBB) module
ping	Ping function
poe	Power over Ethernet
port	Set port attributes
port-isolate	Port isolation configuration
port-security	Port security module
priority-flow-control	Priority-based flow control (PFC) configuration
ptp	Precision Time Protocol (PTP) module
qcn	Quantized Congestion Notification (QCN) module
qinq	802.1QinQ function
qos	Quality of Service (QoS) module
quit	Exit from current command view
return	Exit to User View
rmon	RMON module
save	Save current configuration
security-logfile	Security log file configuration
service-instance	Configure a service instance
sflow	sFlow function
shutdown	Shut down the interface
smart-link	Smart Link module
spbm	SPBM configuration
speed	Specify speed of current port
storm-constrain	Port storm control
stp	Spanning Tree Protocol (STP) module
tracert	Tracert function
trill	TRansparent Interconnection of Lots of Links (TRILL) module
undo	Cancel current setting
unicast-suppression	Unicast storm suppression function
virtual-cable-test	Test cable connection for an interface
vlan	Set VLAN precedence
voice-vlan	Voice VLAN configuration

[Comware7-GigabitEthernet1/0/1]description ?
TEXT Interface description, 1 to 255 characters

[Comware-GigabitEthernet1/0/1]description link-to-core

[Comware7-GigabitEthernet1/0/1]duplex ?
auto Enable port's duplex negotiation automatically
full Full-duplex
half Half-duplex

```
[Comware7-GigabitEthernet1/0/1]duplex auto

[Comware7-GigabitEthernet1/0/1]speed ?
 10      Specify speed as 10 Mbps
 100     Specify speed as 100 Mbps
 1000    Specify speed as 1000 Mbps
 auto    Enable port's speed negotiation automatically
```

```
[Comware7-GigabitEthernet1/0/1]speed auto
```

```
[Comware7-GigabitEthernet1/0/1]shutdown
```

```
[Comware7-GigabitEthernet1/0/1]undo shutdown
```

Cisco

```
Cisco#show interfaces ?
 Async                  Async interface
 Auto-Template          Auto-Template interface
 BVI                   Bridge-Group Virtual Interface
 CTunnel                CTunnel interface
 Dialer                 Dialer interface
 FastEthernet           FastEthernet IEEE 802.3
 Filter                 Filter interface
 Filtergroup            Filter Group interface
 GigabitEthernet        GigabitEthernet IEEE 802.3z
 GroupVI                Group Virtual interface
 Loopback               Loopback interface
 Null                  Null interface
 Port-channel           Ethernet Channel of interfaces
 Portgroup              Portgroup interface
 Pos-channel            POS Channel of interfaces
 TenGigabitEthernet     Ten Gigabit Ethernet
 Tunnel                 Tunnel interface
 Vif                   PGM Multicast Host interface
 Virtual-Template       Virtual Template interface
 Virtual-TokenRing     Virtual TokenRing
 Vlan                  Catalyst Vlans
 accounting             Show interface accounting
 capabilities           Show interface capabilities information
 counters               Show interface counters
 crb                  Show interface routing/bridging info
 dampening              Show interface dampening info
 debounce               Show interface debounce time info
 description             Show interface description
 etherchannel            Show interface etherchannel information
 fair-queue              Show interface Weighted Fair Queueing (WFQ) info
 fcpa                  Fiber Channel
 flowcontrol             Show interface flowcontrol information
 history                Show interface history
 irb                   Show interface routing/bridging info
 mac-accounting          Show interface MAC accounting info
 mpls-exp               Show interface MPLS experimental accounting info
 mtu                   Show interface mtu
 precedence              Show interface precedence accounting info
 private-vlan            Show interface private vlan information
 pruning                Show interface trunk VTP pruning information
 random-detect           Show interface Weighted Random Early Detection (WRED)
 info                  Show interface rate-limit info
```

```

stats          Show interface packets & octets, in & out, by switching
               path
status         Show interface line status
summary        Show interface summary
switchport     Show interface switchport information
transceiver    Show interface transceiver
trunk          Show interface trunk information
|
               Output modifiers
<cr>

Cisco#show interfaces status



| Port     | Name | Status     | Vlan   | Duplex | Speed  | Type              |
|----------|------|------------|--------|--------|--------|-------------------|
| Gi1/0/1  |      | connected  | 1      | a-full | a-1000 | 10/100/1000BaseTX |
| Gi1/0/2  |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/3  |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/4  |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/5  |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/6  |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/7  |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/8  |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/9  |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/10 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/11 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/12 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/13 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/14 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/15 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/16 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/17 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/18 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/19 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/20 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/21 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/22 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/23 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Gi1/0/24 |      | notconnect | 1      | auto   | auto   | 10/100/1000BaseTX |
| Te1/0/1  |      | notconnect | 1      | full   | 10G    | Not Present       |
| Te1/0/2  |      | notconnect | 1      | full   | 10G    | Not Present       |
| Fa0      |      | disabled   | routed | auto   | auto   | 10/100BaseTX      |



Cisco#show interfaces g1/0/1 ?
accounting      Show interface accounting
capabilities   Show interface capabilities information
controller     Show interface status, configuration and controller status
counters       Show interface counters
crb            Show interface routing/bridging info
dampening      Show interface dampening info
debounce       Show interface debounce time info
description    Show interface description
etherchannel   Show interface etherchannel information
fair-queue     Show interface Weighted Fair Queueing (WFQ) info
flowcontrol    Show interface flowcontrol information
history        Show interface history
irb            Show interface routing/bridging info
mac-accounting Show interface MAC accounting info
mpls-exp       Show interface MPLS experimental accounting info
mtu            Show interface mtu
precedence     Show interface precedence accounting info
private-vlan   Show interface private vlan information
pruning        Show interface trunk VTP pruning information
random-detect  Show interface Weighted Random Early Detection (WRED) info

```

```

rate-limit      Show interface rate-limit info
stats          Show interface packets & octets, in & out, by switching path
status          Show interface line status
summary         Show interface summary
switchport      Show interface switchport information
transceiver    Show interface transceiver
trunk           Show interface trunk information
users           Show interface users
vlan            Show interface vlan information
|
<cr>           Output modifiers

Cisco#show interfaces g1/0/1 status

Port      Name           Status     Vlan      Duplex   Speed Type
Gi1/0/1              connected   1          a-full   a-1000 10/100/1000BaseTX

Cisco#show interfaces g1/0/1 status

Port      Name           Status     Vlan      Duplex   Speed Type
Gi1/0/1              connected   1          a-full   a-1000 10/100/1000BaseTX

Cisco#show interfaces g1/0/1

GigabitEthernet1/0/1 is up, line protocol is up (connected)
Hardware is Gigabit Ethernet, address is 0022.91ab.4381 (bia 0022.91ab.4381)
MTU 1500 bytes, BW 1000000 Kbit/sec, DLY 10 usec,
reliability 255/255, txload 1/255, rxload 1/255
Encapsulation ARPA, loopback not set
Keepalive set (10 sec)
Full-duplex, 1000Mb/s, media type is 10/100/1000BaseTX
input flow-control is off, output flow-control is unsupported
ARP type: ARPA, ARP Timeout 04:00:00
Last input 00:00:01, output 00:00:07, output hang never
Last clearing of "show interface" counters never
Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
Queueing strategy: fifo
Output queue: 0/40 (size/max)
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
    1902 packets input, 149768 bytes, 0 no buffer
    Received 1806 broadcasts (1764 multicasts)
    0 runts, 0 giants, 0 throttles
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
    0 watchdog, 1764 multicast, 0 pause input
    0 input packets with dribble condition detected
    482 packets output, 102102 bytes, 0 underruns
    0 output errors, 0 collisions, 1 interface resets
    0 unknown protocol drops
    0 babbles, 0 late collision, 0 deferred
    0 lost carrier, 0 no carrier, 0 pause output
    0 output buffer failures, 0 output buffers swapped out

Cisco(config)#interface ?

Async          Async interface
Auto-Template Auto-Template interface
BVI            Bridge-Group Virtual Interface
CTunnel        CTunnel interface
Dialer         Dialer interface
FastEthernet   FastEthernet IEEE 802.3

```

Filter	Filter interface
Filtergroup	Filter Group interface
GigabitEthernet	GigabitEthernet IEEE 802.3z
Group-Async	Async Group interface
GroupVI	Group Virtual interface
Lex	Lex interface
Loopback	Loopback interface
Null	Null interface
Port-channel	Ethernet Channel of interfaces
Portgroup	Portgroup interface
Pos-channel	POS Channel of interfaces
TenGigabitEthernet	Ten Gigabit Ethernet
Tunnel	Tunnel interface
Vif	PGM Multicast Host interface
Virtual-Template	Virtual Template interface
Virtual-TokenRing	Virtual TokenRing
Vlan	Catalyst Vlans
fcpa	Fiber Channel
range	interface range command

Cisco(config)#interface g1/0/1

Cisco(config-if)#?

Interface configuration commands:

aaa	Authentication, Authorization and Accounting.
arp	Set arp type (arpa, probe, snap) or timeout or log options
auto	Configure Automation
bandwidth	Set bandwidth informational parameter
bgp-policy	Apply policy propagated by bgp community string
carrier-delay	Specify delay for interface transitions
cdp	CDP interface subcommands
channel-group	Etherchannel/port bundling configuration
channel-protocol	Select the channel protocol (LACP, PAgP)
cts	Configure Cisco Trusted Security
dampening	Enable event dampening
datalink	Interface Datalink commands
default	Set a command to its defaults
delay	Specify interface throughput delay
description	Interface specific description
down-when-looped	Force looped interface down
duplex	Configure duplex operation.
eou	EAPoUDP Interface Configuration Commands
exit	Exit from interface configuration mode
flow-sampler	Attach flow sampler to the interface
flowcontrol	Configure flow operation.
help	Description of the interactive help system
history	Interface history histograms - 60 second, 60 minute and 72 hour
hold-queue	Set hold queue depth
ip	Interface Internet Protocol config commands
keepalive	Enable keepalive
l2protocol-tunnel	Tunnel Layer2 protocols
lacp	LACP interface subcommands
link	Configure Link
lldp	LLDP interface subcommands
load-interval	Specify interval for load calculation for an interface
location	Interface location information
logging	Configure logging for interface
mac	MAC interface commands
macro	Command macro

max-reserved-bandwidth	Maximum Reservable Bandwidth on an Interface
mdix	Set Media Dependent Interface with Crossover
mka	MACsec Key Agreement (MKA) interface configuration
mls	mls interface commands
mvr	MVR per port configuration
neighbor	interface neighbor configuration mode commands
network-policy	Network Policy
nmsp	NMSP interface configuration
no	Negate a command or set its defaults
pagp	PAgP interface subcommands
priority-queue	Priority Queue
queue-set	Choose a queue set for this queue
rmon	Configure Remote Monitoring on an interface
routing	Per-interface routing configuration
rsu	rolling stack upgrade
service-policy	Configure CPL Service Policy
shutdown	Shutdown the selected interface
small-frame	Set rate limit parameters for small frame
snmp	Modify SNMP interface parameters
source	Get config from another source
spanning-tree	Spanning Tree Subsystem
speed	Configure speed operation.
srr-queue	Configure shaped round-robin transmit queues
storm-control	storm configuration
switchport	Set switching mode characteristics
timeout	Define timeout values for this interface
topology	Configure routing topology on the interface
transmit-interface	Assign a transmit interface to a receive-only interface
tx-ring-limit	Configure PA level transmit ring limit
udld	Configure UDLD enabled or disabled and ignore global UDLD setting
vtp	Enable VTP on this interface

Cisco(config-if)#description ?

LINE Up to 200 characters describing this interface

Cisco(config-if)#description link-to-core

Cisco(config-if)#duplex ?

auto	Enable AUTO duplex configuration
full	Force full duplex operation
half	Force half-duplex operation

Cisco(config-if)#duplex auto

Cisco(config-if)#speed ?

10	Force 10 Mbps operation
100	Force 100 Mbps operation
1000	Force 1000 Mbps operation
auto	Enable AUTO speed configuration

Cisco(config-if)#speed auto

```
Cisco(config-if)#shutdown  
Cisco(config-if)#no shutdown
```

Chapter 9 Link Aggregation – LACP and Trunk

This chapter compares the commands to configure aggregation interfaces.

The IEEE 802.3ad Link Aggregation Control Protocol (LACP) enables dynamic aggregation of physical links. It uses Link Aggregation Control Protocol Data Units (LACPDUs) to exchange aggregation information between LACP-enabled devices.

There are some terminology differences among the operating systems for the terms used to define port aggregation. In ArubaOS-Switch, aggregated links are called *trunks*. In Cisco, the term is *EtherChannel*. In addition, Cisco Etherchannel has two modes: PAgP (Cisco specific) or LACP. LACP mode is shown in the Cisco configuration examples.

In Cisco, *trunk* refers to an interface that is configured to support multiple VLANs via 802.1Q.

This chapter covers the configuration of LACP port aggregation—sometimes referred to as protocol trunks, which are dynamic in their operation—and non-LACP port aggregation, sometimes referred to as non-protocol trunks, which are basically “on,” because no protocol is used to negotiate the aggregated links.

Generally, execute the configuration steps first then connect the links -or- disable/shutdown the interfaces, execute the configuration steps, then enable/undo or no shutdown the interfaces. Otherwise network loops could accidentally be created and cause other issues/outages.

Link Aggregation Control Protocol (LACP) CLI comparision

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
Configuration commands			
interface lag 1	Trunk 1/20,1/24 trk1 lacp	interface Bridge-Aggregation 1 description LACP-link-to-ArubaOS-Switch link-aggregation mode dynamic	interface port-channel 1 switchport mode trunk encapsulation dot1q switchport mode access
interface lag 1 vlan trunk allowed all	vlan 220 tagged trk1	interface Bridge-Aggregation 1 port link-type trunk port trunk permit vlan 220	interface <> switchport mode trunk switchport trunk allowed vlan <>
interface lag 1 vlan access 1			interface <> switchport mode access switchport access vlan <>
?		Interface g1/0/23 port link-aggregation group 1	Interface gi1/0/1 channel-group 1 mode active

Show/display commands			
show lacp configuration	show trunks show lacp	display link-aggregation summary	show lacp 1 internal
	show lacp peer	display link-aggregation verbose	
show lacp interfaces	show lacp peer show lacp counters	display link-aggregation member-port	show interfaces etherchannel
show lacp aggregates	show vlans 220 show vlans ports trk1 detail	display vlan 220	show vlan name test

ArubaOS-CX-Switch

```
ArubaOS-CX-Switch(config)# interface
```

IFNAME Interface's name
 IFNAME PORT identifier range.
 lag Configure link-aggregation parameters
 loopback Configure loopback interface
 mgmt Configure management interface
 tunnel Tunnel Configuration
 vlan VLAN configuration

```
ArubaOS-CX-Switch(config)# interface lag <1-128>
```

LAG number ranges from 1 to 128

```
ArubaOS-CX-Switch(config)# interface lag 1
multi-chassis Configure LAG as Multi-chassis
<cr>
```

```
ArubaOS-CX-Switch(config)# interface lag 1
```

```
ArubaOS-CX-Switch(config-lag-if)#
apply Apply a configuration record
arp Configure ARP commands
description Add a description
end End current mode and change to enable mode
exit Exit current mode and change to previous mode
ip IP information
ipv6 IPv6 information
l3-counters Enable both Rx and Tx L3 counters
lacp Configure LACP parameters
list Print command list
loop-protect Configure loop protection
mclag Configure mclag parameters
mvrp Enable the Multiple VLAN Registration Protocol (MVRP)
no Negate a command or set its defaults
qos Quality of Service configuration
rate-limit Apply a rate-limit to a specific traffic type for this port
routing Configure interface as L3
sflow Enable sFlow
shutdown Enable/disable a LAG
spanning-tree Spanning-tree configuration
```

```

track      Track information
vlan       VLAN configuration
vrf        VRF Configuration
vrrp       VRRP information

ArubaOS-CX-Switch(config-lag-if)# vlan
access   Access configuration
trunk    Trunk configuration

ArubaOS-CX-Switch(config-lag-if)# vlan trunk
allowed  Allowed VLANs on the trunk port
native   Native VLAN on the trunk port

ArubaOS-CX-Switch(config-lag-if)# vlan trunk allowed
<1-4094>   VLAN identifier range. [2, 2-10 or 2,3,4 or 2,3-10]
all       All configured VLANs

ArubaOS-CX-Switch(config-lag-if)# vlan trunk allowed all
<cr>

ArubaOS-CX-Switch(config-lag-if)# vlan trunk allowed all
Operation not allowed on an interface with routing enabled.

ArubaOS-CX-Switch(config-lag-if)# no routing

ArubaOS-CX-Switch(config-lag-if)# vlan trunk allowed all

ArubaOS-CX-Switch(config-lag-if)# vlan access
<1-4094>   VLAN identifier

ArubaOS-CX-Switch(config-lag-if)# vlan access 1
<cr>
ArubaOS-CX-Switch(config-lag-if)# vlan access 1

ArubaOS-CX-Switch(config-lag-if)# end

ArubaOS-CX-Switch# sh lacp
aggregates   Show LACP aggregates
configuration Show LACP system-wide configuration
interfaces   Show LACP interfaces
ArubaOS-CX-Switch# sh lacp configuration
<cr>

ArubaOS-CX-Switch# sh lacp configuration
System-id     : f4:03:43:7f:ad:00
System-priority : 65534
Hash          : 13-src-dst

ArubaOS-CX-Switch# sh lacp interfaces
IFNAME        Interface's name
multi-chassis Show MLAG interfaces
<cr>

ArubaOS-CX-Switch# sh lacp interfaces

```

State abbreviations :

A - Active	P - Passive	F - Aggregable	I - Individual
S - Short-timeout	L - Long-timeout	N - InSync	O - OutofSync
C - Collecting	D - Distributing		
X - State m/c expired		E - Default neighbor state	

Actor details of all interfaces:

Intf Name	Aggr Id	Port Pri	Port Pri	State	System-id	System Pri	Aggr Key	Forwarding State
--------------	------------	-------------	-------------	-------	-----------	---------------	-------------	---------------------

Partner details of all interfaces:

Intf Name	Aggr Id	Port Pri	Port Pri	State	System-id	System Pri	Aggr Key
--------------	------------	-------------	-------------	-------	-----------	---------------	-------------

```
ArubaOS-CX-Switch# sh lacp aggregates
WORD Link-aggregate name
<cr>
```

```
ArubaOS-CX-Switch# sh lacp aggregates
```

```
Aggregate-name      : lag1
Aggregated-interfaces :
Heartbeat rate     : N/A
Aggregate mode     : off
```

ArubaOS-Switch

```
ArubaOS-Switch(config)# trunk 19-20 trk1 lacp
```

```
ArubaOS-Switch(config)# vlan 220 tagged trk1
```

```
ArubaOS-Switch# show trunks
```

```
Load Balancing Method: L3-based (default)
```

Port	Name	Type	Group	Type
19	trk1-link-to-Comware5-1	100/1000T	Trk1	LACP
20	trk1-link-to-Comware5-1	100/1000T	Trk1	LACP
21	trk2-link-to-Comware7-1	100/1000T	Trk2	LACP
22	trk2-link-to-Comware7-1	100/1000T	Trk2	LACP
23	trk3-link-to-Cisc01	100/1000T	Trk3	LACP
24	trk3-link-to-Cisc01	100/1000T	Trk3	LACP

```
ArubaOS-Switch# show lacp
```

LACP

Port	LACP Enabled	Trunk Group	Port Status	Port Partner	LACP Status	Admin Key	Oper Key
------	-----------------	----------------	----------------	-----------------	----------------	--------------	-------------

19	Active	Trk1	Up	Yes	Success	0	562	
20	Active	Trk1	Up	Yes	Success	0	562	
21	Active	Trk2	Up	Yes	Success	0	563	
22	Active	Trk2	Up	Yes	Success	0	563	
23	Active	Trk3	Up	Yes	Success	0	564	
24	Active	Trk3	Up	Yes	Success	0	564	

ArubaOS-Switch# show lacp peer

LACP Peer Information.

System ID: 009c02-d53980

Local Port	Local Trunk	System ID	Port	Port Priority	Oper Key	LACP Mode	Tx Timer
19	Trk1	002389-d5a059	23	32768	1	Active	Slow
20	Trk1	002389-d5a059	24	32768	1	Active	Slow
21	Trk2	cc3e5f-73bacb	23	32768	1	Active	Slow
22	Trk2	cc3e5f-73bacb	24	32768	1	Active	Slow
23	Trk3	002291-ab4380	280	32768	1	Active	Slow
24	Trk3	002291-ab4380	281	32768	1	Active	Slow

ArubaOS-Switch# show lacp counters

LACP Port Counters.

Port	Trunk	LACP PDUs Tx	LACP PDUs Rx	Marker Req. Tx	Marker Req. Rx	Marker Resp. Tx	Marker Resp. Rx	Marker Error
19	Trk1	19	18	0	0	0	0	0
20	Trk1	18	17	0	0	0	0	0
21	Trk2	41	40	0	0	0	0	0
22	Trk2	40	39	0	0	0	0	0
23	Trk3	8	8	0	0	0	0	0
24	Trk3	8	8	0	0	0	0	0

ArubaOS-Switch# show vlans 220

Status and Counters - VLAN Information - VLAN 220

VLAN ID : 220
Name : test
Status : Port-based
Voice : No
Jumbo : No

Port	Information	Mode	Unknown VLAN	Status
4		Untagged	Learn	Down
5		Untagged	Learn	Down
6		Tagged	Learn	Down
7		Tagged	Learn	Down
8		Tagged	Learn	Down
Trk1		Tagged	Learn	Up
Trk2		Tagged	Learn	Up

Trk3	Tagged	Learn	Up
ArubaOS-Switch# show vlans ports trk1 detail			
Status and Counters - VLAN Information - for ports Trk1			
VLAN ID Name		Status	Voice Jumbo Mode
-----+-----		-----	-----
1 DEFAULT_VLAN		Port-based No	No Untagged
220 test		Port-based No	No Tagged

Comware 7

```
[Comware]interface Bridge-Aggregation 1

[Comware-Bridge-Aggregation1]description LACP-link-to-ArubaOS-Switch

[Comware-Bridge-Aggregation1]link-aggregation mode dynamic

[Comware]interface g1/0/23

[Comware-GigabitEthernet1/0/23]port link-aggregation group 1

[Comware-GigabitEthernet1/0/23]interface g1/0/24

[Comware-GigabitEthernet1/0/24]port link-aggregation group 1

[Comware]interface Bridge-Aggregation 1

[Comware-Bridge-Aggregation1]port link-type trunk

[Comware-Bridge-Aggregation1]port trunk permit vlan 220

[Comware]display link-aggregation summary
Aggregation Interface Type:
BAGG -- Bridge-Aggregation, RAGG -- Route-Aggregation
Aggregation Mode: S -- Static, D -- Dynamic
Loadsharing Type: Shar -- Loadsharing, NonS -- Non-Loadsharing
Actor System ID: 0x8000, 0023-89d5-a059



| AGG       | AGG  | Partner ID             | Select Ports | Unselect Ports | Share Type |
|-----------|------|------------------------|--------------|----------------|------------|
| Interface | Mode |                        |              |                |            |
| BAGG1     | D    | 0x3980, 009c-02d5-3980 | 2            | 0              | Shar       |



[Comware]display link-aggregation verbose
Loadsharing Type: Shar -- Loadsharing, NonS -- Non-Loadsharing
Port Status: S -- Selected, U -- Unselected
Flags: A -- LACP_Activity, B -- LACP_Timeout, C -- Aggregation,
       D -- Synchronization, E -- Collecting, F -- Distributing,
       G -- Defaulted, H -- Expired

Aggregation Interface: Bridge-Aggregation1
```

```

Aggregation Mode: Dynamic
Loadsharing Type: Shar
System ID: 0x8000, 0023-89d5-a059
Local:
  Port      Status Priority Oper-Key Flag
  -----
  GE1/0/23    S       32768   1       {ACDEF}
  GE1/0/24    S       32768   1       {ACDEF}
Remote:
  Actor      Partner Priority Oper-Key SystemID          Flag
  -----
  GE1/0/23    19        0       562     0x3980, 009c-02d5-3980 {ACDEF}
  GE1/0/24    20        0       562     0x3980, 009c-02d5-3980 {ACDEF}

[Comware]display link-aggregation member-port
Flags: A -- LACP_Activity, B -- LACP_Timeout, C -- Aggregation,
      D -- Synchronization, E -- Collecting, F -- Distributing,
      G -- Defaulted, H -- Expired

GigabitEthernet1/0/23:
Aggregation Interface: Bridge-Aggregation1
Local:
  Port Number: 23
  Port Priority: 32768
  Oper-Key: 1
  Flag: {ACDEF}
Remote:
  System ID: 0x3980, 009c-02d5-3980
  Port Number: 19
  Port Priority: 0
  Oper-Key: 562
  Flag: {ACDEF}
Received LACP Packets: 12 packet(s)
Illegal: 0 packet(s)
Sent LACP Packets: 12 packet(s)

GigabitEthernet1/0/24:
Aggregation Interface: Bridge-Aggregation1
Local:
  Port Number: 24
  Port Priority: 32768
  Oper-Key: 1
  Flag: {ACDEF}
Remote:
  System ID: 0x3980, 009c-02d5-3980
  Port Number: 20
  Port Priority: 0
  Oper-Key: 562
  Flag: {ACDEF}
Received LACP Packets: 11 packet(s)
Illegal: 0 packet(s)
Sent LACP Packets: 11 packet(s)

```

```
[Comware]display vlan 220
VLAN ID: 220
VLAN Type: static
Route Interface: configured
IPv4 address: 10.1.220.3
IPv4 subnet mask: 255.255.255.0
Description: VLAN 0220
Name: test
Tagged Ports:
    Bridge-Aggregation1
    GigabitEthernet1/0/6      GigabitEthernet1/0/23      GigabitEthernet1/0/24
Untagged Ports:
    GigabitEthernet1/0/4      GigabitEthernet1/0/5
```

Cisco

```
Cisco(config)#interface port-channel 1
Cisco(config-if)#switchport trunk encapsulation dot1q
Cisco(config-if)#switchport trunk allowed vlan 220
Cisco(config-if)#switchport mode access
Cisco(config-if)#switchport nonegotiate

Cisco(config)#interface range g1/0/24 - 24
Cisco(config-if-range)#switchport trunk encapsulation dot1q
Cisco(config-if-range)#switchport trunk allowed vlan 220
Cisco(config-if-range)#switchport mode access
Cisco(config-if-range)#switchport nonegotiate
Cisco(config-if-range)#channel-group 1 mode active

Cisco#show lacp 1 internal
Flags: S - Device is requesting Slow LACPDU
      F - Device is requesting Fast LACPDU
      A - Device is in Active mode          P - Device is in Passive mode

Channel group 1
              LACP port      Admin      Oper      Port      Port
Port   Flags   State   Priority   Key       Key     Number   State
Fa1/0/22 SA     bndl    32768     0x1      0x1     0x18    0x3D
Fa1/0/23 SA     bndl    32768     0x1      0x1     0x19    0x3D

Cisco#show interfaces etherchannel
-----
GigabitEthernet1/0/23:
Port state      = Up Mstr Assoc In-Bndl
Channel group = 1           Mode = Active           Gcchange = -
Port-channel   = Po1         GC    =   -             Pseudo port-channel = Po1
Port index     = 0           Load = 0x00          Protocol = LACP
```

Flags: S - Device is sending Slow LACPDU's F - Device is sending fast LACPDU's.
A - Device is in active mode. P - Device is in passive mode.

Local information:

Port	Flags	State	LACP port Priority	Admin Key	Oper Key	Port Number	Port State
Gi1/0/23	SA	bndl	32768	0x1	0x1	0x118	0x3D

Partner's information:

Port	Flags	Priority	LACP port Dev ID	Age	Admin key	Oper Key	Port Number	Port State
Gi1/0/23	SA	0	009c.02d5.3980	19s	0x0	0x234	0x17	0x3D

Age of the port in the current state: 0d:00h:03m:16s

GigabitEthernet1/0/24:

Port state	= Up Mstr Assoc In-Bndl	Channel group = 1	Mode = Active	Gcchange = -
Port-channel	= Po1	GC = -		Pseudo port-channel = Po1
Port index	= 0	Load = 0x00		Protocol = LACP

Flags: S - Device is sending Slow LACPDU's F - Device is sending fast LACPDU's.
A - Device is in active mode. P - Device is in passive mode.

Local information:

Port	Flags	State	LACP port Priority	Admin Key	Oper Key	Port Number	Port State
Gi1/0/24	SA	bndl	32768	0x1	0x1	0x119	0x3D

Partner's information:

Port	Flags	Priority	LACP port Dev ID	Age	Admin key	Oper Key	Port Number	Port State
Gi1/0/24	SA	0	009c.02d5.3980	13s	0x0	0x234	0x18	0x3D

Age of the port in the current state: 0d:00h:03m:09s

Port-channel1:Port-channel1 (Primary aggregator)

Age of the Port-channel	= 0d:00h:06m:29s	Logical slot/port	= 10/1	Number of ports	= 2
HotStandBy port	= null	Port state	= Port-channel Ag-Inuse	Protocol	= LACP
Port security	= Disabled				

Ports in the Port-channel:

Index	Load	Port	EC state	No of bits
0	00	Gi1/0/23	Active	0
0	00	Gi1/0/24	Active	0

Time since last port bundled: 0d:00h:03m:09s Gi1/0/24

```
Cisco#show vlan name test
```

VLAN Name	Status	Ports
220 test	active	Gi1/0/4, Gi1/0/5

VLAN	Type	SAID	MTU	Parent	RingNo	BridgeNo	Stp	BrdgMode	Trans1	Trans2
220	enet	100220	1500	-	-	-	-	-	0	0

Remote SPAN VLAN

Disabled

Primary	Secondary	Type	Ports

Chapter 10 MSTP

Developed based on the IEEE 802.1s standard, Multiple Spanning Tree Protocol (MSTP) overcomes the limitations of STP and RSTP. In addition to support for rapid network convergence, it allows data flows of different VLANs to be forwarded along separate paths, providing a better load-sharing mechanism for redundant links.

MSTP uses multiple spanning tree instances with separate forwarding topologies. Each instance is composed of one or more VLANs, which significantly improves network link utilization and the speed of reconvergence after a failure in the network's physical topology. However, MSTP requires more configuration overhead and is more susceptible to dropped traffic due to misconfiguration.

This chapter compares the commands to configure Multiple Spanning Tree Protocol (MSTP). The four operating systems implement MSTP differently:

- ArubaOS-Switch uses MSTP as the default STP version. MSTP *is not enabled by default*. When MSTP is enabled, all ports are auto-edge-ports.
- Cisco uses Per-VLAN Spanning Tree Plus (PVST+) as the default STP version and it *is enabled by default*. If you enable MSTP, all ports are non-edge ports.

MSTP CLI Comparison

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
Configuration commands			
spanning-tree	spanning-tree	stp region-configuration	spanning-tree mode mst
		region-name ArubaOS-Switch-Comware-Cisco	spanning-tree mst configuration
spanning-tree mode mstp	spanning-tree config-name ArubaOS-Switch-Comware-Cisco	revision-level 1	name ArubaOS-Switch-Comware-Cisco
spanning-tree config-name MST0 spanning-tree config-revision 40	spanning-tree config-revision 1	instance 1 vlan 220	revision 1
spanning-tree instance 1 vlan 1	spanning-tree instance 1 vlan 220	instance 2 vlan 100	instance 1 vlan 220
spanning-tree instance 2 vlan 100	spanning-tree instance 2 vlan 100	instance 3 vlan 240	instance 2 vlan 100
spanning-tree instance 3 vlan 240	spanning-tree instance 3 vlan 240	active region-configuration	instance 3 vlan 240

spanning-tree priority 1	spanning-tree priority 2	stp priority 16384	spanning-tree mst 0 priority 20480
spanning-tree instance 2 priority 2	spanning-tree instance 1 priority 3		spanning-tree mst 1 priority 16384
spanning-tree instance 2 priority 4	spanning-tree instance 2 priority 4		spanning-tree mst 2 priority 12288
spanning-tree instance 3 priority 5	spanning-tree instance 3 priority 5		spanning-tree mst 3 priority 8192
		<pre>interface g1/0/9 stp edged-port stp cost 10000 stp port priority 160 stp instance 1 cost 10000 stp instance 1 port priority 160</pre>	<pre>Interface g1/0/1 spanning-tree < cost guard link-type mst port-prority port-fast ></pre>
Show/display commands			
show spanning-tree	show spanning-tree	display stp	show spanning-tree
		display stp brief	show spanning-tree mst
show spanning-tree mst-config	show spanning-tree mst-config		show spanning-tree mst configuration
show spanning-tree mst <0-64> detail			
	show spanning-tree instance ist		show spanning-tree mst 0
show spanning-tree detail	show spanning-tree instance detail		show spanning-tree mst 1

MSTP CLI Configurable options

ArubaOS-CX-Switch

```
ArubaOS-CX-Switch(config)# spanning-tree
  config-name          Set the MST region configuration name
  config-revision      Set the MST region configuration revision number
  extend-system-id     Enables the extended system-id functionality.
  forward-delay        Set the forward delay for the Multiple spanning tree
  hello-time           Set the hello interval for the Multiple spanning tree
  ignore-pvid-inconsistency Ignore PVID inconsistencies and allow, RPVST to run on
                            mismatched links.
  instance             Create, delete or configure an MST instance
```

max-age	Set the max age interval for the Multiple spanning tree
max-hops	Set the max hops value for the Multiple spanning tree
mode	Specify the spanning-tree mode
pathcost-type	Specify the path cost type.
priority	Set the device priority multiplier. This value will be multiplied by 4096
multiplied by 4096	
transmit-hold-count	Sets the transmit hold count performance parameter in pps
trap	Enable STP/MSTP traps
vlan	VLAN configuration
<cr>	
ArubaOS-CX-Switch(config)# spanning-tree	
ArubaOS-CX-Switch(config)# spanning-tree mode	
mstp	Multiple spanning tree mode
rpvst	Rapid PVST mode
ArubaOS-CX-Switch(config)# spanning-tree mode mstp	
<cr>	
ArubaOS-CX-Switch(config)# spanning-tree priority	
<0-15>	Enter an integer number (Default: 8)
ArubaOS-CX-Switch(config)# spanning-tree priority 1	
<cr>	
ArubaOS-CX-Switch(config)# spanning-tree priority 1	
ArubaOS-CX-Switch(config)# spanning-tree instance	
<1-64>	Enter an integer number
ArubaOS-CX-Switch(config)# spanning-tree instance 2	
priority	Set the device priority for MST instance. This value will be multiplied by 4096
vlan	VLAN configuration
ArubaOS-CX-Switch(config)# spanning-tree instance 2 priority	
<0-15>	Enter an integer number (Default: 8)
ArubaOS-CX-Switch(config)# spanning-tree instance 2 priority 2	
<cr>	
ArubaOS-CX-Switch(config)# spanning-tree instance 2 priority 2	
ArubaOS-CX-Switch(config)# int 1/1/1	
ArubaOS-CX-Switch(config-if)# spanning-tree	
ArubaOS-CX-Switch(config)# spanning-tree	
config-name	Set the MST region configuration name
config-revision	Set the MST region configuration revision number
extend-system-id	Enables the extended system-id functionality.
forward-delay	Set the forward delay for the Multiple spanning tree
hello-time	Set the hello interval for the Multiple spanning tree
ignore-pvid-inconsistency	Ignore PVID inconsistencies and allow, RPVST to run on mismatched links.
instance	Create, delete or configure an MST instance
max-age	Set the max age interval for the Multiple spanning tree
max-hops	Set the max hops value for the Multiple spanning tree
mode	Specify the spanning-tree mode
pathcost-type	Specify the path cost type.
priority	Set the device priority multiplier. This value will be multiplied by 4096
transmit-hold-count	Sets the transmit hold count performance parameter in pps
trap	Enable STP/MSTP traps

```

vlan                      VLAN configuration
<cr>

ArubaOS-CX-Switch(config)# do show spanning-tree
detail      Show detailed spanning tree information.
mst         Show multiple spanning trees information.
mst-config Show multiple spanning tree region configuration.
summary     Summary of RPVST information
vlan        VLAN configuration
<cr>

ArubaOS-CX-Switch(config)# do show spanning-tree
Spanning tree status       : Enabled Protocol: MSTP

MST0
Root ID    Priority   : 4096
MAC-Address: f4:03:43:7f:ad:00
This bridge is the root
Hello time(in seconds):2 Max Age(in seconds):20
Forward Delay(in seconds):15

Bridge ID  Priority   : 4096
MAC-Address: f4:03:43:7f:ad:00
Hello time(in seconds):2 Max Age(in seconds):20
Forward Delay(in seconds):15

Port        Role      State       Cost      Priority      Type
-----  -----
lag1        Disabled   Blocking    20000     64           point_to_point

ArubaOS-CX-Switch(config)# do show spanning-tree mst-config
MST configuration information
MST config ID      : f4:03:43:7f:ad:00
MST config revision : 0
MST config digest   : AC36177F50283CD4B83821D8AB26DE62
Number of instances : 0

Instance ID      Member VLANs
-----  -----
0                  1-4094

ArubaOS-CX-Switch(config)# do show spanning-tree detail
Spanning tree status       : Enabled Protocol: MSTP

MST0
Root ID    Priority   : 4096
MAC-Address: f4:03:43:7f:ad:00
This bridge is the root
Hello time(in seconds):2 Max Age(in seconds):20
Forward Delay(in seconds):15

Bridge ID  Priority   : 4096
MAC-Address: f4:03:43:7f:ad:00
Hello time(in seconds):2 Max Age(in seconds):20
Forward Delay(in seconds):15

Port        Role      State       Cost      Priority      Type
-----  -----
lag1        Disabled   Blocking    20000     64           point_to_point

Topology change flag      : False
Number of topology changes : 0
Last topology change occurred : 2958 seconds ago

```

```

Timers: Hello expiry 0 , Forward delay expiry 0

Port lag1
Designated root has priority :4096 Address: f4:03:43:7f:ad:00
Designated bridge has priority :4096 Address: f4:03:43:7f:ad:00
Designated port :321
Number of transitions to forwarding state : 0
Bpdus sent 0, received 0

ArubaOS-CX-Switch(config)# spanning-tree forward-delay 6

ArubaOS-CX-Switch(config)# spanning-tree hello-time 6

ArubaOS-CX-Switch(config)# spanning-tree transmit-hold-count 5

```

ArubaOS-Switch

```

ArubaOS-Switch(config)# spanning-tree ?
  bpdu-protection-ti... Set the time for protected ports to be in down state after
                        receiving unauthorized BPDUs.
  bpdu-throttle       Configure BPDU throttling on the device.
  clear-debug-counters Clear spanning tree debug counters.
  config-name         Set the MST region configuration name (default is switch's MAC
                      address).
  config-revision     Set the MST region configuration revision number (default is 0).
  enable              Enable spanning-tree.
  disable             Disable spanning-tree.
  extend              Enable the extended system ID feature.
  force-version      Set Spanning Tree protocol compatibility mode.
  forward-delay       Set time the switch waits between transitioning from listening to
                      learning and from learning to forwarding states. Not applicable in
                      RPVST mode.
  hello-time          Set time between messages transmission when the switch is root.
                      Not applicable in RPVST mode.
  ignore-pvid-incons... Ignore PVID inconsistencies, allowing Rapid PVST to run on
                           mismatched links.
  instance            Create, delete or configure an MST instance.
  legacy-mode         Set spanning-tree protocol to operate either in 802.1D legacy mode
                      or in 802.1s native mode.
  legacy-path-cost   [Deprecated] Set 802.1D (legacy) or 802.1t (current) default
                      pathcost values.
  log                Enable event logging for port state transition information.
  max-hops           Set the max number of hops in a region before the MST BPDU is
                      discarded and the information held for a port is aged (default is
                      20).
  maximum-age        Set maximum age of received STP information before it is
                      discarded. Not applicable in RPVST mode.
  mode               Specify spanning-tree mode.
  pathcost           Specify a standard to use when calculating the default pathcost.
  pending            Manipulate pending MSTP configuration.
  port               Configure port specific RPVST parameters for the specified VLANs.
  [ethernet] PORT-LIST Configure the port-specific parameters of the spanning tree
                      protocol for individual ports.
  priority           Set the device STP priority (the value is in range of 0-61440
                      divided into steps of 4096 that are numbered from 0 to 15, default
                      is step 8). Not applicable in RPVST mode.
  root               Configure root for STP.
  trap               Enable/disable STP/MSTP/RPVST traps.
  vlan               Specify RPVST VLAN specific parameters.
<cr>

```

```
ArubaOS-Switch(config)# spanning-tree
```

```
ArubaOS-Switch(config)# spanning-tree config-name ArubaOS-Switch-Comware-Cisco
```

```

ArubaOS-Switch(config)# spanning-tree config-revision 1
ArubaOS-Switch(config)# spanning-tree instance 1 vlan 220
ArubaOS-Switch(config)# spanning-tree instance 2 vlan 100
ArubaOS-Switch(config)# spanning-tree instance 3 vlan 240
ArubaOS-Switch(config)# spanning-tree priority 2
  (note - multiplier is 4096, default setting is 8)
ArubaOS-Switch(config)# spanning-tree instance 1 priority 3
  (note - multiplier is 4096, default setting is 8)
ArubaOS-Switch(config)# spanning-tree instance 2 priority 4
  (note - multiplier is 4096, default setting is 8)
ArubaOS-Switch(config)# spanning-tree instance 3 priority 5
  (note - multiplier is 4096, default setting is 8)

ArubaOS-Switch(config)# spanning-tree 9 ?
admin-edge-port      Set the administrative edge port status.
auto-edge-port       Set the automatic edge port detection.
bpdu-filter          Stop a specific port or ports from transmitting BPDUs, receiving
                     BPDUs, and assume a continuous forwarding state.
bpdu-protection     Disable the specific port or ports if the port(s) receives STP
                     BPDUs.
hello-time           Set message transmission interval (in sec.) on the port. Not
                     applicable in RPVST mode.
loop-guard           Set port to guard against the loop and consequently to prevent it
                     from becoming Forwarding Port.
mcheck               Force the port to transmit RST BPDUs. Not applicable in RPVST
                     mode.
path-cost             Set port's path cost value. Not applicable in RPVST mode.
point-to-point-mac   Set the administrative point-to-point status.
priority              Set port priority (the value is in range of 0-240 divided into
                     steps of 16 that are numbered from 0 to 15, default is step 8).
                     Not applicable in RPVST mode.
pvst-filter           Stop a specific port or ports from receiving and retransmitting
                     PVST BPDUs. Not applicable in RPVST mode.
pvst-protection      Disable the specific port or ports if the port(s) receives PVST
                     BPDUs. Not applicable in RPVST mode.
root-guard            Set port to ignore superior BPDUs to prevent it from becoming Root
                     Port.
tcn-guard             Set port to stop propagating received topology changes
                     notifications and topology changes to other ports.

ArubaOS-Switch(config)# spanning-tree 9 admin-edge-port
ArubaOS-Switch(config)# spanning-tree 9 path-cost 10000
ArubaOS-Switch(config)# spanning-tree 9 priority 10
  (note - multiplier is 16, default setting is 8)

ArubaOS-Switch(config)# spanning-tree instance 1 9 path-cost 10000
ArubaOS-Switch(config)# spanning-tree instance 1 9 priority 10
  (note - multiplier is 16, default setting is 8)

ArubaOS-Switch# show spanning-tree ?

```

bpdu-protection	Show spanning tree BPDU protection status information.
bpdu-throttle	Displays the configured throttle value.
config	Show spanning tree configuration information.
debug-counters	Show spanning tree debug counters information.
detail	Show spanning tree extended details Port, Bridge, Rx, and Tx report.
inconsistent-ports	Show information about inconsistent ports blocked by spanning tree protection functions.
instance	Show the spanning tree instance information.
mst-config	Show multiple spanning tree region configuration.
pending	Show spanning tree pending configuration.
[ethernet] PORT-LIST	Limit the port information printed to the set of the specified ports.
port-role-change-h...	Show the last 10 role change entries on a port in a VLAN/instance.
pvst-filter	Show spanning tree PVST filter status information.
pvst-protection	Show spanning tree PVST protection status information.
root-history	Show spanning tree Root changes history information.
system-limits	Show system limits for spanning-tree
topo-change-history	Show spanning tree topology changes history information.
traps	Show spanning tree trap information.
vlan	Show VLAN information for RPVST.
<cr>	

ArubaOS-Switch# show spanning-tree

Multiple Spanning Tree (MST) Information

STP Enabled : Yes
 Force Version : MSTP-operation
 IST Mapped VLANs : 1-99,101-219,221-239,241-4094
 Switch MAC Address : 009c02-d53980
 Switch Priority : 8192
 Max Age : 20
 Max Hops : 20
 Forward Delay : 15

Topology Change Count : 69
 Time Since Last Change : 6 mins

CST Root MAC Address : 009c02-d53980
 CST Root Priority : 8192
 CST Root Path Cost : 0
 CST Root Port : This switch is root

IST Regional Root MAC Address : 009c02-d53980
 IST Regional Root Priority : 8192
 IST Regional Root Path Cost : 0
 IST Remaining Hops : 20

Root Guard Ports :
 Loop Guard Ports :
 TCN Guard Ports :
 BPDU Protected Ports :
 BPDU Filtered Ports :
 PVST Protected Ports :
 PVST Filtered Ports :

Root Inconsistent Ports :
 Loop Inconsistent Ports :

Port	Type	Prio	Designated	Hello		
		Cost	Bridge	Time	PtP	Edge
-	-	-	-	-	-	-
-	-	+	-	-	-	-

1	100/1000T	20000	128	Forwarding	009c02-d53980	2	Yes	No			
2	100/1000T	Auto	128	Disabled		2	Yes	No			
3	100/1000T	Auto	128	Disabled		2	Yes	No			
4	100/1000T	10000	96	Disabled		2	Yes	Yes			
5	100/1000T	20000	128	Forwarding	009c02-d53980	2	Yes	Yes			
6	100/1000T	Auto	128	Disabled		2	Yes	No			
7	100/1000T	Auto	128	Disabled		2	Yes	No			
8	100/1000T	Auto	128	Disabled		2	Yes	No			
9	100/1000T	10000	160	Forwarding	009c02-d53980	2	Yes	Yes			
10	100/1000T	Auto	128	Disabled		2	Yes	No			
11	100/1000T	20000	128	Forwarding	009c02-d53980	2	Yes	No			
12	100/1000T	Auto	128	Disabled		2	Yes	No			
13	100/1000T	20000	128	Forwarding	009c02-d53980	2	Yes	No			
14	100/1000T	Auto	128	Disabled		2	Yes	No			
15	100/1000T	20000	128	Forwarding	009c02-d53980	2	Yes	No			
16	100/1000T	Auto	128	Disabled		2	Yes	No			
17	100/1000T	Auto	128	Disabled		2	Yes	No			
18	100/1000T	Auto	128	Disabled		2	Yes	No			
25	Auto	128	Disabled		2	Yes	No				
26	Auto	128	Disabled		2	Yes	No				
Trk1	Auto	64	Disabled		2	Yes	No				
Trk2	Auto	64	Disabled		2	Yes	No				
Trk3	Auto	64	Disabled		2	Yes	No				

ArubaOS-Switch# show spanning-tree mst-config

MST Configuration Identifier Information

MST Configuration Name : ArubaOS-Switch-Comware-Cisco
MST Configuration Revision : 1
MST Configuration Digest : 0xCEE7F8D6E076E3201F92550CB1D2CB92

IST Mapped VLANs : 1-99,101-219,221-239,241-4094

Instance ID Mapped VLANs

1	220
2	100
3	240

ArubaOS-Switch# show spanning-tree instance ist

IST Instance Information

Instance ID : 0
Mapped VLANs : 1-99,101-219,221-239,241-4094
Switch Priority : 8192

Topology Change Count : 0
Time Since Last Change : 9 mins

Regional Root MAC Address : 009c02-d53980
Regional Root Priority : 8192
Regional Root Path Cost : 0
Regional Root Port : This switch is root
Remaining Hops : 20

Root Inconsistent Ports :
Loop Inconsistent Ports :

Designated

Port	Type	Cost	Priority	Role	State	Bridge
1	100/1000T	20000	128	Designated	Forwarding	009c02-d53980
2	100/1000T	Auto	128	Disabled	Disabled	
3	100/1000T	Auto	128	Disabled	Disabled	
4	100/1000T	Auto	96	Disabled	Disabled	
5	100/1000T	20000	128	Designated	Forwarding	009c02-d53980
6	100/1000T	Auto	128	Disabled	Disabled	
7	100/1000T	Auto	128	Disabled	Disabled	
8	100/1000T	Auto	128	Disabled	Disabled	
9	100/1000T	20000	160	Designated	Forwarding	009c02-d53980
10	100/1000T	Auto	128	Disabled	Disabled	
11	100/1000T	20000	128	Designated	Forwarding	009c02-d53980
12	100/1000T	Auto	128	Disabled	Disabled	
13	100/1000T	20000	128	Designated	Forwarding	009c02-d53980
14	100/1000T	Auto	128	Disabled	Disabled	
15	100/1000T	20000	128	Designated	Forwarding	009c02-d53980
16	100/1000T	Auto	128	Disabled	Disabled	
17	100/1000T	Auto	128	Disabled	Disabled	
18	100/1000T	Auto	128	Disabled	Disabled	
25		Auto	128	Disabled	Disabled	
26		Auto	128	Disabled	Disabled	
Trk1		Auto	64	Disabled	Disabled	
Trk2		Auto	64	Disabled	Disabled	
Trk3		Auto	64	Disabled	Disabled	

ArubaOS-Switch# show spanning-tree instance 1
MST Instance Information
Instance ID : 1
Mapped VLANs : 220
Switch Priority : 12288
Topology Change Count : 62
Time Since Last Change : 9 mins
Regional Root MAC Address : 002389-d5a059
Regional Root Priority : 8192
Regional Root Path Cost : 20000
Regional Root Port : 11
Remaining Hops : 19
Root Inconsistent Ports :
Loop Inconsistent Ports :
Port Type Cost Priority Role State Designated Bridge

Port	Type	Cost	Priority	Role	State	Designated Bridge
1	100/1000T	20000	128	Designated	Forwarding	009c02-d53980
2	100/1000T	Auto	128	Disabled	Disabled	
3	100/1000T	Auto	128	Disabled	Disabled	
4	100/1000T	Auto	128	Disabled	Disabled	
5	100/1000T	20000	128	Designated	Forwarding	009c02-d53980
6	100/1000T	Auto	128	Disabled	Disabled	
7	100/1000T	Auto	128	Disabled	Disabled	
8	100/1000T	Auto	128	Disabled	Disabled	
9	100/1000T	20000	160	Designated	Forwarding	009c02-d53980
10	100/1000T	Auto	128	Disabled	Disabled	
11	100/1000T	20000	128	Root	Forwarding	002389-d5a059
12	100/1000T	Auto	128	Disabled	Disabled	
13	100/1000T	20000	128	Designated	Forwarding	009c02-d53980

14	100/1000T	Auto	128	Disabled	Disabled	
15	100/1000T	20000	128	Designated	Forwarding	009c02-d53980
16	100/1000T	Auto	128	Disabled	Disabled	
17	100/1000T	Auto	128	Disabled	Disabled	
18	100/1000T	Auto	128	Disabled	Disabled	
25		Auto	128	Disabled	Disabled	
26		Auto	128	Disabled	Disabled	
Trk1		Auto	64	Disabled	Disabled	
Trk2		Auto	64	Disabled	Disabled	
Trk3		Auto	64	Disabled	Disabled	

Comware7

```
[Comware7] stp ?
  bpdu-protection      Specify BPDU protection function
  bridge-diameter      Specify bridge diameter
  global                Specify global parameter
  instance              Specify the spanning tree instance list
  max-hops              Specify max hops
  mode                  Specify state machine mode
  pathcost-standard    Specify port path cost standard
  port-log              Specify port status logging
  priority              Specify bridge priority
  region-configuration Enter MSTP region view
  root                 Specify root switch
  tc-protection         Specify TC protection function
  tc-snooping           Specify TC snooping
  timer                 Specify timer configuration
  timer-factor          Specify aged out time factor
  vlan                  Specify the VLAN list
```

```
[Comware7] stp region-configuration
```

```
[Comware7-mst-region]?
```

Mst-region view commands:

active	Active region configuration
cfd	Connectivity Fault Detection (CFD) module
check	Check the reg-configuration under-construction
diagnostic-logfile	Diagnostic log file configuration
display	Display current system information
instance	Specify the spanning tree instance list
logfile	Log file configuration
monitor	System monitor
ping	Ping function
quit	Exit from current command view
region-name	Specify region name
return	Exit to User View
revision-level	Specify revision level
save	Save current configuration
security-logfile	Security log file configuration
tracert	Tracert function
undo	Cancel current setting
vlan-mapping	VLAN mapping

```
[Comware7-mst-region] region-name ArubaOS-Switch-Comware-Cisco
```

```
[Comware7-mst-region] revision-level 1
```

```
[Comware7-mst-region] instance 1 vlan 220
```

```
[Comware7-mst-region] instance 2 vlan 100
```

```
[Comware7-mst-region] instance 3 vlan 240
```

```

[Comware7-mst-region]active region-configuration

[Comware7]stp priority 16384
  (note - increments of 4096, default setting is 32768)

[Comware7]stp instance 1 priority 20480
  (note - in steps of 4096, default setting is 32768)

[Comware7]stp instance 2 priority 8192
  (note - in steps of 4096, default setting is 32768)

[Comware7]stp instance 3 priority 12288
  (note - in steps of 4096, default setting is 32768)

[Comware7]interface g1/0/9

[Comware7-GigabitEthernet1/0/9]stp ?
  compliance          Specify MST BPDU Format
  config-digest-snooping  Specify configuration digest snooping
  cost                Specify port path cost
  edged-port          Specify edge port
  enable              Enable STP
  instance            Specify the spanning tree instance list
  loop-protection    Specify loop protection
  mcheck              Specify mcheck
  no-agreement-check Specify port ignore agreement information
  point-to-point      Specify point to point link
  port                Specify port parameter
  role-restriction   Forbid the port to be a root port
  root-protection    Specify root protection
  tc-restriction     Restrict propagation of TC message
  transmit-limit     Specify transmission limit count
  vlan                Specify the VLAN list

[Comware7-GigabitEthernet1/0/9]stp edged-port

[Comware7-GigabitEthernet1/0/9]stp cost 10000

[Comware7-GigabitEthernet1/0/9]stp port priority 160
  (note - in steps of 16, default setting is 128)

[Comware7-GigabitEthernet1/0/9]stp instance 1 cost 10000

[Comware7-GigabitEthernet1/0/9]stp instance 1 port priority 160
  (note - in steps of 16, default setting is 128)

[Comware7]display stp ?
  >                  Redirect it to a file
  >>                 Redirect it to a file in append mode
  abnormal-port       Display abnormal ports
  bpdu-statistics    BPDU statistics
  brief               Brief information
  down-port          Port information of protocol down
  history             History of port roles
  instance            Specify the spanning tree instance list
  interface           Specify interface
  region-configuration Region configuration
  root                Display status and configuration of the root bridge
  slot                Specify the slot number
  tc                  Port TC count
  vlan                Specify the VLAN list
  |                  Matching output

```

```

<cr>

[Comware7]display stp
-----[CIST Global Info] [Mode MSTP]-----
Bridge ID          : 16384.cc3e-5f73-bacb
Bridge times       : Hello 2s MaxAge 20s FwdDelay 15s MaxHops 20
Root ID/ERPC       : 8192.009c-02d5-3980, 0
RegRoot ID/IRPC    : 8192.009c-02d5-3980, 20
RootPort ID        : 128.6
BPDU-Protection   : Disabled
Bridge Config-
Digest-Snooping   : Disabled
TC or TCN received : 68
Time since last TC : 0 days 0h:29m:41s
...
-----[Port6(GigabitEthernet1/0/6)] [FORWARDING]-----
Port protocol      : Enabled
Port role          : Root Port
Port ID            : 128.6
Port cost(Legacy)  : Config=auto, Active=20
Desg.bridge/port   : 8192.009c-02d5-3980, 128.13
Port edged         : Config=disabled, Active=disabled
Point-to-Point     : Config=auto, Active=true
Transmit limit     : 10 packets/hello-time
TC-Restriction    : Disabled
Role-Restriction   : Disabled
Protection type   : Config=none, Active=none
MST BPDU format   : Config=auto, Active=802.1s
Port Config-
Digest-Snooping   : Disabled
Rapid transition   : True
Num of VLANs mapped: 1
Port times         : Hello 2s MaxAge 20s FwdDelay 15s MsgAge 0s RemHops 20
BPDU sent          : 2745
    TCN: 0, Config: 0, RST: 3, MST: 2742
BPDU received      : 5273
    TCN: 0, Config: 0, RST: 1426, MST: 3847
...
-----[Port9(GigabitEthernet1/0/9)] [FORWARDING]-----
Port protocol      : Enabled
Port role          : Designated Port
Port ID            : 160.9
Port cost(Legacy)  : Config=10000, Active=10000
Desg.bridge/port   : 16384.cc3e-5f73-bacb, 160.9
Port edged         : Config=enabled, Active=enabled
Point-to-Point     : Config=auto, Active=true
Transmit limit     : 10 packets/hello-time
TC-Restriction    : Disabled
Role-Restriction   : Disabled
Protection type   : Config=none, Active=none
MST BPDU format   : Config=auto, Active=802.1s
Port Config-
Digest-Snooping   : Disabled
Rapid transition   : True
Num of VLANs mapped: 0
Port times         : Hello 2s MaxAge 20s FwdDelay 15s MsgAge 0s RemHops 19
BPDU sent          : 5604
    TCN: 0, Config: 0, RST: 876, MST: 4728
BPDU received      : 0
    TCN: 0, Config: 0, RST: 0, MST: 0
...
-----[MSTI 1 Global Info]-----
Bridge ID          : 20480.cc3e-5f73-bacb

```

```

RegRoot ID/IRPC      : 8192.0023-89d5-a059, 20020
RootPort ID          : 128.6
Master bridge        : 8192.009c-02d5-3980
Cost to master      : 20
TC received          : 0

---- [Port6(GigabitEthernet1/0/6) ] [FORWARDING] ----
Port protocol        : Enabled
Port role            : Root Port
Port ID              : 128.6
Port cost(Legacy)   : Config=auto, Active=20
Desg.bridge/port    : 12288.009c-02d5-3980, 128.13
Protection type     : Config=none, Active=none
Rapid transition    : True
Num of VLANs mapped : 1
Port times          : RemHops 19

-----[MSTI 2 Global Info]-----
Bridge ID           : 8192.cc3e-5f73-bacb
RegRoot ID/IRPC    : 8192.cc3e-5f73-bacb, 0
RootPort ID         : 0.0
Master bridge       : 8192.009c-02d5-3980
Cost to master     : 20
TC received          : 0

---- [Port6(GigabitEthernet1/0/6) ] [FORWARDING] ----
Port protocol        : Enabled
Port role            : Designated Port
Port ID              : 128.6
Port cost(Legacy)   : Config=auto, Active=20
Desg.bridge/port    : 8192.cc3e-5f73-bacb, 128.6
Protection type     : Config=none, Active=none
Rapid transition    : True
Num of VLANs mapped : 1
Port times          : RemHops 20

---- [Port9(GigabitEthernet1/0/9) ] [FORWARDING] ----
Port protocol        : Enabled
Port role            : Designated Port
Port ID              : 128.9
Port cost(Legacy)   : Config=auto, Active=200
Desg.bridge/port    : 8192.cc3e-5f73-bacb, 128.9
Protection type     : Config=none, Active=none
Rapid transition    : True
Num of VLANs mapped : 1
Port times          : RemHops 20

-----[MSTI 3 Global Info]-----
Bridge ID           : 12288.cc3e-5f73-bacb
RegRoot ID/IRPC    : 8192.0022-91ab-4380, 20020
RootPort ID         : 128.6
Master bridge       : 8192.009c-02d5-3980
Cost to master     : 20
TC received          : 0

---- [Port6(GigabitEthernet1/0/6) ] [FORWARDING] ----
Port protocol        : Enabled
Port role            : Root Port
Port ID              : 128.6
Port cost(Legacy)   : Config=auto, Active=20
Desg.bridge/port    : 20480.009c-02d5-3980, 128.13
Protection type     : Config=none, Active=none
Rapid transition    : True

```

```
Num of VLANs mapped : 1
Port times          : RemHops 19
```

```
[Comware7]display stp brief
MST ID  Port                                Role  STP State  Protection
  0      GigabitEthernet1/0/1                  DESI   FORWARDING  NONE
  0      GigabitEthernet1/0/6                  ROOT   FORWARDING  NONE
  0      GigabitEthernet1/0/9                  DESI   FORWARDING  NONE
  1      GigabitEthernet1/0/6                  ROOT   FORWARDING  NONE
  2      GigabitEthernet1/0/6                  DESI   FORWARDING  NONE
  2      GigabitEthernet1/0/9                  DESI   FORWARDING  NONE
  3      GigabitEthernet1/0/6                  ROOT   FORWARDING  NONE
```

```
[Comware7]display stp region-configuration
Oper Configuration
  Format selector      : 0
  Region name         : ArubaOS-Switch-Comware-Cisco
  Revision level      : 1
  Configuration digest : 0xcee7f8d6e076e3201f92550cb1d2cb92
```

```
Instance  VLANs Mapped
  0        1 to 99, 101 to 219, 221 to 239, 241 to 4094
  1        220
  2        100
  3        240
```

```
[Comware7]display stp instance 0
-----[CIST Global Info] [Mode MSTP]-----
Bridge ID          : 16384.cc3e-5f73-bacb
Bridge times       : Hello 2s MaxAge 20s FwdDelay 15s MaxHops 20
Root ID/ERPC       : 8192.009c-02d5-3980, 0
RegRoot ID/IRPC    : 8192.009c-02d5-3980, 20
RootPort ID        : 128.6
BPDU-Protection    : Disabled
Bridge Config-
Digest-Snooping    : Disabled
TC or TCN received : 68
Time since last TC : 0 days 0h:34m:59s
...
-----[Port6(GigabitEthernet1/0/6)] [FORWARDING]-----
Port protocol      : Enabled
Port role          : Root Port
Port ID            : 128.6
Port cost(Legacy)  : Config=auto, Active=20
Desg.bridge/port   : 8192.009c-02d5-3980, 128.13
Port edged         : Config=disabled, Active=disabled
Point-to-Point     : Config=auto, Active=true
Transmit limit     : 10 packets/Hello-time
TC-Restriction     : Disabled
Role-Restriction   : Disabled
Protection type    : Config=none, Active=none
MST BPDU format   : Config=auto, Active=802.1s
Port Config-
Digest-Snooping    : Disabled
Rapid transition   : True
Num of VLANs mapped: 1
Port times         : Hello 2s MaxAge 20s FwdDelay 15s MsgAge 0s RemHops 20
BPDU sent          : 2904
          TCN: 0, Config: 0, RST: 3, MST: 2901
BPDU received      : 5431
```

```

TCN: 0, Config: 0, RST: 1426, MST: 4005
...
-----[Port9(GigabitEthernet1/0/9)] [FORWARDING]-----
Port protocol      : Enabled
Port role         : Designated Port
Port ID          : 160.9
Port cost(Legacy) : Config=10000, Active=10000
Desg.bridge/port   : 16384.cc3e-5f73-bacb, 160.9
Port edged        : Config=enabled, Active=enabled
Point-to-Point     : Config=auto, Active=true
Transmit limit    : 10 packets/hello-time
TC-Restriction    : Disabled
Role-Restriction   : Disabled
Protection type   : Config=none, Active=none
MST BPDU format   : Config=auto, Active=802.1s
Port Config-
Digest-Snooping    : Disabled
Rapid transition   : True
Num of VLANs mapped: 0
Port times        : Hello 2s MaxAge 20s FwdDelay 15s MsgAge 0s RemHops 19
BPDU sent         : 5763
      TCN: 0, Config: 0, RST: 876, MST: 4887
BPDU received     : 0
      TCN: 0, Config: 0, RST: 0, MST: 0
...
[Comware7]display stp instance 1
-----[MSTI 1 Global Info]-----
Bridge ID          : 20480.cc3e-5f73-bacb
RegRoot ID/IRPC    : 8192.0023-89d5-a059, 20020
RootPort ID        : 128.6
Master bridge      : 8192.009c-02d5-3980
Cost to master    : 20
TC received        : 0

-----[Port6(GigabitEthernet1/0/6)] [FORWARDING]-----
Port protocol      : Enabled
Port role         : Root Port
Port ID          : 128.6
Port cost(Legacy) : Config=auto, Active=20
Desg.bridge/port   : 12288.009c-02d5-3980, 128.13
Protection type   : Config=none, Active=none
Rapid transition   : True
Num of VLANs mapped: 1
Port times        : RemHops 19

[Comware7]display stp instance 2
-----[MSTI 2 Global Info]-----
Bridge ID          : 8192.cc3e-5f73-bacb
RegRoot ID/IRPC    : 8192.cc3e-5f73-bacb, 0
RootPort ID        : 0.0
Master bridge      : 8192.009c-02d5-3980
Cost to master    : 20
TC received        : 0

-----[Port6(GigabitEthernet1/0/6)] [FORWARDING]-----
Port protocol      : Enabled
Port role         : Designated Port
Port ID          : 128.6
Port cost(Legacy) : Config=auto, Active=20
Desg.bridge/port   : 8192.cc3e-5f73-bacb, 128.6

```

```

Protection type      : Config=none, Active=none
Rapid transition     : True
Num of VLANs mapped : 1
Port times          : RemHops 20

-----[Port9(GigabitEthernet1/0/9)] [FORWARDING]-----
Port protocol        : Enabled
Port role            : Designated Port
Port ID              : 128.9
Port cost(Legacy)   : Config=auto, Active=200
Desg.bridge/port    : 8192.cc3e-5f73-bacb, 128.9
Protection type      : Config=none, Active=none
Rapid transition     : True
Num of VLANs mapped : 1
Port times          : RemHops 20

```

Cisco

```

Cisco(config)#spanning-tree ?
  backbonefast  Enable BackboneFast Feature
  etherchannel  Spanning tree etherchannel specific configuration
  extend         Spanning Tree 802.1t extensions
  logging        Enable Spanning tree logging
  loopguard      Spanning tree loopguard options
  mode           Spanning tree operating mode
  mst            Multiple spanning tree configuration
  pathcost       Spanning tree pathcost options
  portfast       Spanning tree portfast options
  transmit       STP transmit parameters
  uplinkfast     Enable UplinkFast Feature
  vlan           VLAN Switch Spanning Tree

Cisco(config)#spanning-tree mode ?
  mst            Multiple spanning tree mode
  pvst           Per-Vlan spanning tree mode
  rapid-pvst     Per-Vlan rapid spanning tree mode

Cisco(config)#spanning-tree mode mst

Cisco(config)#spanning-tree mst configuration

Cisco(config-mst)#?
  abort          Exit region configuration mode, aborting changes
  exit           Exit region configuration mode, applying changes
  instance       Map vlans to an MST instance
  name           Set configuration name
  no             Negate a command or set its defaults
  private-vlan   Set private-vlan synchronization
  revision       Set configuration revision number
  show           Display region configurations

Cisco(config-mst)#name ArubaOS-Switch-Comware-Cisco

Cisco(config-mst)#revision 1

Cisco(config-mst)# instance 1 vlan 220

Cisco(config-mst)# instance 2 vlan 100

Cisco(config-mst)# instance 3 vlan 240

Cisco(config)#spanning-tree mst 0 priority 20480
  (note - increments of 4096, default setting is 32768)

```

```

Cisco(config)#spanning-tree mst 1 priority 16384
  (note - increments of 4096, default setting is 32768)

Cisco(config)#spanning-tree mst 2 priority 12288
  (note - increments of 4096, default setting is 32768)

Cisco(config)#spanning-tree mst 3 priority 8192
  (note - increments of 4096, default setting is 32768)

Cisco(config)#interface g1/0/9

Cisco(config-if)#spanning-tree ?
  bpdudfilter      Don't send or receive BPDU's on this interface
  bpduguard        Don't accept BPDU's on this interface
  cost             Change an interface's spanning tree port path cost
  guard            Change an interface's spanning tree guard mode
  link-type        Specify a link type for spanning tree protocol use
  mst              Multiple spanning tree
  port-priority    Change an interface's spanning tree port priority
  portfast          Enable an interface to move directly to forwarding on link up
  stack-port       Enable stack port
  vlan             VLAN Switch Spanning Tree

Cisco(config-if)#spanning-tree portfast

Cisco(config-if)#spanning-tree cost 10000

Cisco(config-if)#spanning-tree port-priority 160
  (note - increments of 16, default setting is 128)

Cisco(config-if)#spanning-tree mst 1 cost 10000

Cisco(config-if)#spanning-tree mst 1 port-priority 160
  (note - increments of 16, default setting is 128)

Cisco#show spanning-tree ?
  active           Report on active interfaces only
  backbonefast    Show spanning tree backbonefast status
  blockedports    Show blocked ports
  bridge          Status and configuration of this bridge
  detail          Detailed information
  inconsistentports Show inconsistent ports
  interface        Spanning Tree interface status and configuration
  mst              Multiple spanning trees
  pathcost         Show Spanning pathcost options
  root             Status and configuration of the root bridge
  summary          Summary of port states
  uplinkfast      Show spanning tree uplinkfast status
  vlan             VLAN Switch Spanning Trees
  |
  <cr>

Cisco#show spanning-tree

MST0
  Spanning tree enabled protocol mstp
  Root ID    Priority     8192
  Address    009c.02d5.3980
  Cost       0
  Port       6 (GigabitEthernet1/0/6)
  Hello Time 2 sec  Max Age 20 sec  Forward Delay 15 sec

```

Bridge ID	Priority	20480 (priority 20480 sys-id-ext 0)
	Address	0022.91ab.4380
	Hello Time	2 sec Max Age 20 sec Forward Delay 15 sec

Interface	Role	Sts	Cost	Prio.Nbr	Type
<hr/>					
Gi1/0/1	Desg	FWD	20000	128.1	P2p
Gi1/0/6	Root	FWD	20000	128.6	P2p
Gi1/0/9	Desg	FWD	10000	160.9	P2p Edge

MST1

Spanning tree enabled protocol mstp
Root ID Priority 8193
Address 0023.89d5.a059
Cost 40000
Port 6 (GigabitEthernet1/0/6)
Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec

Bridge ID Priority 16385 (priority 16384 sys-id-ext 1)
Address 0022.91ab.4380
Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec

Interface	Role	Sts	Cost	Prio.Nbr	Type
<hr/>					
Gi1/0/6	Root	FWD	20000	128.6	P2p

MST2

Spanning tree enabled protocol mstp
Root ID Priority 8194
Address cc3e.5f73.bacb
Cost 40000
Port 6 (GigabitEthernet1/0/6)
Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec

Bridge ID Priority 12290 (priority 12288 sys-id-ext 2)
Address 0022.91ab.4380
Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec

Interface	Role	Sts	Cost	Prio.Nbr	Type
<hr/>					
Gi1/0/6	Root	FWD	20000	128.6	P2p
Gi1/0/9	Desg	FWD	10000	160.9	P2p Edge

MST3

Spanning tree enabled protocol mstp
Root ID Priority 8195
Address 0022.91ab.4380
This bridge is the root
Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec

Bridge ID Priority 8195 (priority 8192 sys-id-ext 3)
Address 0022.91ab.4380
Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec

Interface	Role	Sts	Cost	Prio.Nbr	Type
<hr/>					

```
Gi1/0/6      Desg FWD 20000    128.6    P2p
```

```
Cisco#show spanning-tree mst
```

```
##### MST0 vlans mapped: 1-99,101-219,221-239,241-4094
Bridge      address 0022.91ab.4380 priority      20480 (20480 sysid 0)
Root        address 009c.02d5.3980 priority      8192 (8192 sysid 0)
            port Gi1/0/6   path cost      0
Regional Root address 009c.02d5.3980 priority      8192 (8192 sysid 0)
                  internal cost 20000     rem hops 19
Operational  hello time 2 , forward delay 15, max age 20, txholdcount 6
Configured   hello time 2 , forward delay 15, max age 20, max hops 20
```

Interface	Role	Sts	Cost	Prio.Nbr	Type
Gi1/0/1	Desg	FWD	20000	128.1	P2p
Gi1/0/6	Root	FWD	20000	128.6	P2p
Gi1/0/9	Desg	FWD	10000	160.9	P2p Edge

```
##### MST1 vlans mapped: 220
Bridge      address 0022.91ab.4380 priority      16385 (16384 sysid 1)
Root        address 0023.89d5.a059 priority      8193 (8192 sysid 1)
            port Gi1/0/6   cost          40000     rem hops 18
```

Interface	Role	Sts	Cost	Prio.Nbr	Type
Gi1/0/6	Root	FWD	20000	128.6	P2p

```
##### MST2 vlans mapped: 100
Bridge      address 0022.91ab.4380 priority      12290 (12288 sysid 2)
Root        address cc3e.5f73.bacb priority      8194 (8192 sysid 2)
            port Gi1/0/6   cost          40000     rem hops 18
```

Interface	Role	Sts	Cost	Prio.Nbr	Type
Gi1/0/6	Root	FWD	20000	128.6	P2p
Gi1/0/9	Desg	FWD	10000	160.9	P2p Edge

```
##### MST3 vlans mapped: 240
Bridge      address 0022.91ab.4380 priority      8195 (8192 sysid 3)
Root        this switch for MST3
```

Interface	Role	Sts	Cost	Prio.Nbr	Type
Gi1/0/6	Desg	FWD	20000	128.6	P2p

```
Cisco#show spanning-tree mst configuration
```

```
Name      [ArubaOS-Switch-Comware-Cisco]
Revision  1      Instances configured 4
```

```
Instance  Vlans mapped
```

0	1-99,101-219,221-239,241-4094
1	220
2	100
3	240

```
Cisco#show spanning-tree mst 0
```

```

##### MST0    vlans mapped:  1-99,101-219,221-239,241-4094
Bridge      address 0022.91ab.4380  priority      20480 (20480 sysid 0)
Root        address 009c.02d5.3980  priority      8192 (8192 sysid 0)
            port   Gi1/0/6       path cost      0
Regional Root address 009c.02d5.3980  priority      8192 (8192 sysid 0)
                  internal cost 20000     rem hops 19
Operational   hello time 2 , forward delay 15, max age 20, txholdcount 6
Configured    hello time 2 , forward delay 15, max age 20, max hops 20

```

Interface	Role	Sts	Cost	Prio.Nbr	Type
Gi1/0/1	Desg	FWD	20000	128.1	P2p
Gi1/0/6	Root	FWD	20000	128.6	P2p
Gi1/0/9	Desg	FWD	10000	160.9	P2p Edge

Cisco#show spanning-tree mst 1

```

##### MST1    vlans mapped:  220
Bridge      address 0022.91ab.4380  priority      16385 (16384 sysid 1)
Root        address 0023.89d5.a059  priority      8193 (8192 sysid 1)
            port   Gi1/0/6       cost          40000     rem hops 18

```

Interface	Role	Sts	Cost	Prio.Nbr	Type
Gi1/0/6	Root	FWD	20000	128.6	P2p

Cisco#show spanning-tree mst 3

```

##### MST3    vlans mapped:  240
Bridge      address 0022.91ab.4380  priority      8195 (8192 sysid 3)
Root        this switch for MST3

```

Interface	Role	Sts	Cost	Prio.Nbr	Type
Gi1/0/6	Desg	FWD	20000	128.6	P2p

Chapter 11 VRRP

This chapter compares the commands used to configure Virtual Router Redundancy Protocol (VRRP). Cisco supports VRRP and Hot Standby Router Protocol (HSRP), HSRP is not compatible with VRRP.

In many networks, edge devices are often configured to send packets to a statically configured default router. If this router becomes unavailable, the devices that use it as their first-hop router become isolated from the network. VRRP, which is based on RFC 5798, uses dynamic failover to ensure the availability of an end node's default router. This is done by assigning the IP address used as the default route to a "virtual router," or VR.

On a given VLAN, a VR includes two or more member routers that you configure with a virtual IP address that is the default gateway's IP address. The VR includes an owner router assigned to forward traffic designated for the virtual router (If the owner is forwarding traffic for the VR, it is the master router for that VR) and one or more prioritized backup routers (If a backup is forwarding traffic for the VR, it has replaced the owner as the master router for that VR.)

VRRP CLI Comparison

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
Configuration commands			
router vrrp disable router vrrp enable	router vrrp ipv4 enable	interface Vlan- interface 100	
interface vlan 2	vlan 220	vrrp vrid 100 virtual-ip 10.1.100.1	interface vlan 100
vlan 2 interface vlan 2 vrrp 2 address- family ipv4 address 10.1.100.1	vrrp vrid 220 virtual-ip-address 10.1.220.1	vrrp vrid 100 priority 254	vrrp 100 ip 10.1. 100.1
priority 2	priority 254	vrrp version 2	vrrp 100 priority 100
vrrp 2 address- family ipv4 no shutdown	enable		
Show/display commands			
do show vrrp detail	show vrrp	display vrrp verbose	show vrrp
		display vrrp	show vrrp brief
do show vrrp statistics	show vrrp vlan 220	display vrrp interface vlan 100 verbose	show vrrp interface vlan 100

VRRP CLI Configurable options

ArubaOS-CX-Switch

```
ArubaOS-CX-Switch(config)# router
  bgp          BGP specific commands
  graceful-restart Configure graceful restart for routing process
  ospf         Configure OSPF or enter the OSPF configuration context
  ospfv3       Configure OSPFv3 or enter the OSPFv3 configuration context.
  pim          Configure PIM, or enter PIM configuration context
  vrrp         VRRP information

ArubaOS-CX-Switch(config)# router vrrp
  disable     Disable VRRP
  enable      Enable VRRP

ArubaOS-CX-Switch(config)# router vrrp disable
<cr>

ArubaOS-CX-Switch(config)# router vrrp disable

ArubaOS-CX-Switch(config)# router vrrp enable
<cr>

ArubaOS-CX-Switch(config)# router vrrp enable

ArubaOS-CX-Switch(config)# vlan 1-4094

ArubaOS-CX-Switch(config)# vlan 2

ArubaOS-CX-Switch(config-vlan-2)#
  end        End current mode and change to enable mode.
  exit       Exit current mode and change to previous mode
  ip         IP information
  list       Print command list
  name       VLAN ASCII String
  no         Negate a command or set its defaults
  shutdown   Disable the VLAN

ArubaOS-CX-Switch(config-vlan-2) # exit

ArubaOS-CX-Switch(config)# interface vlan 2
<cr>

ArubaOS-CX-Switch(config)# interface vlan 2

ArubaOS-CX-Switch(config-if-vlan)# vrrp
  <1-255>  VRRP virtual router ID between 1-255

ArubaOS-CX-Switch(config-if-vlan)# vrrp 2
  address-family IP address family

ArubaOS-CX-Switch(config-if-vlan)# vrrp 2 address-family
  ipv4  Address family IPv4
  ipv6  Address family IPv6

ArubaOS-CX-Switch(config-if-vlan)# vrrp 2 address-family ipv
  ipv4  Address family IPv4
  ipv6  Address family IPv6

ArubaOS-CX-Switch(config-if-vlan)# vrrp 2 address-family ipv4
<cr>
```

```

ArubaOS-CX-Switch(config-if-vlan)# vrrp 2 address-family ipv4

ArubaOS-CX-Switch(config-if-vrrp)#
address    VRRP virtual router address
end        End current mode and change to enable mode
exit       Exit current mode and change to previous mode
list       Print command list
no         Negate a command or set its defaults
preempt   VRRP virtual router preempt mode (default is enabled)
priority  VRRP virtual router priority
shutdown  Disable VRRP virtual router
timers    VRRP timers
track     Track information (supported for non-owner virtual router)
version   VRRP virtual router version (default 2 for IPv4)

ArubaOS-CX-Switch(config-if-vrrp)# address
A.B.C.D   IP information
A:B::C:D  IPv6 information

ArubaOS-CX-Switch(config-if-vrrp)# address 10.0.0.2
primary    Primary address
secondary  Secondary address
ArubaOS-CX-Switch(config-if-vrrp)# address 10.0.0.2
primary    Primary address
secondary  Secondary address

ArubaOS-CX-Switch(config-if-vrrp)# address 10.0.0.2 primary
<cr>

ArubaOS-CX-Switch(config-if-vrrp)# address 10.0.0.2 primary
Specified address or subnet not found on the interface.

ArubaOS-CX-Switch(config-if-vrrp)# priority
<1-254>  Specify VRRP virtual router priority

ArubaOS-CX-Switch(config-if-vrrp)# priority 2
<cr>

ArubaOS-CX-Switch(config-if-vrrp)# priority 2

ArubaOS-CX-Switch(config-if-vrrp)# no shutdown
Primary IP address is not configured on this interface vlan2

ArubaOS-CX-Switch(config-if-vrrp)# do show vrrp
<1-255>    VRRP virtual router ID between 1-255
brief      Brief information
detail     Detail information
interface  Interface information
ipv4      Address family IPv4
ipv6      Address family IPv6
statistics Statistics information
<cr>

ArubaOS-CX-Switch(config-if-vrrp)# do show vrrp detail

VRRP is enabled

Interface vlan2 - VRPPv2 Statistics
  Invalid group ID packet received : 0
  Invalid version packet received : 0
  Invalid checksum packet received : 0

Interface vlan2 - VRPPv3 Statistics

```

```

Invalid group ID packet received : 0
Invalid version packet received : 0
Invalid checksum packet received : 0

Interface vlan2 - Group 2 - Address-Family IPv4
  State is None
  State duration
  Virtual IP address is no address
  Advertisement interval is 1000 msec
  Version is 2
  Preemption is enabled
    min delay is 0 sec
  Priority is 2
  Master Router is unknown
  Master Advertisement interval is 1000 msec
  Master Down interval is 3992 msec
  VRRPv3 Advertisements: sent 0(error 0) - rcvd 0
  VRRPv2 Advertisements: sent 0(error 0) - rcvd 0
  Group Discarded Packets: 0
    IP address owner conflicts: 0
    IP address configuration mismatch: 0
    Advert interval errors: 0
    Adverts received in Init state: 0
    Invalid group other reason:0
  Group State transition:
    Init to master:0
    Init to backup:0
    Backup to master:0
    Master to backup:0
    Master to init:0
    Backup to init:0

```

```

ArubaOS-CX-Switch(config-if-vrrp)# do show vrrp
<1-255>      VRRP virtual router ID between 1-255
brief          Brief information
detail         Detail information
interface      Interface information
ipv4           Address family IPv4
ipv6           Address family IPv6
statistics     Statistics information
<cr>

```

```
ArubaOS-CX-Switch(config-if-vrrp)# do show vrrp statistics
```

VRRP is enabled

```

Interface vlan2 - VRRPv2 Statistics
  Invalid group ID packet received : 0
  Invalid version packet received : 0
  Invalid checksum packet received : 0

```

```

Interface vlan2 - VRRPv3 Statistics
  Invalid group ID packet received : 0
  Invalid version packet received : 0
  Invalid checksum packet received : 0

```

```

VRRP Statistics for interface vlan2 - Group 2 - Address-Family IPv4
  State is INIT (Interface Down)
  State duration
  VRRPv3 Advertisements: sent 0(error 0) - rcvd 0
  VRRPv2 Advertisements: sent 0(error 0) - rcvd 0
  Group Discarded Packets: 0
    IP address owner conflicts: 0

```

```

IP address configuration mismatch: 0
Advert interval errors: 0
Adverts received in Init state: 0
Invalid group other reason:0
Group State transition:
  Init to master:0
  Init to backup:0
  Backup to master:0
  Master to backup:0
  Master to init:0
  Backup to init:0

ArubaOS-CX-Switch(config)# track 1

ArubaOS-CX-Switch(config)# track by 1

ArubaOS-CX-Switch(config)# interface 1/1/1

ArubaOS-CX-Switch(config-if)# track by 1

ArubaOS-CX-Switch(config-if-vrrp)# version
version  VRRP virtual router version (default 2 for IPv4)

ArubaOS-CX-Switch(config-if-vrrp)# version
<2-3>  Specify VRRP virtual router version

ArubaOS-CX-Switch(config-if-vrrp)# version 3

ArubaOS-CX-Switch(config-if-vrrp)# timers advertise
<100-40950>  Specify timer value in milliseconds

ArubaOS-CX-Switch(config-if-vrrp)# timers advertise 2000
<cr>

```

ArubaOS-Switch

```

ArubaOS-Switch(config)# router vrrp

ArubaOS-Switch(vrrp) # ?
  ipv4          Configure VRRP for IPv4 virtual routers.
  ipv6          Configure VRRP for IPv6 virtual routers.
  traps         Enable/disable sending SNMP traps for the following situations:
    'New Master' - Sent when the switch transitions to the 'Master'
    state.
  virtual-ip-ping If disabled, globally prevents a response to ping requests to the
                  virtual router IP addresses configured on all backup routers.

ArubaOS-Switch(vrrp) # ipv4 ?
  disable        Disable VRRP globally.
  enable         Enable VRRP globally.

ArubaOS-Switch(vrrp) # ipv4 enable

ArubaOS-Switch(vrrp) # vlan 220

ArubaOS-Switch(vlan-220) # vrrp vrid 220

ArubaOS-Switch(vlan-220-vrid-220) # virtual-ip-address 10.1.220.1

ArubaOS-Switch(vlan-220-vrid-220) # priority 254

```

```
ArubaOS-Switch(vlan-220-vrid-220) # enable

ArubaOS-Switch# show vrrp

VRRP Global Statistics Information

VRRP Enabled : Yes
Invalid VRID Pkts Rx : 0
Checksum Error Pkts Rx : 0
Bad Version Pkts Rx : 0
Virtual Routers Respond To Ping Requests : No
```

VRRP Virtual Router Statistics Information

Vlan ID	:	220
Virtual Router ID	:	220
Protocol Version	:	2
State	:	Master
Up Time	:	10 mins
Virtual MAC Address	:	00005e-0001dc
Master's IP Address	:	10.1.220.10
Associated IP Addr Count	:	1 Near Failovers : 0
Advertise Pkts Rx	:	13 Become Master : 2
Zero Priority Rx	:	0 Zero Priority Tx : 0
Bad Length Pkts	:	0 Bad Type Pkts : 0
Mismatched Interval Pkts	:	0 Mismatched Addr List Pkts : 0
Mismatched IP TTL Pkts	:	0 Mismatched Auth Type Pkts : 0

```
ArubaOS-Switch# show vrrp vlan 220
```

VRRP Virtual Router Statistics Information

Vlan ID	:	220
Virtual Router ID	:	220
Protocol Version	:	2
State	:	Master
Up Time	:	12 mins
Virtual MAC Address	:	00005e-0001dc
Master's IP Address	:	10.1.220.10
Associated IP Addr Count	:	1 Near Failovers : 0
Advertise Pkts Rx	:	13 Become Master : 2
Zero Priority Rx	:	0 Zero Priority Tx : 0
Bad Length Pkts	:	0 Bad Type Pkts : 0
Mismatched Interval Pkts	:	0 Mismatched Addr List Pkts : 0
Mismatched IP TTL Pkts	:	0 Mismatched Auth Type Pkts : 0

Comware7

```
[Comware7] interface Vlan-interface 100

[Comware7-Vlan-interface100]vrrp ?
  check-ttl  Enable TTL check on VRRP packets
  dot1q     Specify a VRRP control VLAN
  ipv6      Specify IPv6 Virtual Router
  version   Specify version of VRRP
  vrid      Specify the virtual router by its identifier

[Comware7-Vlan-interface100]vrrp vrid ?
  INTEGER<1-255>  Virtual router identifier

[Comware7-Vlan-interface100]vrrp vrid 100 ?
```

```

authentication-mode  Configure authentication mode and authentication key
preempt-mode        Enable preemption on the router
priority            Configure the priority of the router
shutdown            Shut down the virtual router
source-interface    Specify the source interface for the VRRP group
timer               Configure the value of the timer
track               Associate a track entry with the VRRP group to control
                    master switchover in the VRRP group according to the
                    state change of the track entry
virtual-ip          Assign an virtual IP address to the virtual router

[Comware7-Vlan-interface100]vrrp vrid 100 virtual-ip 10.1.100.1 ?
<cr>

[Comware7-Vlan-interface100]vrrp vrid 100 virtual-ip 10.1.100.1

[Comware7-Vlan-interface100]vrrp vrid 100 priority ?
INTEGER<1-254> Priority value

[Comware7-Vlan-interface100]vrrp vrid 100 priority 254

[Comware7-Vlan-interface100]vrrp ?
check-ttl           Enable TTL check on VRRP packets
dot1q              Specify a VRRP control VLAN
ipv6               Specify IPv6 Virtual Router
version             Specify version of VRRP
vrid               Specify the virtual router by its identifier

[Comware7-Vlan-interface100]vrrp version ?
INTEGER<2-3> Version of VRRP

[Comware7-Vlan-interface100]vrrp version 2

[Comware7]display vrrp ?
>                 Redirect it to a file
>>                Redirect it to a file in append mode
interface          Specify the interface
ipv6              Specify IPv6 Virtual Router
statistics         VRRP statistics
verbose            Verbose information
|                 Matching output
<cr>

[Comware7]display vrrp verbose
IPv4 Virtual Router Information:
Running mode       : Standard
Total number of virtual routers : 1
Interface Vlan-interface100
  VRID      : 100          Adver Timer : 100
  Admin Status : Up         State      : Master
  Config Pri   : 254        Running Pri : 254
  Preempt Mode : Yes       Delay Time  : 0
  Auth Type    : None
  Virtual IP   : 10.1.100.1
  Virtual MAC   : 0000-5e00-0164
  Master IP     : 10.1.100.5

[Comware7]display vrrp
IPv4 Virtual Router Information:

```

```

Running mode      : Standard
Total number of virtual routers : 1
Interface        VRID  State       Running Adver   Auth     Virtual
                  Pri    Timer     Type     IP
-----
Vlan100          100   Master     254      100     None    10.1.100.1

[Comware7]display vrrp interface Vlan-interface 100 verbose
IPv4 Virtual Router Information:
Running mode      : Standard
Total number of virtual routers on interface Vlan-interface100 : 1
Interface Vlan-interface100
  VRID      : 100           Adver Timer : 100
  Admin Status : Up          State      : Master
  Config Pri  : 254          Running Pri : 254
  Preempt Mode: Yes         Delay Time : 0
  Auth Type   : None
  Virtual IP  : 10.1.100.1
  Virtual MAC : 0000-5e00-0164
  Master IP   : 10.1.100.5

```

Cisco

```

Cisco(config)#interface vlan 100

Cisco(config-if)#?
Interface configuration commands:
  aaa                      Authentication, Authorization and Accounting.
  arp                      Set arp type (arpa, probe, snap) or timeout or log
                           options
  bandwidth                Set bandwidth informational parameter
  bgp-policy               Apply policy propagated by bgp community string
  carrier-delay             Specify delay for interface transitions
  cdp                      CDP interface subcommands
  cts                      Configure Cisco Trusted Security
  dampening                Enable event dampening
  datalink                 Interface Datalink commands
  default                  Set a command to its defaults
  delay                    Specify interface throughput delay
  description               Interface specific description
  eou                      EAPoUDP Interface Configuration Commands
  exit                     Exit from interface configuration mode
  flow-sampler              Attach flow sampler to the interface
  help                     Description of the interactive help system
  history                  Interface history histograms - 60 second, 60 minute
                           and 72 hour
  hold-queue               Set hold queue depth
  ip                       Interface Internet Protocol config commands
  link                     Configure Link
  load-interval             Specify interval for load calculation for an
                           interface
  logging                  Configure logging for interface
  loopback                 Configure internal loopback on an interface
  macro                    Command macro
  max-reserved-bandwidth   Maximum Reservable Bandwidth on an Interface
  mka                      MACsec Key Agreement (MKA) interface configuration
  neighbor                 interface neighbor configuration mode commands
  network-policy            Network Policy
  nmsp                     NMSP interface configuration
  no                      Negate a command or set its defaults
  ntp                      Configure NTP
  private-vlan              Configure private VLAN SVI interface settings
  rate-limit                Rate Limit

```

routing	Per-interface routing configuration
service-policy	Configure CPL Service Policy
shutdown	Shutdown the selected interface
snmp	Modify SNMP interface parameters
source	Get config from another source
spanning-tree	Spanning Tree Subsystem
standby	HSRP interface configuration commands
timeout	Define timeout values for this interface
topology	Configure routing topology on the interface
traffic-shape	Enable Traffic Shaping on an Interface or Sub-Interface
vrrp	VRRP Interface configuration commands
vtp	Enable VTP on this interface

```

Cisco(config-if)#vrrp ?
<1-255> Group number

Cisco(config-if)#vrrp 100 ?
authentication Authentication string
description Group specific description
ip           Enable Virtual Router Redundancy Protocol (VRRP) for IP
preempt      Enable preemption of lower priority Master
priority     Priority of this VRRP group
timers       Set the VRRP timers
track        Event Tracking

Cisco(config-if)#vrrp 100 ip ?
A.B.C.D  VRRP group IP address

Cisco(config-if)#vrrp 100 ip 10.1.100.1 ?
secondary   Specify an additional VRRP address for this group
<cr>

Cisco(config-if)#vrrp 100 ip 10.1.100.1

Cisco(config-if)#vrrp 100 priority ?
<1-254> Priority level

Cisco(config-if)#vrrp 100 priority 100 ?
<cr>

Cisco(config-if)#vrrp 100 priority 100

Cisco#show vrrp ?
all          Include groups in disabled state
brief        Brief output
interface    VRRP interface status and configuration
|           Output modifiers
<cr>

Cisco#show vrrp
Vlan100 - Group 100
State is Backup
Virtual IP address is 10.1.100.1
Virtual MAC address is 0000.5e00.0164
Advertisement interval is 1.000 sec
Preemption enabled
Priority is 101
Master Router is 10.1.100.5, priority is 254
Master Advertisement interval is 1.000 sec

```

```
Master Down interval is 3.605 sec (expires in 3.043 sec)

Cisco#show vrrp brief
Interface      Grp Pri Time  Own Pre State    Master addr      Group addr
V1100          100 101 3605       Y  Backup   10.1.100.5      10.1.100.1

Cisco#show vrrp interface vlan 100
Vlan100 - Group 100
  State is Backup
  Virtual IP address is 10.1.100.1
  Virtual MAC address is 0000.5e00.0164
  Advertisement interval is 1.000 sec
  Preemption enabled
  Priority is 101
  Master Router is 10.1.100.5, priority is 254
  Master Advertisement interval is 1.000 sec
  Master Down interval is 3.605 sec (expires in 2.909 sec)
```

Chapter 12 ACLs

This chapter compares the commands for configuring access control lists (ACLs).

An ACL is a list of one or more access control entries (ACEs) specifying the criteria the switch uses to either permit (forward) or deny (drop) the IP packets traversing the switch's interfaces.

This chapter covers ACL basics, creating ACLs, applying ACLs for routing/Layer 3 operations, applying ACLs for VLAN/Layer 2 operations, and applying ACLs for port/interface controls.

When using these commands, keep in mind:

- On ArubaOS-Switch and Cisco, ACLs include an Implicit Deny as the last ACE. If traffic does not match an ACL rule, it is denied (or dropped).

Access Control Lists ('ACLs') allow a network administrator to define sets of rules based on network traffic addressing or other header content, and to use these rules to restrict, alter or log the passage of traffic through the switch. Choosing the rule criteria is called Classification, and one such rule set, or list, is called an Access Control List.

There are 3 classes of ACL - MAC, IPv4 and IPv6 - which are each focused on relevant frame/packet characteristics. ACLs can be configured to match on almost any frame or packet header field and then take an appropriate action.

Network traffic passing through a switch can be blocked, permitted, counted, or reprioritized based on many different frame/packet characteristics including, but not limited to:

- Frame ingress VLAN ID
- Source and/or destination Ethernet MAC, IPv4 or IPv6 address
- Layer 2 (EtherType) and Layer 3 (IP) protocol
- Layer 4 application port(s)

Different ACLs of the same type can be used in opposite directions. If an ACL of a particular type is applied in a direction that is already in use, the current ACL will be replaced by the new ACL. An ACL contains one or more 'Access Control Entries' ('ACE') which are listed according to priority by sequence number. A single ACE matches on one or more characteristics of the particular traffic type and has a configured action to either discard or allow the packet to continue through the switch. This occurs by, beginning with the ACE with the lowest sequence number, comparing the incoming or outgoing frame to its particular match characteristics and if there is a match, the ACE's action - either permit or deny - is taken. If there is no match, the match characteristics of the next ACE in sequence is compared to the relevant frame/packet details and if there's a match the specified action is taken.

ACL CLI Comparison

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
Configuration commands			
<pre>access-list ip My_ip_ACL 10 permit udp any 172.16.1.0/24 20 permit tcp 172.16.2.0/16 gt 1023 any 30 permit tcp 172.26.1.0/24 any syn ack dscp 10 25 permit icmp 172.16.2.0/16 any 40 deny any any any count 20 comment Permit all TCP ephemeral ports access-list ip My_ip_ACL resequence 1 1 20 comment Permit all TCP ephemeral ports 25 permit icmp 10.0.0.1/24 10.0.0.2 25 permit icmp 10.0.0.1/24 10.0.0.2 dscp AF32 vla 2</pre>	<pre>ip access-list standard <1-99> permit 10.0.100.111/32 ! ip access-list standard <std acl> permit 10.0.100.111/32 deny 10.1.100.0/24 ! ArubaOS-Sw(eth-1)# ip access-group 100 in ArubaOS-Sw(eth-1)# ip access-group 100 out ArubaOS-Sw(eth-1)# ipv6 access-group test in ArubaOS-Sw(eth-1)# ipv6 access-group test out</pre>	<pre>access-list number 2000 rule 1 permit source 10.0.100.111 0.0.0.0 rule 2 permit source 10.0.200.222 0 interface Vlan- interface 220 packet-filter 2000 inbound ! interface Vlan- interface 100 packet-filter 2001 inbound</pre>	<pre>ip access-list standard 1 permit 10.0.100.111 0.0.0.0 ! ip access-list extended std_acl permit 10.0.100.111 0.0.0.0 deny ip 10.1.100.0 0.0.0.255 10.0.100.111 0.0.0.0 permit ip any any object-group network object-group-name host {host-address host-name} interface <L3Interface> ip access-group <ACL> in interface <L3Interface> ip access-group <ACL> out</pre>
Show/display commands			
show access-list	show access-list	display acl all	show ip access-lists

ACL CLI Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch(config)# access-list ip my_list
ArubaOS-CX-Switch(config-acl-ip)# 10 comment Set a text comment for a new or existing ACL entry deny Deny packets matching this ACE permit Permit packets matching this ACE
ArubaOS-CX-Switch(config-acl-ip)# 10 permit <0-255> Specify numeric protocol value ah Authenticated header any Any internet protocol number esp Encapsulation security payload gre Generic routing encapsulation icmp Internet control message protocol igmp Internet group management protocol ospf Open Shortest Path First (version 2) pim Protocol independent multicast

```

sctp      Stream control transmission protocol
tcp       Transmission control protocol
udp       User datagram protocol

ArubaOS-CX-Switch(config-acl-ip) # 10 permit udp
    A.B.C.D          Specify source IP host address
    A.B.C.D/M        Specify source IP network address with prefix length
    A.B.C.D/W.X.Y.Z Specify source IP network address with network mask
    any              Any source IP address

ArubaOS-CX-Switch(config-acl-ip) # 10 permit udp any
    A.B.C.D          Specify destination IP host address
    A.B.C.D/M        Specify destination IP network address with prefix length
    A.B.C.D/W.X.Y.Z Specify destination IP network address with network mask
    any              Any destination IP address
    eq               Layer 4 source port equal to
    gt               Layer 4 source port greater than
    lt               Layer 4 source port less than
    range           Layer 4 source port range

ArubaOS-CX-Switch(config-acl-ip) # 10 permit udp any 172.16.1.0/24
    count            Count packets matching this entry
    dscp             Specify a Differentiated Services Code Point value.
    ecn              Specify an Explicit Congestion Notification value.
    eq               Layer 4 destination port equal to
    fragment         Specify a fragment packet.
    gt               Layer 4 destination port greater than
    ip-precedence   Specify an IP Precedence value.
    log              Log packets matching this entry (will also enable 'count')
    lt               Layer 4 destination port less than
    range           Layer 4 destination port range
    tos              Specify a Type of Service value.
    ttl              Specify a time-to-live value.
    vlan             Specify VLAN tag to match on.
    <cr>

ArubaOS-CX-Switch(config-acl-ip) # 10 permit udp any 172.16.1.0/24

ArubaOS-CX-Switch(config-acl-ip) # do show access-list
    commands         Format output as CLI commands
    configuration   Display user-specified configuration
    hitcounts       Hit counts (statistics)
    interface        Specify interface
    ip               Internet Protocol v4 (IPv4)
    ipv6            Internet Protocol v6 (IPv6)
    log-timer        Display ACL log timer length (frequency)
    mac              Ethernet MAC Protocol
    <cr>

ArubaOS-CX-Switch(config-acl-ip) # do show access-list
    Type      Name
    Sequence Comment
        Action          L3 Protocol
        Source IP Address  Source L4 Port(s)
        Destination IP Address Destination L4 Port(s)
        Additional Parameters
    -----
    IPv4      my_list
        10 permit          udp
        any
        172.16.1.0/255.255.255.0

```

```

ArubaOS-CX-Switch(config-acl-ip)# 20 comment
TEXT Comment text

ArubaOS-CX-Switch(config-acl-ip)# 20 comment Permit all TCP ephemeral ports

ArubaOS-CX-Switch(config-acl-ip)# 25 permit
<0-255> Specify numeric protocol value
ah Authenticated header
any Any internet protocol number
esp Encapsulation security payload
gre Generic routing encapsulation
icmp Internet control message protocol
igmp Internet group management protocol
ospf Open Shortest Path First (version 2)
pim Protocol independent multicast
sctp Stream control transmission protocol
tcp Transmission control protocol
udp User datagram protocol

ArubaOS-CX-Switch(config-acl-ip)# 25
comment Set a text comment for a new or existing ACL entry
deny Deny packets matching this ACE
permit Permit packets matching this ACE

ArubaOS-CX-Switch(config-acl-ip)# 25 permit
<0-255> Specify numeric protocol value
ah Authenticated header
any Any internet protocol number
esp Encapsulation security payload
gre Generic routing encapsulation
icmp Internet control message protocol
igmp Internet group management protocol
ospf Open Shortest Path First (version 2)
pim Protocol independent multicast
sctp Stream control transmission protocol
tcp Transmission control protocol
udp User datagram protocol

ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp
A.B.C.D Specify source IP host address
A.B.C.D/M Specify source IP network address with prefix length
A.B.C.D/W.X.Y.Z Specify source IP network address with network mask
any Any source IP address

ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp 10.0.0.1/24
A.B.C.D Specify destination IP host address
A.B.C.D/M Specify destination IP network address with prefix length
A.B.C.D/W.X.Y.Z Specify destination IP network address with network mask
any Any destination IP address

ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp 10.0.0.1/24 10.0.0.2
count Count packets matching this entry
dscp Specify a Differentiated Services Code Point value.
ecn Specify an Explicit Congestion Notification value.
fragment Specify a fragment packet.
ip-precedence Specify an IP Precedence value.
log Log packets matching this entry (will also enable 'count')
tos Specify a Type of Service value.
ttl Specify a time-to-live value.
vlan Specify VLAN tag to match on.
<cr>

ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp 10.0.0.1/24 10.0.0.2

```

```

ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp 10.0.0.1/24 10.0.0.2 dscp
<0-63> A valid DSCP codepoint.
AF11   DSCP 10 (Assured Forwarding class 1, low drop probability)
AF12   DSCP 12 (Assured Forwarding class 1, medium drop probability)
AF13   DSCP 14 (Assured Forwarding class 1, high drop probability)
AF21   DSCP 18 (Assured Forwarding class 2, low drop probability)
AF22   DSCP 20 (Assured Forwarding class 2, medium drop probability)
AF23   DSCP 22 (Assured Forwarding class 2, high drop probability)
AF31   DSCP 26 (Assured Forwarding class 3, low drop probability)
AF32   DSCP 28 (Assured Forwarding class 3, medium drop probability)
AF33   DSCP 30 (Assured Forwarding class 3, high drop probability)
AF41   DSCP 34 (Assured Forwarding class 4, low drop probability)
AF42   DSCP 36 (Assured Forwarding class 4, medium drop probability)
AF43   DSCP 38 (Assured Forwarding class 4, high drop probability)
CS0    DSCP 0 (Class Selector 0: Default)
CS1    DSCP 8 (Class Selector 1: Scavenger)
CS2    DSCP 16 (Class Selector 2: OAM)
CS3    DSCP 24 (Class Selector 3: Signaling)
CS4    DSCP 32 (Class Selector 4: Realtime)
CS5    DSCP 40 (Class Selector 5: Broadcast video)
CS6    DSCP 48 (Class Selector 6: Network control)
CS7    DSCP 56 (Class Selector 7)
EF     DSCP 46 (Expedited Forwarding)

```

```

ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp 10.0.0.1/24 10.0.0.2 dscp AF32
count      Count packets matching this entry
ecn        Specify an Explicit Congestion Notification value.
fragment   Specify a fragment packet.
ip-precedence Specify an IP Precedence value.
log        Log packets matching this entry (will also enable 'count')
tos        Specify a Type of Service value.
ttl        Specify a time-to-live value.
vlan       Specify VLAN tag to match on.
<cr>

```

```
ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp 10.0.0.1/24 10.0.0.2 dscp AF32
```

```
ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp 10.0.0.1/24 10.0.0.2 dscp AF32 vlan
VLAN-ID  802.1q VLAN ID.
```

```

ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp 10.0.0.1/24 10.0.0.2 dscp AF32 vlan 2
count      Count packets matching this entry
ecn        Specify an Explicit Congestion Notification value.
fragment   Specify a fragment packet.
ip-precedence Specify an IP Precedence value.
log        Log packets matching this entry (will also enable 'count')
tos        Specify a Type of Service value.
ttl        Specify a time-to-live value.
<cr>

```

```
ArubaOS-CX-Switch(config-acl-ip)# 25 permit icmp 10.0.0.1/24 10.0.0.2 dscp AF32 vlan 2
```

ArubaOS-Switch

Standard ACL

```

ArubaOS-Switch(config)# ip access-list standard 1
ArubaOS-Switch(config-std-nacl)# permit 10.0.100.111 0.0.0.0
ArubaOS-Switch(config)# ip access-list standard std acl

```

```

ArubaOS-Switch(config-std-nacl)# permit 10.0.100.111/32

ArubaOS-Switch(config-std-nacl)# vlan 220

ArubaOS-Switch(vlan-220)# ip access-group ?
ASCII-STR          Enter an ASCII string for the 'access-group'
                     command/parameter.

ArubaOS-Switch(vlan-220)# ip access-group 1 ?
in                 Match inbound packets
out                Match outbound packets
connection-rate-filter Manage packet rates
vlan               VLAN acl

ArubaOS-Switch(vlan-220)# ip access-group 1 in

ArubaOS-Switch(config)# vlan 100

ArubaOS-Switch(vlan-100)# ip access-group std_acl in

```

Extended ACL

```

ArubaOS-Switch(config)# ip access-list extended 100

ArubaOS-Switch(config-ext-nacl)# deny ip 10.1.220.0 0.0.0.255 10.0.100.111 0.0.0.0
ArubaOS-Switch(config-ext-nacl)# permit ip any any

ArubaOS-Switch(config)# ip access-list extended ext_acl
ArubaOS-Switch(config-ext-nacl)# deny ip 10.1.100.0/24 10.0.100.111/32
ArubaOS-Switch(config-ext-nacl)# permit ip any any

ArubaOS-Switch(config)# vlan 220
ArubaOS-Switch(vlan-220)# ip access-group 100 in

ArubaOS-Switch(vlan-220)# vlan 100
ArubaOS-Switch(vlan-100)# ip access-group ext_acl in

```

Comware7

Basic ACL

```

[Comware7]acl number 2000
[Comware7-acl-basic-2000]rule permit source 10.0.100.111 0.0.0.0

[Comware7]acl number 2001 name ext_acl
[Comware7-acl-basic-2001-ext_acl]rule permit source 10.0.100.111 0

```

```
[Comware7] interface Vlan-interface 220

[Comware7-Vlan-interface220] packet-filter ?
    INTEGER<2000-2999> Specify a basic ACL
    INTEGER<3000-3999> Specify an advanced ACL
    INTEGER<4000-4999> Specify an ethernet frame header ACL
    INTEGER<5000-5999> Specify an ACL about user-defined frame or packet head
    filter             Specify the packet filter mode
    ipv6              IPv6 ACL
    name              Specify a named ACL

[Comware7-Vlan-interface220] packet-filter 2000 ?
    inbound   Filter incoming packets
    outbound  Filter outgoing packets

[Comware7-Vlan-interface220] packet-filter 2000 inbound ?
    hardware-count Count rule matches performed by hardware
    <cr>

[Comware7-Vlan-interface220] packet-filter 2000 inbound

[Comware7] interface Vlan-interface 100

[Comware7-Vlan-interface100] packet-filter 2001 inbound
```

Advanced ACL

```
[Comware7] acl number 3000

[Comware7-acl-adv-3000] rule deny ip source 10.1.220.0 0.0.0.255 destination 10.1.100.111 0

[Comware7] acl number 3001 name ext_acl

[Comware7-acl-adv-3001-ext_acl] rule deny ip source 10.1.100.0 0.0.0.255 destination
10.0.100.111 0

[Comware7-acl-adv-3001-ext_acl] quit

[Comware7] interface Vlan-interface 220

[Comware7-Vlan-interface220] packet-filter 3000 inbound

[Comware7] interface Vlan-interface 100

[Comware7-Vlan-interface100] packet-filter 3001 inbound
```

Cisco

Standard ACL

```
Cisco(config)# ip access-list standard 1
```

```

Cisco(config-std-nacl)#permit 10.0.100.111 0.0.0.0

Cisco(config)#ip access-list standard std_acl

Cisco(config-std-nacl)#permit 10.0.100.111 0.0.0.0

Cisco(config)#interface vlan 220

Cisco(config-if)#ip access-group ?
<1-199>      IP access list (standard or extended)
<1300-2699>   IP expanded access list (standard or extended)
WORD          Access-list name

Cisco(config-if)#ip access-group 1 ?
in    inbound packets
out   outbound packets

Cisco(config-if)#ip access-group 1 in

Cisco(config)#interface vl 100

Cisco(config-if)#ip access-group std_acl in

```

Extended ACL

```

Cisco(config)#ip access-list extended 100

Cisco(config-ext-nacl)#deny ip 10.1.220.0 0.0.0.255 10.0.100.111 0.0.0.0

Cisco(config-ext-nacl)#permit ip any any

Cisco(config)#ip access-list extended ext_acl

Cisco(config-ext-nacl)#deny ip 10.1.100.0 255.255.255.0 10.0.100.111 255.255.255.255

Cisco(config-ext-nacl)#permit ip any any

Cisco(config-ext-nacl)#interface vlan 220

Cisco(config-if)#ip access-group 100 in

Cisco(config-if)#interface vlan 100

Cisco(config-if)#ip access-group ext_acl in

```

Chapter 13 BGP

This chapter compares the commands used to enable and configure Border Gateway Protocol.

BGP, based on RFC 4271, is a routing protocol that enables BGP-speaking devices to exchange reachability information about independent networks called Autonomous Systems (ASs). These networks present themselves to other ASs as independent entities that have a single, coherent routing plan. BGP is the most commonly used protocol between Internet service providers (ISPs).

The characteristics of BGP are as follows:

- BGP focuses on the control of route propagation and the selection of optimal routes, rather than on route discovery and calculation, which makes BGP an exterior gateway protocol, different from interior gateway protocols such as Open Shortest Path First (OSPF) and Routing Information Protocol (RIP).
- BGP uses TCP to enhance reliability.
- BGP supports Classless Inter-Domain Routing (CIDR).
- BGP reduces bandwidth consumption by advertising only incremental updates, and is therefore used to advertise a large amount of routing information on the Internet.
- BGP eliminates routing loops completely by adding AS path information to BGP routes.
- BGP provides abundant policies to implement flexible route filtering and selection.
- BGP is scalable.

A router advertising BGP messages is called a BGP speaker. It establishes peer relationships with other BGP speakers to exchange routing information. When a BGP speaker receives a new route or a route better than the current one from another AS, it will advertise the route to all the other BGP peers in the local AS.

BGP can be configured to run on a router in the following two modes:

- iBGP (internal BGP)
- eBGP (external BGP)

When a BGP speaker peers with another BGP speaker that resides in the same AS, the session is referred to as an iBGP session; and, when a BGP speaker peers with a BGP speaker that resides in another AS, the session is referred to as an eBGP session.

BGP CLI Comparison

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
Configuration commands			
router bgp 64502	router bgp 64502	bgp 64505	router bgp 64504
bgp router-id 10.0.0.2	bgp router-id 10.0.0.2	router-id 10.0.0.5	bgp router-id 10.0.0.4

neighbor 10.0.101.31 remote-as 64503	neighbor 10.0.101.31 remote-as 64503	peer 10.0.101.21 as-number 64502	neighbor 10.0.101.21 remote-as 64502
neighbor 10.0.101.41 remote-as 64504	neighbor 10.0.101.41 remote-as 64504	address-family ipv4 unicast	
neighbor 10.0.101.51 remote-as 64505	neighbor 10.0.101.51 remote-as 64505	peer 10.0.101.21 enable	
redistribute connected	redistribute connected	import-route direct	redistribute connected
redistribute static	redistribute static	network 10.0.251.0 24	
enable	enable		
network 10.0.221.0/24	network 10.0.221.0/24		network 10.0.241.0 mask 255.255.255.0
Show/display commands			
show bgp ipv4 unicast summary	Show ip bgp summary	display bgp peer ipv4	show ip bgp summary

BGP CLI Configurable options

ArubaOS-CX-Switch

```
ArubaOS-CX-Switch(config)# router
  bgp                  BGP specific commands
  graceful-restart     Configure graceful restart for routing process
  ospf                 Configure OSPF or enter the OSPF configuration context
  ospfv3               Configure OSPFv3 or enter the OSPFv3 configuration context.
  pim                 Configure PIM, or enter PIM configuration context
  vrrp                VRRP information

ArubaOS-CX-Switch(config)# router bgp
<1-65535>  The autonomous system (AS) number of the BGP process.

ArubaOS-CX-Switch(config)# router bgp 65534
  vrf    VRF Instance
  <cr>

ArubaOS-CX-Switch(config)# router bgp 65534

ArubaOS-CX-Switch(config-router)# 
  aggregate-address  To create an aggregate entry
  bgp                BGP specific commands
  disable             Disable BGP instance
  distance            Configure the administrative distances for BGP routes
  enable              Enable the BGP instance on the VRF
  end                End current mode and change to enable mode
  exit                Exit current mode and change to previous mode
  list                Print command list
  maximum-paths       Forward packets over multiple paths
  neighbor            Specify neighbor router
  network             Specify a network to announce via BGP
  no                 Negate a command or set its defaults
  redistribute         Redistribute information from another routing protocol
  timers              Adjust routing timers
```

```

ArubaOS-CX-Switch(config-router)# bgp
    always-compare-med      Compare MED attribute for BGP best-path selection across neighbors
    in different AS
    bestpath                 Change the default best-path selection
    cluster-id               Configure Route-Reflector Cluster-id
    default                  Configure BGP defaults
    deterministic-med       Pick the best-MED path among paths advertised from the neighboring
AS
    graceful-restart        Configure graceful-restart capability parameters
    log-neighbor-changes   Log BGP neighbors session state changes
    maxas-limit              Maximum AS numbers allowed in routes learned from peers
    router-id                Override configured router identifier

ArubaOS-CX-Switch(config-router)# bgp router-id
    A.B.C.D  Configure the BGP router identifier for the VRF

ArubaOS-CX-Switch(config-router)# bgp router-id 10.0.0.1
<cr>

ArubaOS-CX-Switch(config-router)# bgp router-id 10.0.0.1

ArubaOS-CX-Switch(config-router)# neighbor
    A.B.C.D  Neighbor address
    WORD      Peer Group name

ArubaOS-CX-Switch(config-router)# neighbor 10.0.0.20
    advertisement-interval Minimum interval between sending BGP routing updates
    allowas-in               Accept as-path with my AS present in it
    default-originate        Originate default route to this neighbor
    description              Neighbor specific description
    ebgp-multipath           Allow EBGP neighbors not on directly connected networks
    local-as                 Configure the local AS number for the EBGP neighbor
    maximum-prefix           Number of routes allowed to be learnt from the specified neighbor.
    next-hop-self             Configure own IP as nexthop for all routes advertised to the
neighbor
    passive                  Do not initiate BGP session for this neighbor
    password                 Set a password
    peer-group               Member of the peer-group
    port                     Neighbor's BGP port
    remote-as                Configure the AS of the neighbor
    remove-private-AS        Remove private AS number from outbound updates
    route-map                Route-map filter to apply for the neighbor
    route-reflector-client   Configure a neighbor as Route Reflector client
    send-community            Send Community attribute to this neighbor
    shutdown                 Administratively shut down this neighbor
    soft-reconfiguration     Per neighbor soft reconfiguration
    timers                   BGP per neighbor timers
    update-source             Source of routing updates
    weight                   Set default weight for routes from this neighbor

ArubaOS-CX-Switch(config-router)# neighbor 10.0.0.20 remo
    remote-as                Configure the AS of the neighbor
    remove-private-AS        Remove private AS number from outbound updates

ArubaOS-CX-Switch(config-router)# neighbor 10.0.0.20 remote-as
    <1-65535>  AS number

ArubaOS-CX-Switch(config-router)# neighbor 10.0.0.20 remote-as 6543
<cr>
ArubaOS-CX-Switch(config-router)# neighbor 10.0.0.20 remote-as 6543

ArubaOS-CX-Switch(config-router)# redistribute
    connected   Redistribute directly attached networks

```

```

ospf      Redistribute OSPFv2 routes
static    Redistribute static routes

ArubaOS-CX-Switch(config-router)# redistribute connected
  route-map Apply route-map policy for redistribution
<cr>

ArubaOS-CX-Switch(config-router)# redistribute connected

ArubaOS-CX-Switch(config-router)# redistribute static

ArubaOS-CX-Switch(config-router)# enable

ArubaOS-CX-Switch(config-router)# network
  A.B.C.D/M Configure the IP network to import into BGP

ArubaOS-CX-Switch(config-router)# network 10.0.0.4/24
  route-map A route-map policy to apply on the network
<cr>

ArubaOS-CX-Switch(config-router)# network 10.0.221.0/24
  route-map A route-map policy to apply on the network
<cr>

ArubaOS-CX-Switch(config-router)# network 10.0.221.0/24

ArubaOS-CX-Switch(config-router)# do show ip bgp
  A.B.C.D/M IP prefix <network>/<length>, e.g., 35.0.0.0/8
  all-vrfs All VRFs
  community Display routes that belong to specified BGP communities
  neighbor Detailed information on TCP and specific BGP neighbor connection
  neighbors Detailed information on TCP and all BGP neighbor connections
  paths Path information
  peer-group Peer group information
  summary Summary of BGP neighbor status
  vrf VRF Instance
<cr>

ArubaOS-CX-Switch(config-router)# do show ip bgp
Status codes: s suppressed, d damped, h history, * valid, > best, = multipath,
              i internal, e external S Stale, R Removed
Origin codes: i - IGP, e - EGP, ? - incomplete

VRF : default
Local router-id 10.0.0.1

      Network          Nexthop        Metric     LocPrf     Weight Path
Total number of entries 0

ArubaOS-CX-Switch(config-router)# do show ip bgp neighbor
  A.B.C.D Neighbor to display information about

ArubaOS-CX-Switch(config-router)# do show ip bgp summary
VRF : default
BGP Summary
  Local AS           : 65534       BGP router identifier : 10.0.0.1
  Peers             : 1           Log Neighbor Changes : No
  Hold Time         : 180         Keep Alive            : 60

  Neighbor          Remote-AS MsgRcvd MsgSent Up/Down Time State      AdminStatus
  10.0.0.20          6543       0         0      00h:00m:00s  Idle      Up

ArubaOS-CX-Switch(config-router)# do show ip bgp community

```

```

AA:NN      Community number in aa:nn format
internet   Advertise the prefix to all BGP neighbors.
local-as   Do not advertise the prefix outside of the sub-AS
no-advertise Do not advertise the prefix to any BGP neighbors.
no-export   Do not advertise the prefix to any eBGP neighbors.
vrf        VRF Instance
<cr>

ArubaOS-CX-Switch(config-router)# do show ip bgp community
Status codes: s suppressed, d damped, h history, * valid, > best, = multipath,
               i internal, e external S Stale, R Removed
VRF : default
Local router-id 10.0.0.1

Network          Next Hop           Community
Total number of entries 0

ArubaOS-Switch

ArubaOS-Switch(config)# router bgp ?
<1-65535>          The autonomous system number for the BGP routing process on this
                      router

ArubaOS-Switch(config)# router bgp 64502 ?
bgp                Configure various BGP parameters.
disable            Disable BGP on the router.
distance          Configure the administrative distances for BGP routes.
enable             Enable BGP on the router.
neighbor          Add/Modify/delete entries of the BGP peer table.
network            Advertise a network to the BGP neighbors if the network exists in
                  the routing table.
redistribute       Advertises routes from the specified protocol to the BGP
                  neighbors.
timers             Configure global keepalive and hold-time values for BGP.
<cr>

ArubaOS-Switch(config)# router bgp 64502

ArubaOS-Switch(bgp) # bgp
allowas-in         Specify the number of times the local AS may appear in an AS-path.
always-compare-med Compare MEDs for routes from neighbors in different ASs.
bestpath            Configure various BGP best-path options.
client-to-client-r... Enable or Disable client-to-client route reflection.
cluster-id         Specify the cluster ID to be used when the BGP router is used as a
                  route-reflector.
default-metric     Specify a BGP MED to be set on routes when they are advertised to
                  peers.
graceful-restart   Configure BGP graceful restart timers.
log-neighbor-changes Enable or disable BGP event logging.
maximum-prefix     Specify the maximum number of routes that BGP will add to its
                  routing table.
open-on-accept     Configure BGP to send an Open message immediately when the TCP
                  connection has been established for configured peers.
router-id          Configure a BGP router-id to be used during neighbor session
                  establishment and in BGP best-path selection.

ArubaOS-Switch(bgp) # bgp router-id ?
IP-ADDR           A 32-bit integer in ipv4-address format to be used as the BGP
                  router-id

ArubaOS-Switch(bgp) # bgp router-id 10.0.0.2

```

```

ArubaOS-Switch(bgp) # ?
bgp                  Configure various BGP parameters.
disable              Disable BGP on the router.
distance            Configure the administrative distances for BGP routes.
enable               Enable BGP on the router.
neighbor             Add/Modify/delete entries of the BGP peer table.
network              Advertise a network to the BGP neighbors if the network exists in
                     the routing table.
redistribute         Advertises routes from the specified protocol to the BGP
                     neighbors.
timers               Configure global keepalive and hold-time values for BGP.

ArubaOS-Switch(bgp) # neighbor 10.0.101.31 ?
allowas-in          Specify the number of times the local AS # may appear in an
                     AS-path.
as-override          Replace all occurrences of the peer AS number with the router's
                     own AS number before advertising the route.
description          Configure description for this BGP peer or peer-group.
dynamic              Enable or disable advertisement of dynamic capability to the peer.
ebgp-multipath       Enable or disable multi-hop peering with the specified EBGP peer,
                     and optionally indicate the maximum number of hops (TTL).
graceful-restart    Enable or Disable the advertisement of graceful-restart
                     capability.
ignore-leading-as   Allow any received routes that do not have their own AS appended
                     to the as-path.
local-as             Configure the local AS # used for peering with this peer .
maximum-prefix      Specify the maximum number of routes BGP will accept from the
                     specified peer.
next-hop-self        Force BGP to use the router's outbound interface address as the
                     next hop for the route updates to the peer.
out-delay            Specify the delay-time before advertising the route updates to the
                     peer.
passive              If enabled, do not initiate a peering connection to the peer.
password             Use MD5 authentication for the peer and set the password to be
                     used. If in enhanced secure-mode, you will be prompted for the
                     password.
remote-as            Add an entry to the neighbor table, specifying the AS # of the BGP
                     peer.
remove-private-as   Specify whether the private AS # should be removed from the
                     as-path attribute of updates to the EBGP peer.
route-map            Specify a route-map to be applied for filtering routes received
                     from or sent to the peer.
route-reflector-client... Act as a route reflector for the peer.
route-refresh        Enable or disable the advertisement of route-refresh capability in
                     the Open message sent to the peer.
send-community       Enable or disable sending the community attribute in route updates
                     to the peer.
shutdown             Shutdown the BGP peering session without removing the associated
                     peer configuration.
timers               Configure the keepalive and hold-time values for the peer.
ttl-security         Configure the TTL security for this peer.
update-source        Specify the source address to accept TCP connections from the
                     peer.
use-med              Enable or disable the comparison of MED attribute for the same
                     route received from two different autonomous systems.
weight               Specify the weight for all routes received from the specified
                     peer.

```

```

ArubaOS-Switch(bgp) # neighbor 10.0.101.31 remote-as 64503 ?
<cr>

```

```

ArubaOS-Switch(bgp) # neighbor 10.0.101.31 remote-as 64503

```

```

ArubaOS-Switch(bgp) # neighbor 10.0.101.41 remote-as 64504

ArubaOS-Switch(bgp) # neighbor 10.0.101.51 remote-as 64505

ArubaOS-Switch(bgp) # redistribute connected

ArubaOS-Switch(bgp) # redistribute static

ArubaOS-Switch(bgp) # enable

ArubaOS-Switch(bgp) # network 10.0.221.0/24

ArubaOS-Switch# show ip bgp ?
as-path                      Shows list of unique as-paths learnt by this router.
community                     Show routes belonging to the specified communities.
general                       Show a global configuration details.
IP-ADDR/MASK-LENGTH          Show routes matching this network ipv4 address.
neighbor                      Show information about the state of BGP peering session<ip-addr> -
                             Show information only for this peer.
redistribute                  Show protocols being redistributed into BGP.
regexp                        Show BGP routes whose as-path information matches the supplied
                             regular expression.
route                         Displays as-path or community information of the BGP routes.
summary                       Show a summary of BGP peer state information.
<cr>

```

```
ArubaOS-Switch# show ip bgp summary
```

Peer Information

Remote Address	Remote-AS	Local-AS	State	Admin Status
10.0.101.31	64503	64502	Established	Start
10.0.101.41	64504	64502	Established	Start
10.0.101.51	64505	64502	Established	Start

Comware7

```

[Comware7]bgp ?
INTEGER<1-4294967295> Autonomous system number

[Comware7]bgp 64503 ?
<cr>

[Comware7]bgp 64503

[Comware7-bgp]?
Bgp protocol view commands:
address-family           Specify an address family
advertise-rib-active     Advertise the best route in IP routing table
bgp                      BGP specific commands
cfd                      Connectivity Fault Detection (CFD) module
confederation             Configure AS confederation parameters
diagnostic-logfile       Diagnostic log file configuration
display                  Display current system information

```

ebgp-interface-sensitive	Immediately reset session if a link connected peer goes down
graceful-restart	Configure Graceful Restart (GR) capability
group	Create a peer group
ignore-first-as	Ignore the first AS number of eBGP route updates
ip	Specify Internet Protocol (IP) configuration information
log-peer-change	Log any session status and event change information
logfile	Log file configuration
monitor	System monitor
non-stop-routing	Enable NSR
peer	Specify BGP peers
ping	Ping function
primary-path-detect	Enable primary path detect function
quit	Exit from current command view
return	Exit to User View
router-id	Configure router ID
save	Save current configuration
security-logfile	Security log file configuration
timer	Configure timers for BGP
tracert	Tracert function
undo	Cancel current setting
vpn	Set forwarding mode of MPLS L3VPN on egress PE

[Comware7-bgp]router-id 10.0.0.5

[Comware7-bgp]peer ?	
STRING<1-47>	Specify a peer group by its name
X.X.X.X	IPv4 address
X:X::X:X	IPv6 address
[Comware7-bgp]peer 10.0.101.21 ?	
INTEGER<0-32>	Specify a Mask length of IPv4 address
as-number	AS number
bfd	Enable BFD for the peers
capability-advertise	Advertise capability
connect-interface	Set interface name to be used as session's output interface
description	Configure description information about the peers
ebgp-max-hop	EBGP Multihop
fake-as	Configure a fake AS number for the peers
group	Specify a peer-group
ignore	Disable session establishment with the peers
ignore-originatorid	Ignore the originator ID attribute in received BGP routes
low-memory-exempt	Exempt the EBGP peers from low-memory shutdown
password	Specify a password
route-update-interval	Specify the interval for sending the same update to the peers
substitute-as	Replace the AS number in the AS_PATH attribute with the local
timer	Configure timers for the peers
ttl-security	Configure the Generalized TTL Security Mechanism (GTSM)

[Comware7-bgp]peer 10.0.101.21 as-number 64502 ?
 <cr>

[Comware7-bgp]peer 10.0.101.21 as-number 64502

[Comware7-bgp]address-family ?

```

ipv4   Specify the IPv4 address family
ipv6   Specify the IPv6 address family
l2vpn  Specify the L2VPN address family
vpnv4  Specify the Vpnv4 address family
vpnv6  Specify the Vpnv6 address family

[Comware7-bgp]address-family ipv4 ?
    unicast  Specify the unicast address family
    <cr>

[Comware7-bgp]address-family ipv4 unicast ?
    <cr>

[Comware7-bgp]address-family ipv4 unicast

[Comware7-bgp-ipv4]?
Bgp-ipv4 protocol view commands:
aggregate          Create a summary route
balance            Configure BGP load balancing
bestroute          Change the default best route selection
cfd                Connectivity Fault Detection (CFD) module
compare-different-as-med Compare the MEDs of routes from different ASs
dampening          Enable route-flap dampening
default             Set default value for BGP
default-route      Default route operation
diagnostic-logfile Diagnostic log file configuration
display            Display current system information
fast-reroute        Configure fast reroute
filter-policy      Filter networks in route updates
import-route       Import routes from another routing protocol
logfile            Log file configuration
monitor            System monitor
network            Specify a network to advertise via BGP
peer               Specify BGP peers
pic                Enable Prefix Independent Convergence (PIC)
ping               Ping function
preference         Configure the preference of BGP routes
quit              Exit from current command view
reflect            Configure route reflection
reflector          Configure the route reflector
return             Exit to User View
save               Save current configuration
security-logfile  Security log file configuration
summary            Summarize subnet routes to classful network routes
tracert            Tracert function
undo               Cancel current setting

[Comware7-bgp-ipv4]peer 10.0.101.21 ?
    INTEGER<0-32>          Specify a Mask length of IPv4 address
    advertise-community     Send community attribute to the peers
    advertise-ext-community Advertise extended community
    allow-as-loop          Configure permit of as-path loop
    as-path-acl            Specify an AS path ACL
    default-route-advertise Advertise default route to the peers
    enable                Enable the specified peers
    filter-policy          Filter networks in route updates
    keep-all-routes        Save original routing information from the peers
    label-route-capability Send labeled route to the peers
    next-hop-local         Specify local address as the next hop of routes
                           advertised to the peers
    preferred-value        Assign a preferred value to routes received from the
                           peers
    prefix-list            Specify BGP route filtering policy based on a prefix

```

```

        list
public-as-only      Do not keep private AS numbers in BGP updates
reflect-client     Configure the peers as route reflectors
route-limit        Configure the maximum number of routes that can be
                   received from the peers
route-policy       Specify a routing policy

[Comware7-bgp-ipv4]peer 10.0.101.21 enable ?
<cr>

[Comware7-bgp-ipv4]peer 10.0.101.21 enable

[Comware7-bgp-ipv4]import-route direct

[Comware7-bgp-ipv4]network 10.0.251.0 24

[Comware7]display bgp ?
dampening          BGP dampening information
group              Display peer group information
l2vpn              Specify the L2VPN address family
network            Routing information advertised with the network command or
                   short-cut route information
non-stop-routing   Display BGP NSR information
paths              Path attribute information
peer               Display peer information
routing-table     Display BGP routes
update-group      Display update group information

[Comware7]display bgp peer ?
ipv4               Specify the IPv4 address family
ipv6               Specify the IPv6 address family
l2vpn              Specify the L2VPN address family
vpnv4              Specify the Vpnv4 address family
vpnv6              Specify the Vpnv6 address family

[Comware7]display bgp peer ipv4 ?
>                 Redirect it to a file
>>                Redirect it to a file in append mode
X.X.X.X            IPv4 address
group-name         Specify a peer group by its name
standby            Display information on the standby process
unicast            Specify the unicast address family
verbose            Detailed information
vpn-instance       Specify a VPN instance
|                 Matching output
<cr>

[Comware7]display bgp peer ipv4

BGP local router ID: 10.0.0.5
Local AS number: 64505
Total number of peers: 1           Peers in established state: 1

* - Dynamically created peer
Peer          AS  MsgRcvd  MsgSent OutQ PrefRcv Up/Down  State
10.0.101.21    64502      78      80      0      3 01:10:44 Established
Cisco
Cisco(config)#router bgp ?

```

```

<1-4294967295> Autonomous system number
<1.0-XX.YY> Autonomous system number

Cisco(config)#router bgp 64504 ?
<cr>

Cisco(config)#router bgp 64504

Cisco(config-router)#bgp ?
  aggregate-timer          Configure Aggregation Timer
  always-compare-med      Allow comparing MED from different neighbors
  asnotation               Change the default asplain notation
  bestpath                 Change the default bestpath selection
  client-to-client         Configure client to client route reflection
  cluster-id               Configure Route-Reflector Cluster-id (peers may
                           reset)
  confederation            AS confederation parameters
  dampening                Enable route-flap dampening
  default                  Configure BGP defaults
  deterministic-med        Pick the best-MED path among paths advertised from
                           the neighboring AS
  dmzlink-bw               Use DMZ Link Bandwidth as weight for BGP multipaths
  enforce-first-as         Enforce the first AS for EBGP routes(default)
  fast-external-fallover   Immediately reset session if a link to a directly
                           connected external peer goes down
  graceful-restart          Graceful restart capability parameters
  inject-map               Routemap which specifies prefixes to inject
  log-neighbor-changes     Log neighbor up/down and reset reason
  maxas-limit              Allow AS-PATH attribute from any neighbor imposing a
                           limit on number of ASes
  nexthop                  Nexthop tracking commands
  nopeerup-delay            Set how long BGP will wait for the first peer to come
                           up before beginning the update delay or graceful
                           restart timers (in seconds)
  redistribute-internal    Allow redistribution of iBGP into IGP (dangerous)
  regexp                   Select regular expression engine
  route-map                route-map control commands
  router-id                Override configured router identifier (peers will
                           reset)
  scan-time                Configure background scanner interval
  slow-peer                Configure slow-peer
  soft-reconfig-backup     Use soft-reconfiguration inbound only when
                           route-refresh is not negotiated
  suppress-inactive        Suppress routes that are not in the routing table
  transport                global enable/disable transport session parameters
  update-delay              Set the max initial delay for sending update
  upgrade-cli              Upgrade to hierarchical AFI mode

Cisco(config-router)#bgp router-id ?
  A.B.C.D  Manually configured router identifier
  vrf      vrf-specific router id configuration

Cisco(config-router)#bgp router-id 10.0.0.4 ?
<cr>

Cisco(config-router)#bgp router-id 10.0.0.4

Cisco(config-router)#
Router configuration commands:
  address-family           Enter Address Family command mode
  aggregate-address        Configure BGP aggregate entries

```

auto-summary	Enable automatic network number summarization
bgp	BGP specific commands
default	Set a command to its defaults
default-information	Control distribution of default information
default-metric	Set metric of redistributed routes
distance	Define an administrative distance
distribute-list	Filter networks in routing updates
exit	Exit from routing protocol configuration mode
help	Description of the interactive help system
maximum-paths	Forward packets over multiple paths
neighbor	Specify a neighbor router
network	Specify a network to announce via BGP
no	Negate a command or set its defaults
redistribute	Redistribute information from another routing protocol
scope	Enter scope command mode
synchronization	Perform IGP synchronization
table-map	Map external entry attributes into routing table
template	Enter template command mode
timers	Adjust routing timers
 Cisco(config-router)#neighbor ?	
A.B.C.D	Neighbor address
WORD	Neighbor tag
X:X:X:X::X	Neighbor IPv6 address
 Cisco(config-router)#neighbor 10.0.101.21 ?	
activate	Enable the Address Family for this Neighbor
advertise-map	specify route-map for conditional advertisement
advertisement-interval	Minimum interval between sending BGP routing updates
allowas-in	Accept as-path with my AS present in it
capability	Advertise capability to the peer
default-originate	Originate default route to this neighbor
description	Neighbor specific description
disable-connected-check	one-hop away EBGP peer using loopback address
distribute-list	Filter updates to/from this neighbor
dmzlink-bw	Propagate the DMZ link bandwidth
ebgp-multihop	Allow EBGP neighbors not on directly connected networks
fall-over	session fall on peer route lost
filter-list	Establish BGP filters
ha-mode	high availability mode
inherit	Inherit a template
local-as	Specify a local-as number
maximum-prefix	Maximum number of prefixes accepted from this peer
next-hop-self	Disable the next hop calculation for this neighbor
next-hop-unchanged	Propagate next hop unchanged for iBGP paths to this neighbor
password	Set a password
peer-group	Member of the peer-group
prefix-list	Filter updates to/from this neighbor
remote-as	Specify a BGP neighbor
remove-private-as	Remove private AS number from outbound updates
route-map	Apply route map to neighbor
route-reflector-client	Configure a neighbor as Route Reflector client
send-community	Send Community attribute to this neighbor
shutdown	Administratively shut down this neighbor
slow-peer	Configure slow-peer
soft-reconfiguration	Per neighbor soft reconfiguration
soo	Site-of-Origin extended community
timers	BGP per neighbor timers
translate-update	Translate Update to MBGP format
transport	Transport options
ttl-security	BGP ttl security check

```

unsuppress-map          Route-map to selectively unsuppress suppressed
                      routes
update-source          Source of routing updates
version                Set the BGP version to match a neighbor
weight                 Set default weight for routes from this neighbor

Cisco(config-router)#neighbor 10.0.101.21 remote-as ?
<1-4294967295> AS of remote neighbor
<1.0-XX.YY>   AS of remote neighbor

Cisco(config-router)#neighbor 10.0.101.21 remote-as 64502 ?
shutdown   Administratively shut down this neighbor
<cr>

Cisco(config-router)#neighbor 10.0.101.21 remote-as 64502

Cisco(config-router)#redistribute connected

Cisco(config-router)#network 10.0.241.0 ?
backdoor   Specify a BGP backdoor route
mask       Network mask
nlri       Specify nlri type for network
route-map  Route-map to modify the attributes
<cr>

Cisco(config-router)#network 10.0.241.0 mask ?
A.B.C.D  Network mask

Cisco(config-router)#network 10.0.241.0 mask 255.255.255.0

Cisco#show ip bgp ?
A.B.C.D      Network in the BGP routing table to display
A.B.C.D/nn    IP prefix <network>/<length>, e.g., 35.0.0.0/8
all          All address families
cidr-only    Display only routes with non-natural netmasks
community   Display routes matching the communities
community-list  Display routes matching the community-list
dampening    Display detailed information about dampening
extcommunity-list  Display routes matching the extcommunity-list
filter-list   Display routes conforming to the filter-list
import        Display route topology import / export activity
inconsistent-as  Display only routes with inconsistent origin ASs
injected-paths  Display all injected paths
ipv4          Address family
ipv6          Address family
l2vpn         Address family
labels        Display Labels for IPv4 NLRI specific information
neighbors     Detailed information on TCP and BGP neighbor connections
nexthops      Nexthop address table
nsap          Address family
oer-paths     Display all oer controlled paths
paths         Path information
peer-group    Display information on peer-groups
pending-prefixes  Display prefixes pending deletion
prefix-list   Display routes matching the prefix-list
quote-regexp  Display routes matching the AS path "regular expression"
regexp        Display routes matching the AS path regular expression
replication   Display replication status of update-group(s)

```

rib-failure	Display bgp routes that failed to install in the routing table (RIB)
route-map	Display routes matching the route-map
summary	Summary of BGP neighbor status
template	Display peer-policy/peer-session templates
topology	Routing topology instance
update-group	Display information on update-groups
update-sources	Update source interface table
version	Display prefixes with matching version numbers
vpnv4	Address family
vpnv6	Address family
	Output modifiers

```
Cisco#show ip bgp summary
BGP router identifier 10.0.0.4, local AS number 64504
BGP table version is 5, main routing table version 5
4 network entries using 544 bytes of memory
4 path entries using 208 bytes of memory
4/4 BGP path/bestpath attribute entries using 496 bytes of memory
3 BGP AS-PATH entries using 72 bytes of memory
0 BGP route-map cache entries using 0 bytes of memory
0 BGP filter-list cache entries using 0 bytes of memory
BGP using 1320 total bytes of memory
BGP activity 4/0 prefixes, 4/0 paths, scan interval 60 secs
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/PfxRcd
10.0.101.21	4	64502	8	8	5	0	0	00:03:23	3

Chapter 14 OSPF

This chapter compares the commands you use to enable and configure Open Shortest Path First (OSPF).

OSPF is a link-state routing protocol you can apply to routers grouped into OSPF areas identified by the routing configuration on each router. The protocol uses Link-State Advertisements (LSAs) transmitted by each router to update neighboring routers regarding that router's interfaces and the routes available through those interfaces.

Each router in an area also maintains a link-state database (LSDB) that describes the area topology. The routers used to connect areas to each other flood summary link LSAs and external link LSAs to neighboring OSPF areas to update them regarding available routes. In this way, each OSPF router determines the shortest path between itself and a desired destination router in the same OSPF domain (AS [Autonomous System]).

The OSPFv2 configurations in this chapter start with single area, then configuring multiple areas, after which adding stub and totally stubby components, and then the show/display OSPF commands. Each section builds upon the next adding additional OSPF capabilities.

OSPF CLI Comparison

ArubaOS-CX-Switch	ArubaOS-Switch	Comware 7	Cisco
Configuration commands			
router ospf 2 enable	router ospf enable	ospf 1 router-id 10.0.0.31	router ospf 1
router-id 10.0.0.41			router-id 10.0.0.41
area 0			
area 10.1.220.0	vlan 220 ip ospf area 0	Network 10.1.220.0 0.0.0.255	network 10.1.220.0 0.0.0.255 area 0
router ospf 2 redistribute connected	router ospf redistribute connected	import-route direct	router ospf 1 redistribute connected
Show/display commands			
show ip ospf			Show ip ospf
Show ip route ospf	Show ip route	display ip route	Show ip route ospf
Show ip ospf neighbour		dis ospf peer	Show ip ospf neighbour

OSPF CLI Configurable options

ArubaOS-CX-Switch
ArubaOS-CX-Switch(config)# router bgp BGP specific commands graceful-restart Configure graceful restart for routing process ospf Configure OSPF or enter the OSPF configuration context ospfv3 Configure OSPFv3 or enter the OSPFv3 configuration context. pim Configure PIM, or enter PIM configuration context vrrp VRRP information ArubaOS-CX-Switch(config)# router ospf

```

ospf      Configure OSPF or enter the OSPF configuration context
ospfv3   Configure OSPFv3 or enter the OSPFv3 configuration context.

ArubaOS-CX-Switch(config)# router ospf
<1-63>  Specify the OSPF Process ID

ArubaOS-CX-Switch(config)# router ospf 2
    vrf      VRF Instance.
    <cr>

ArubaOS-CX-Switch(config)# router ospf 2

ArubaOS-CX-Switch(config-ospf-2)#
area                  Configure OSPF area parameters
default-metric        Configure metric of redistributed routes.
disable               Disable OSPF process
distance              Configure OSPF administrative distance
enable                Enable OSPF process
end                  End current mode and change to enable mode
exit                 Exit current mode and change to previous mode
graceful-restart     Configure graceful-restart for OSPF
list                 Print command list
max-metric            Configure stub router advertisement
maximum-paths         Configure maximum number of ECMP routes that OSPF can support
no                   Negate a command or set its defaults
passive-interface     Configure the interfaces to suppress OSPF routing updates
redistribute          Redistribute routes from another routing protocol
rfc1583-compatibility Compatible with RFC 1583. Turned off by default.
router-id             Configure OSPF router identifier
trap-enable           Enable OSPF SNMP Traps. Default is disabled.

ArubaOS-CX-Switch(config-ospf-2)# enable

ArubaOS-CX-Switch(config-ospf-2)# area
<0-4294967295>  Set area id in decimal format
A.B.C.D           Set area id in IPv4 address notation

ArubaOS-CX-Switch(config-ospf-2)# area 0
default-metric    Configure cost for the default route used for a stub or NSSA area
nssa              Configure OSPF area as NSSA
range             Summarize routes matching address/mask on border routers only
stub              Configure OSPF area as stub
virtual-link      Configure a virtual link
    <cr>

ArubaOS-CX-Switch(config-ospf-2)# area 0

ArubaOS-CX-Switch(config-ospf-2)# router-id
A.B.C.D          Set router identifier

ArubaOS-CX-Switch(config-ospf-2)# router-id 10.0.0.1
    <cr>

ArubaOS-CX-Switch(config-ospf-2)# router-id 10.0.0.1

ArubaOS-CX-Switch(config-ospf-2)# redistribute
bgp                Border Gateway Protocol (BGP)
connected          Connected routes (directly attached subnet or host)
static             Statically configured routes

ArubaOS-CX-Switch(config-ospf-2)# redistribute connected
    <cr>

```

```

ArubaOS-CX-Switch(config-ospf-2)# redistribute connected

ArubaOS-CX-Switch(config-ospf-2)# area
<0-4294967295> Set area id in decimal format
A.B.C.D Set area id in IPv4 address notation

ArubaOS-CX-Switch(config-ospf-2)# area 10.0.0.3
default-metric Configure cost for the default route used for a stub or NSSA area
nssa Configure OSPF area as NSSA
range Summarize routes matching address/mask on border routers only
stub Configure OSPF area as stub
virtual-link Configure a virtual link
<cr>

ArubaOS-CX-Switch(config-ospf-2)# area 10.0.0.3 range
A.B.C.D/M Area range prefix/mask

ArubaOS-CX-Switch(config-ospf-2)# area 10.0.0.3 range 10.0.0.5/24
type LSDB type that this address aggregate applies to

ArubaOS-CX-Switch(config-ospf-2)# area 10.0.0.3 range 10.0.0.5/24 type
inter-area Specify LSDB type as inter-area
nssa Specify LSDB type as NSSA external

ArubaOS-CX-Switch(config-ospf-2)# area 10.0.0.3 range 10.0.0.5/24 type nssa
no-advertise Specify the address range status as DoNotAdvertise
<cr>

ArubaOS-CX-Switch(config-ospf-2)# area 10.0.0.3 range 10.0.0.5/24 type nssa
OSPF Area is not enabled.

ArubaOS-CX-Switch(config-ospf-2)# do show ip
aspath-list List AS path lists
bgp BGP specific commands
community-list List community-list
dns Display DNS client configuration
ecmp ECMP Configuration
errors Errors
forward-protocol Forward-protocol
helper-address Show the helper-address for DHCP relay configuration
igmp Display IGMP configurations and status
interface Interface information
irdp Configure ICMP Router Discovery Protocol
mroute Show Mroute information
ospf OSPF information
pim pim configurations
prefix-list Build a prefix list
route Routing Table
source-interface Specify source-interface utility

ArubaOS-CX-Switch(config-ospf-2)# do show ip ospf
[<1-63>] Specify the OSPF Process ID
all-vrfs All VRFs.
border-routers Display OSPF border router information
interface Display OSPF interface information
lsdb Display OSPF link state database information
neighbors Display OSPF neighbor information
routes Display OSPF routing table
statistics Display OSPF statistics
virtual-links Display OSPF virtual links information
vrf VRF Instance.
<cr>

```

```
ArubaOS-CX-Switch(config-ospf-2)# do show ip ospf
Routing Process 2 with ID : 10.0.0.1 VRF default
-----
Graceful-restart is configured
Restart Interval: 120, State: inactive
Last Graceful Restart Exit Status: none
Maximum Paths to Destination: 4
Number of external LSAs 0, checksum sum 0
Number of areas is 1, 1 normal, 0 stub, 0 NSSA
Number of active areas is 0, 0 normal, 0 stub, 0 NSSA
Area (0.0.0.0) (Inactive)
    Interfaces in this Area: 0 Active Interfaces: 0
    Passive Interfaces: 0 Loopback Interfaces: 0
    SPF calculation has run 2 times
    Area ranges:
        Number of LSAs: 1, checksum sum 39090
```

```
ArubaOS-CX-Switch(config-ospf-2)# do show ip ospf all-vrfs
Routing Process 2 with ID : 10.0.0.1 VRF default
-----
```

```
Graceful-restart is configured
Restart Interval: 120, State: inactive
Last Graceful Restart Exit Status: none
Maximum Paths to Destination: 4
Number of external LSAs 0, checksum sum 0
Number of areas is 1, 1 normal, 0 stub, 0 NSSA
Number of active areas is 0, 0 normal, 0 stub, 0 NSSA
Area (0.0.0.0) (Inactive)
    Interfaces in this Area: 0 Active Interfaces: 0
    Passive Interfaces: 0 Loopback Interfaces: 0
    SPF calculation has run 2 times
    Area ranges:
        Number of LSAs: 1, checksum sum 39090
```

```
ArubaOS-CX-Switch(config-ospf-2)# do show ip ospf statistics
OSPF Process ID 2 VRF default, Statistics (cleared 0h6m40s ago)
-----
```

```
Unknown Interface Drops      : 0
Unknown Virtual Interface Drops : 0
Bad Instance ID Drops       : 0
Bad IP Header Length Drops  : 0
Wrong OSPF Version Drops    : 0
Bad Source IP Drops         : 0
Resource Failure Drops     : 0
Bad Header Length Drops    : 0
Total Drops                 : 0
```

ArubaOS-Switch

```
ArubaOS-Switch(config)# ip router-id 10.0.0.21
```

```
ArubaOS-Switch(config)# router ospf
```

```
ArubaOS-Switch(config)# enable
```

```
ArubaOS-Switch(ospf)# area backbone
-or-
```

```
ArubaOS-Switch(ospf)# area 0.0.0.0
```

```
-or-
ArubaOS-Switch(ospf)# area 0

ArubaOS-Switch(ospf)# vlan 220

ArubaOS-Switch(vlan-220)# ip ospf area backbone
-or-

ArubaOS-Switch(vlan-220)# ip ospf area 0.0.0.0
-or-

ArubaOS-Switch(vlan-220)# ip ospf area 0
ArubaOS-Switch(vlan-220)# router ospf

(also as compound statements)

ArubaOS-Switch(config)# vlan 220 ip ospf area backbone
-or-

ArubaOS-Switch(config)# vlan 220 ip ospf area 0
-or-

ArubaOS-Switch(config)# vlan 220 ip ospf area 0.0.0.0

ArubaOS-Switch(ospf)# redistribute ?
  connected
  static
  rip
  bgp

ArubaOS-Switch(ospf)# redistribute connected
```

Comware 7

```
[Comware]ospf 1 router-id 10.0.0.31

[Comware-ospf-1]area 0
-or-
[Comware-ospf-1]area 0.0.0.0

[Comware-ospf-1-area-0.0.0.0]network 10.1.220.0 0.0.0.255

[Comware-ospf-1]import-route ?
bgp      Border Gateway Protocol (BGP) routes
direct   Direct routes
isis     Intermediate System to Intermediate System (IS-IS) routes
ospf    Open Shortest Path First (OSPF) routes
rip     Routing Information Protocol (RIP) routes
static   Static routes

[Comware-ospf-1]import-route direct
Comware]ospf 1

[Comware-ospf-1]area 1
-or-
[Comware-ospf-1]area 0.0.0.1

[Comware-ospf-1-area-0.0.0.1]network 10.1.100.0 0.0.0.255

[Comware-ospf-1-area-0.0.0.1]area 2
-or-
[Comware-ospf-1-area-0.0.0.1]area 0.0.0.2

[Comware-ospf-1-area-0.0.0.2]network 10.1.230.0 0.0.0.255

[Comware-ospf-1]area 2

[Comware-ospf-1-area-0.0.0.2]stub no-summary

[Comware]interface Vlan-interface 230

[Comware-Vlan-interface230]ospf cost 10
```

Cisco

```
Cisco(config)#router ospf 1

Cisco(config-router)#router-id 10.0.0.41

Cisco(config-router)#network 10.1.220.0 0.0.0.255 area 0
-or-
Cisco(config-router)#network 10.1.220.0 0.0.0.255 area 0.0.0.0
```

```
Cisco(config-router)#redistribute ?

bgp          Border Gateway Protocol (BGP)
connected    Connected
eigrp        Enhanced Interior Gateway Routing Protocol (EIGRP)
isis         ISO IS-IS
iso-igrp     IGRP for OSI networks
maximum-prefix Maximum number of prefixes redistributed to protocol
metric       Metric for redistributed routes
metric-type  OSPF/IS-IS exterior metric type for redistributed routes
mobile       Mobile routes
nssa-only   Limit redistributed routes to NSSA areas
odr          On Demand stub Routes
ospf         Open Shortest Path First (OSPF)
rip          Routing Information Protocol (RIP)
route-map   Route map reference
static      Static routes
subnets     Consider subnets for redistribution into OSPF
tag         Set tag for routes redistributed into OSPF\

<cr>

Cisco(config-router)#redistribute connected
```

Appendix A CLI Commands in ArubaOS-Switch Software

This appendix shows display commands added to ArubaOS-Switch software.

Included are related ArubaOS-CX-Switchsoftware commands. Refer to the latest release notes for your switch product to determine which commands are supported.

HPE Networking has added CLI commands into the ArubaOS-CXSwitch software in a phased manner over several releases to help network management staff learn to use the ArubaOS-Switch software CLI with a minimum of effort.

ArubaOS-CX-Switchwas used for this section.

Fundamental Commands

ArubaOS-Switch commands	Comware commands in ArubaOS-Switch Software
copy startup-config tftp <ip-address> <file name>	backup startup-configuration to <ip-address> <file name>
clock set <HH:MM:SS> <MM/DD/YYYY>	clock datetime <HH:MM:SS> <MM/DD/YYYY>
clock summer-time	clock summer-time
clock timezone	clock timezone
aaa accounting commands	command accounting
aaa authorization commands radius	command authorization
No equivalent ArubaOS-Switch software command	command-alias enable
No equivalent ArubaOS-Switch software command	command-alias mapping
copy	copy
erase startup-config	delete <startup-config>
flow-control	flow-control
console inactivity-timer	idle-timeout
exit	quit
boot	reboot
erase startup	reset saved-configuration
copy tftp startup-config	restore startup-configuration
end	return
write memory	save
reload at	schedule reboot at
reload after	schedule reboot delay
terminal length	screen-length
set authentication password	set authentication password
console baud-rate	speed
startup-default config <config file name>	startup saved-configuration <config file name>
hostname	sysname
configure	system-view
telnet	telnet
telnet-server	telnet server enable
console terminal	terminal type
no	undo
[Below commands has no equivalent Comware command, as some of these features are specific to ArubaOS]	
Sys-debug ip fib blackhole	
Sys-debug ipv6 fib blackhole	

Sys-debug destination logging	
Sys-debug destination buffer	
Ipv6 route <network/subnetmask> blackhole logging	
Ip route <network/subnetmask> blackhole logging	
Access-list logtimer <5-300>	
Sys-debug acl	
Sys-debug destination buffer	
Sys-debug destination logging	
vsf sequence-reboot {primary secondary}	
vsf domain 20	
vsf lldp-mad ipv4 10.1.1.1 v2c public	
vsf member 4 link 1 name NAME-STR	
vsf member 4 link 1 all start-disabled	
vsf member 4 link 1 all	
vsf member 4 link 1	
vsf member 4 priority 255	
vsf member 4 remove reboot	
vsf member 4 remove	
vsf member 4 shutdown	
vsf member 4 type <jnum> mac-address <mac-ad>	
vsf member 4 type <jnum>	
vsf port-speed 1g	
vsf port-speed 10g	
vsf vlan-mad 707	

Display Commands

ArubaOS-CX-Switch commands
show vrrp (ipv4 ipv6 brief detail) (<1-255>)
show vrrp
show vrrp (ipv4 ipv6 brief detail)
show vrrp (<1-255>)
show vrrp (brief detail) (ipv4 ipv6) (<1-255>)
show vrrp (brief detail) (ipv4 ipv6)
show vrrp interface IFNAME
show vrrp interface IFNAME(<1-255>)
show vrrp statistics
show vrrp statistics interface IFNAME
show vrrp statistics interface IFNAME(<1-255>)
show track
show running-config vrrp
show vlan summary
show vlan
show vlan <1-4094>
show vlan port IFNAME
show dhcp-relay
show ip helper-address {interface (IFNAME A.B)}
show dhcp-relay bootp-gateway {interface (IFNAME A.B)}
show ip forward-protocol udp {interface (IFNAME A.B)}
clear udld statistics {interface IFNAME}
show udld
show udld interface IFNAME
show running-config interface tunnel
show interface tunnel {brief}
show environment temperature

show environment temperature detail
top cpu
top memory
show system resource-utilization
show system resource-utilization daemon WORD
show system resource-utilization module SLOT-NUMBER
show system
show environment
show clock
show tech
show tech local-file
show ipv6 ospfv3 neighbors A.B.C.D interface IFNAME detail all-vrfs
show ipv6 ospfv3 neighbors A.B.C.D interface IFNAME detail {vrf WORD}
show ipv6 ospfv3 [<1-63>] neighbors A.B.C.D all-vrfs
show ipv6 ospfv3 [<1-63>] neighbors A.B.C.D {vrf WORD}
show ipv6 ospfv3 [<1-63>] neighbors A.B.C.D detail all-vrfs